
■AUTOMATIC LIGHT CONTROL SYSTEM

When the light control switch is in the AUTO position, the light control sensor detects the ambient light level and automatically turns the headlights, taillights, parking lights, and license plate lights ON or OFF accordingly.

- This system is controlled by the Main Body ECU (Instrument Panel Junction Block).

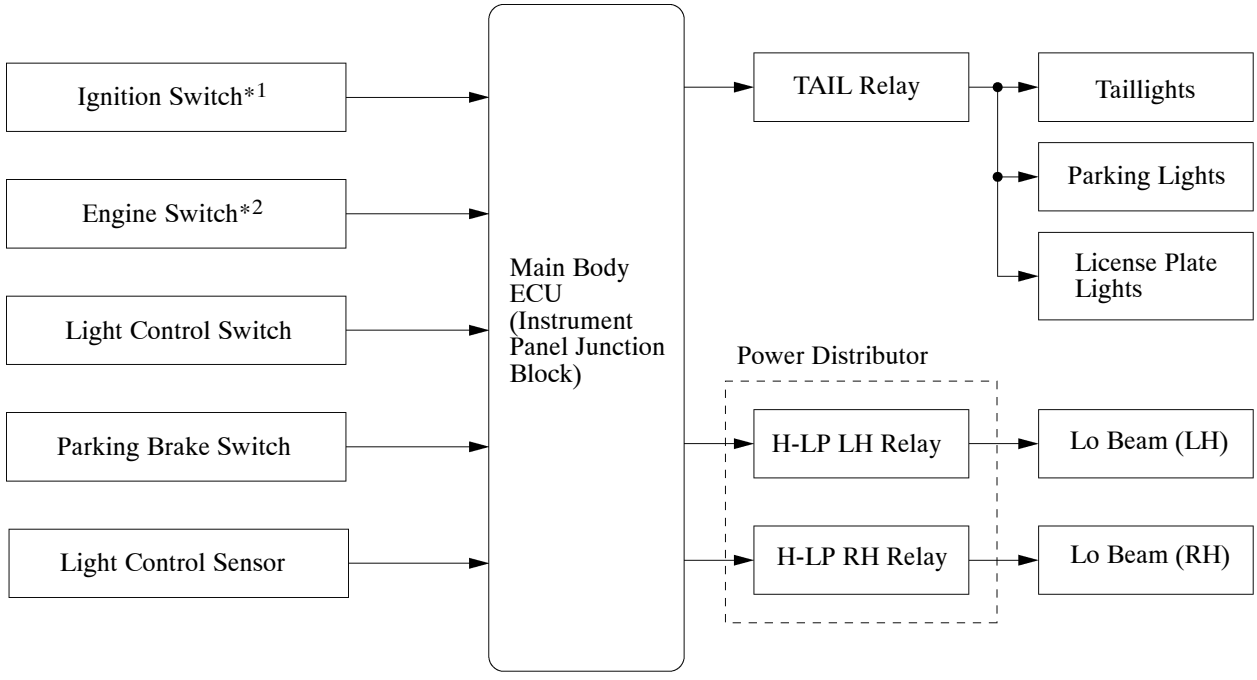

*1: Models without Smart Entry and Start System
*2: Models with Smart Entry and Start System

06J0BE50C

BE