
■ LIGHT AUTO TURN-OFF SYSTEM

A light automatic turn-off system is used to prevent forgetting to turn off for the exterior lights (headlights, taillights, parking lights, license plate lights).

- This system is controlled by the Main Body ECU (Instrument Panel Junction Block).
- This system has the following functions.

Function	Outline
Driver's Door-linked Function	The exterior lights automatically turn off when all of the following conditions have been met: • The ignition/engine* switch is in the OFF or ACC position. • The driver's door is closed and then opened. • The light control switch is in the TAIL or HEAD position.
Door Control Transmitter-linked Function	The exterior lights turn off immediately when the delay function is active and the following condition has been met: • The "LOCK" button of the door control transmitter or key is pushed twice within 3 seconds.

*: Models with Smart Entry and Start System

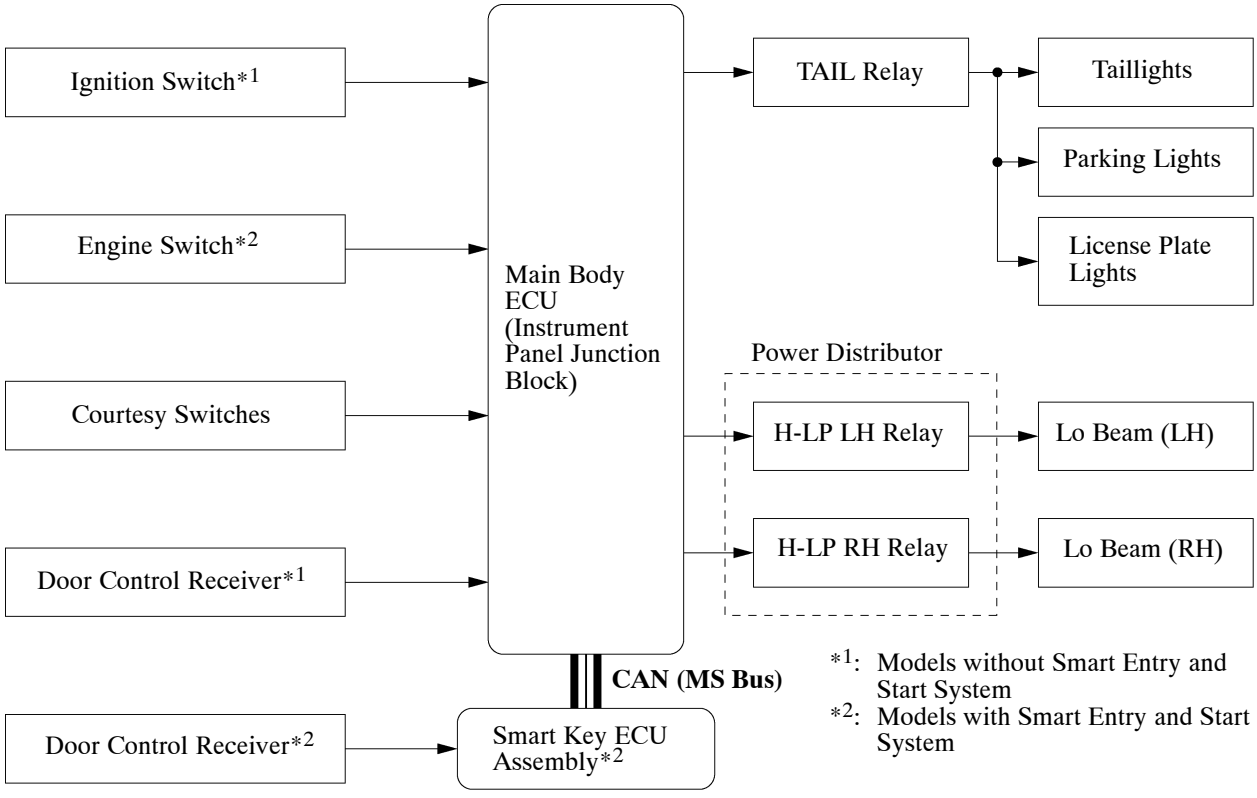

06J0BE51C