
■ DIAGNOSIS

If the Center Airbag Sensor Assembly detects a malfunction in the SRS airbag system, the Center Airbag Sensor Assembly stores the malfunction data in memory, in addition to illuminating the SRS warning light.

- The Center Airbag Sensor Assembly outputs the malfunction data, 5-digit DTCs (Diagnostic Trouble Codes) or 2-digit DTCs, to the intelligent tester or the SRS warning light.

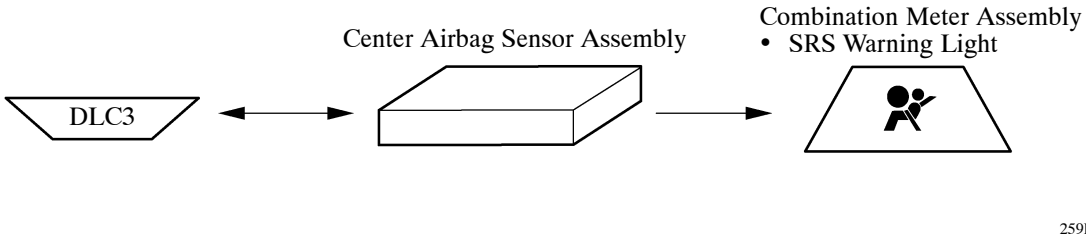

- The 5-digit DTCs can be read after connecting an intelligent tester to DLC3.
- The 2-digit DTCs can be read by connecting the SST (09843-18040) to the TC and CG terminals of DLC3 and reading the blinking of the SRS warning light.
- If the SRS airbag deploys, the Center Airbag Sensor Assembly will turn ON the SRS warning light. However, different from the ordinary diagnosis function, a DTC will not be stored. The SRS warning light cannot be turned OFF. It is necessary to replace the Center Airbag Sensor Assembly with a new one.