

SAFETY

SRS Airbag System

- The SRS (Supplemental Restraint System) driver and front passenger airbags are used to help reduce shocks to the head and chest of the front passenger in the event of frontal impact collision and as supplements to the seat belts.
- The SRS knee airbag are positioned in the lower part of the instrument panel on the driver side to receive the impact of the driver lower body when the driver shift forward in the event of a frontal collision, contributing to prevention of secondary impact to the lower body.
- The SRS side and curtain shield airbags are used to help reduce shocks to the head and chest of the front passenger, 2nd-row outer passenger, or 3rd-row passenger in the event of side/side rear impact collision.

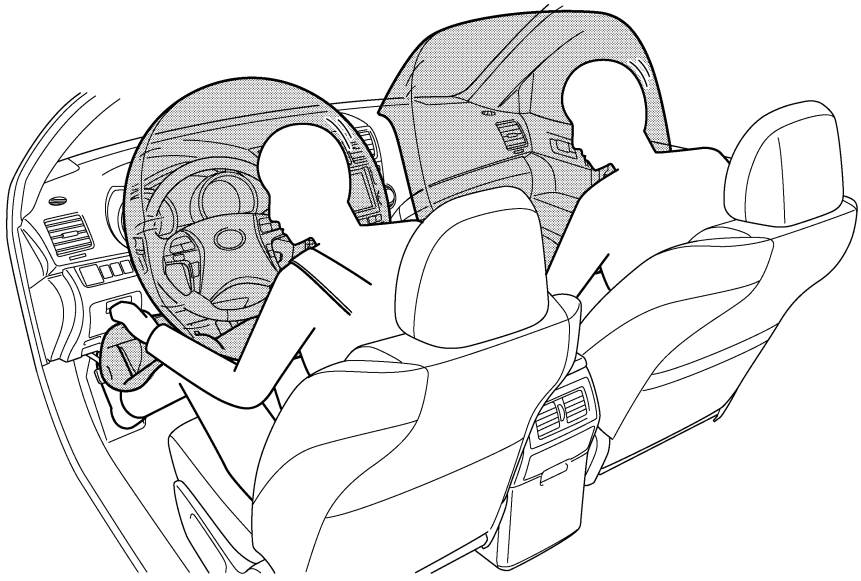

06J0MO55Z

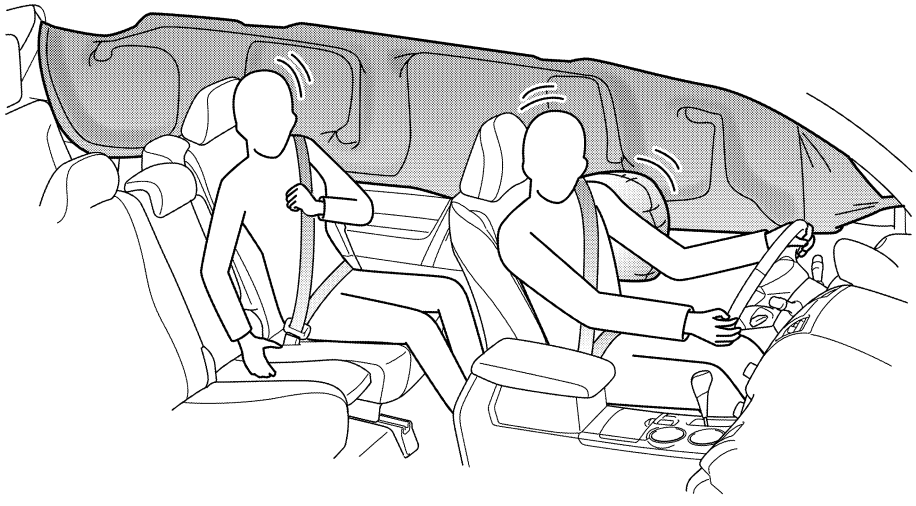

06J0MO56Z