
VSC with EPS-VSC Integrated Control

The VSC with EPS-VSC integrated control integrally controls engine output and braking in coordination with steering control to ensure vehicle running, cornering and stopping performance for active safety.

- In the past, ABS, Brake Assist, TRC, and VSC acted independently, control starts at the limit of vehicle running, cornering and stopping performance.
- VSC with EPS-VSC integrated control, however, begins to control earlier in order to ensure that the vehicle does not exceed its behavioral limits.

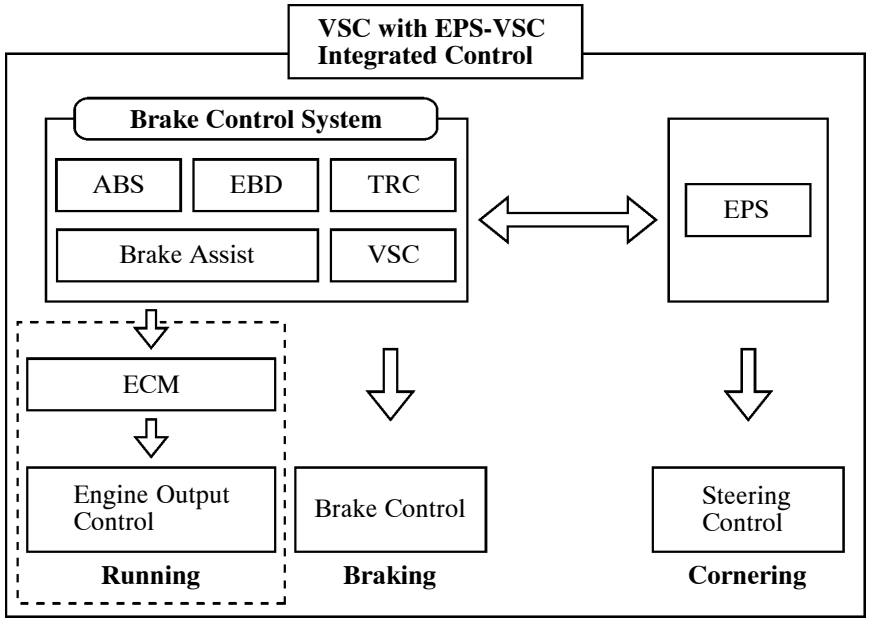

0151CH09C