
ROOF SIDE INNER REAR PANEL (ASSY)

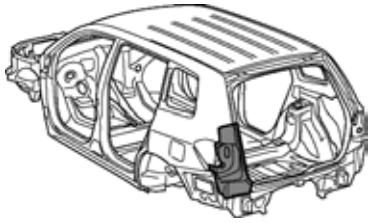

F28420A


With the quarter outer panel and body lower back panel removed.

Symbol meaning

: Remove Weld Points

F28420B

REMOVAL

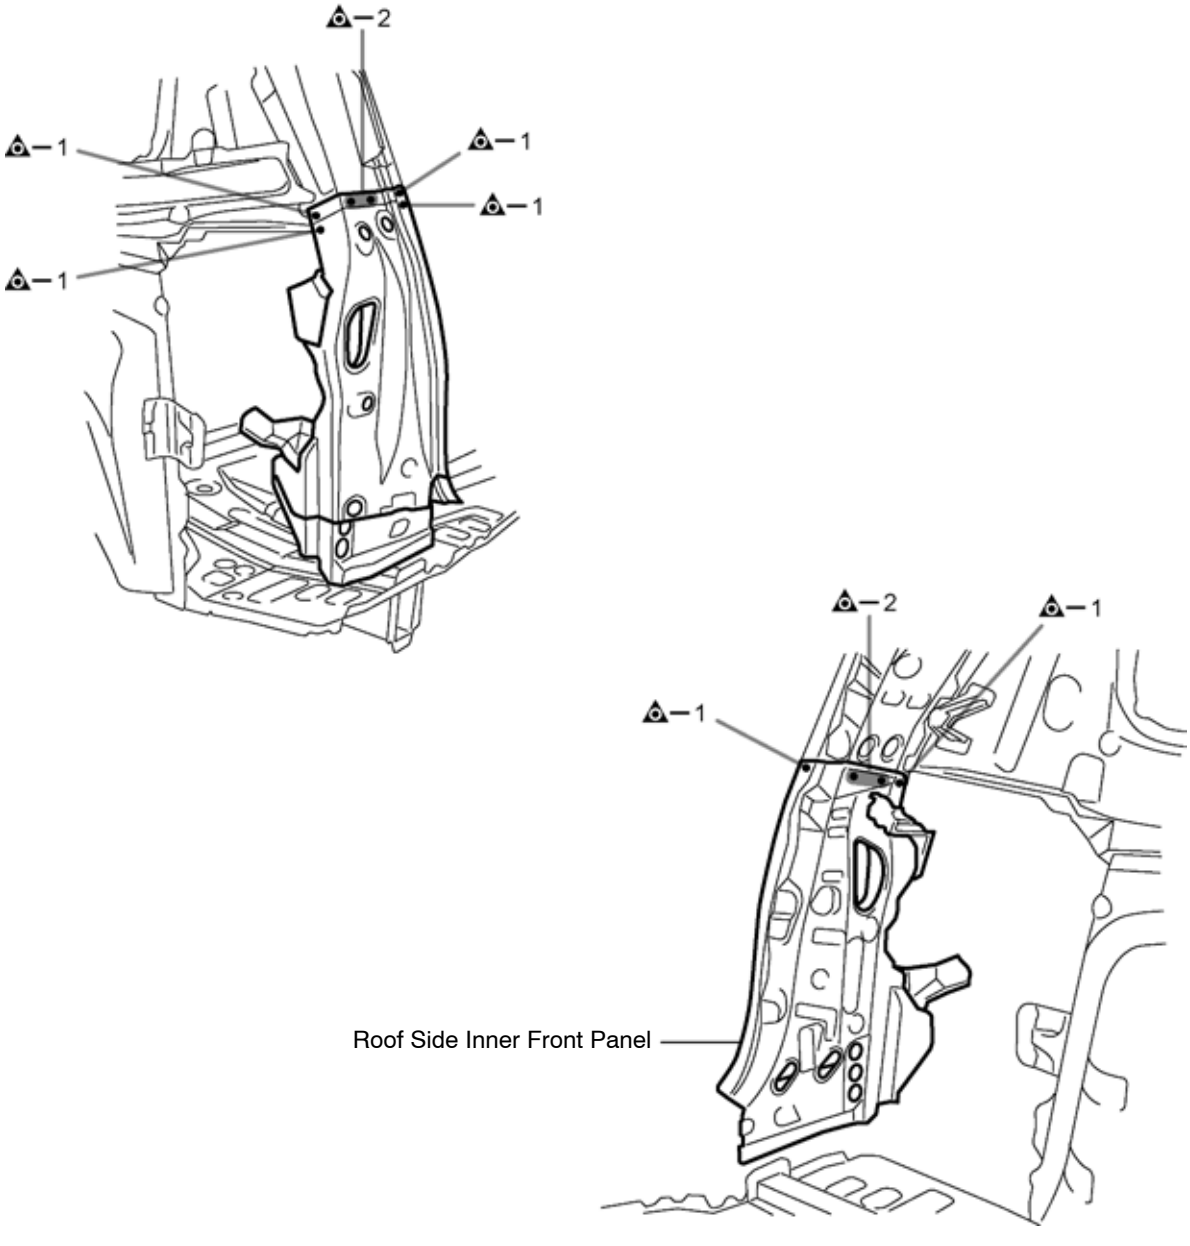

F28420

REMOVAL POINT


1 Remove the roof side inner front panel at the same time.

Symbol meaning

⊙ : Spot Weld ◘ : Plug Weld

F28421B

INSTALLATION

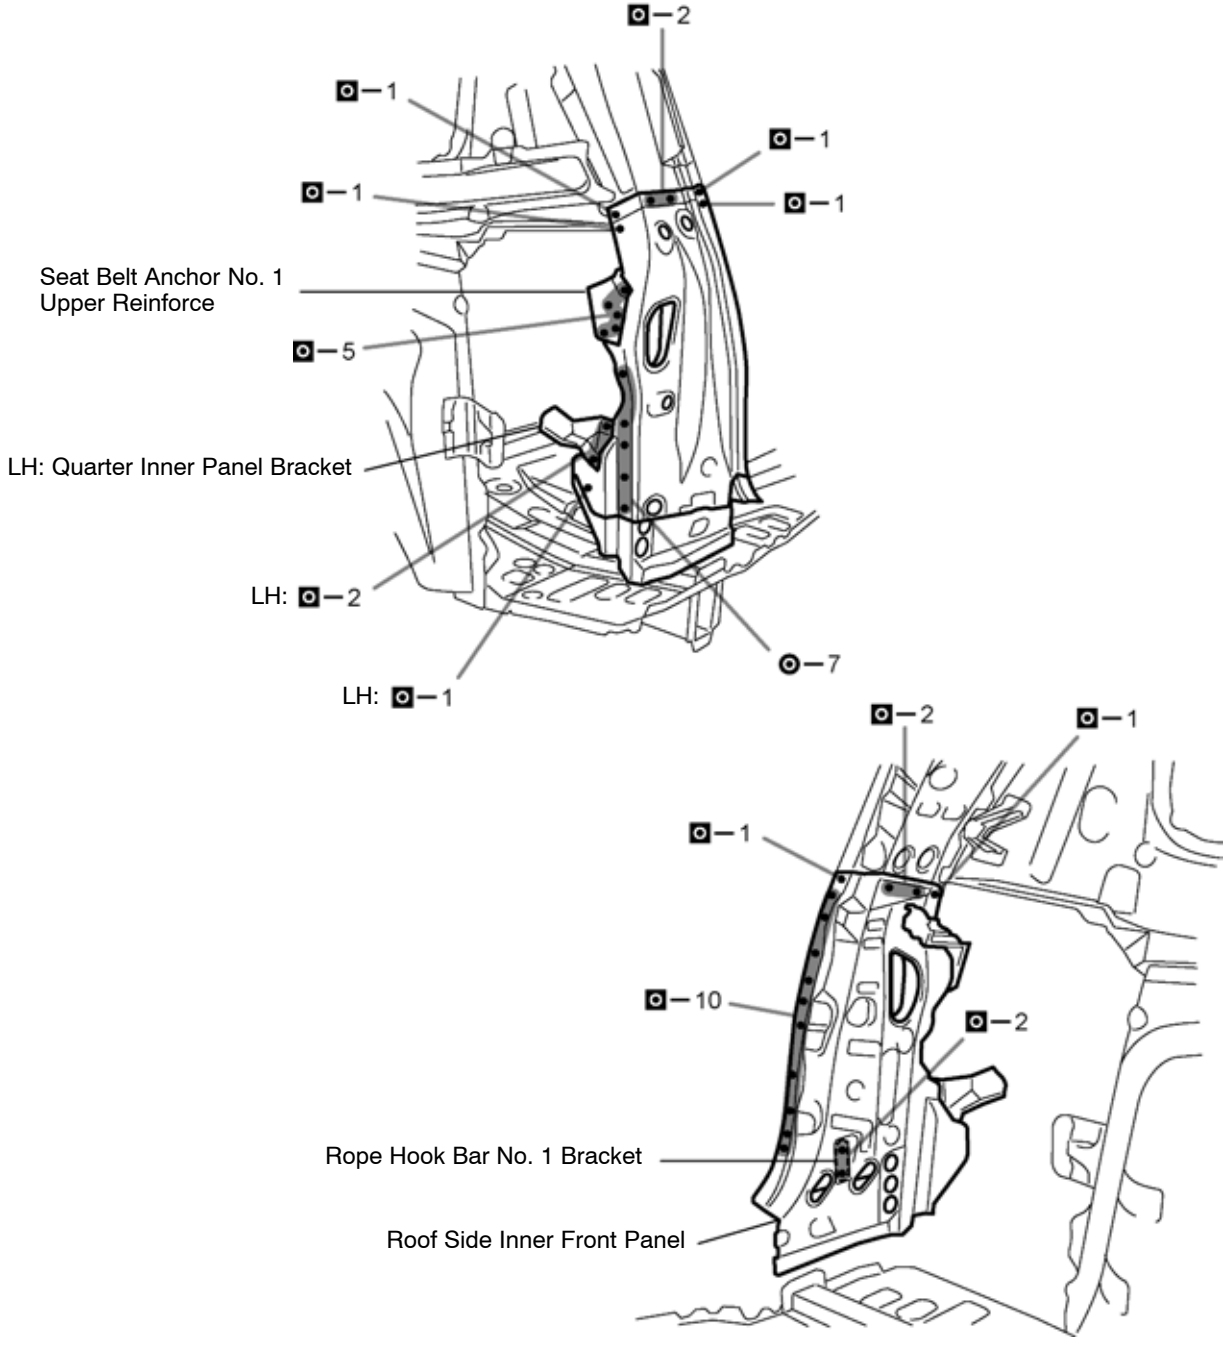

F28421

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.