7. PRECAUTIONS FOR SRS AIRBAG SYSTEM

(a) HANDLING OF A VEHICLE THAT HAS BEEN DAMAGED IN A COLLISION

(1) Refer to the TOYOTA Repair Manual for the SRS airbag system inspection procedures.


(2) When using an electric welder, first remove all airbags and seat belt pretensioners.

(3) If impacts are likely to occur to the front airbag sensors, side airbag sensors, rear airbag sensors or seat position sensor, remove each sensor as necessary beforehand.

(4) Do not allow the front airbag sensors, side airbag sensors, rear airbag sensors or seat position sensor to become heated to high temperatures.


(5) Check the wire harnesses and connectors for damage and/or melting, as some areas of the airbags and seat belt pretensioners may heat up to several hundred degrees when they operate.

for USA:

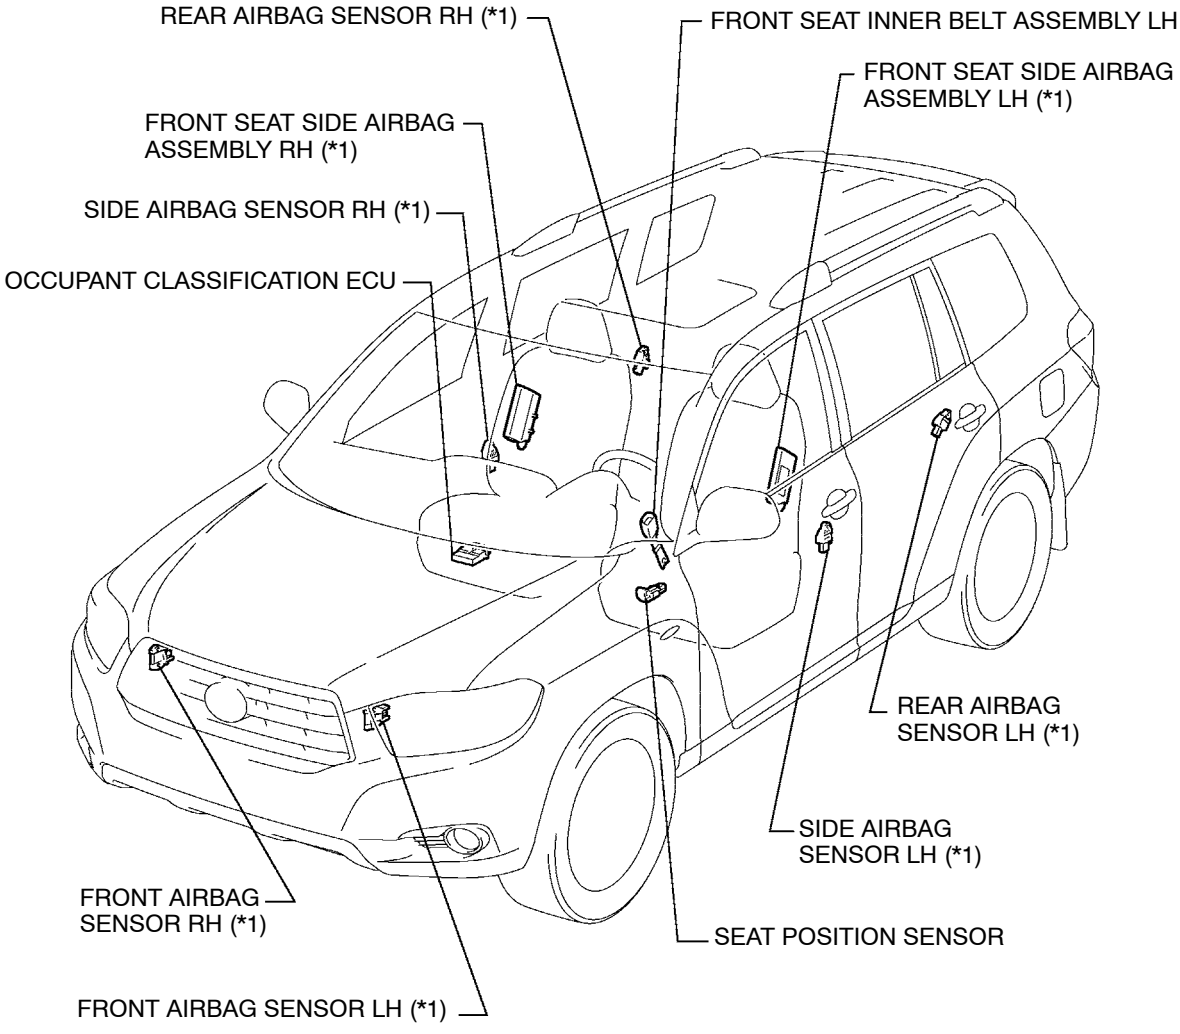


*1: w/ FRONT SEAT SIDE AIRBAG CURTAIN SHIELD AIRBAG

C166945

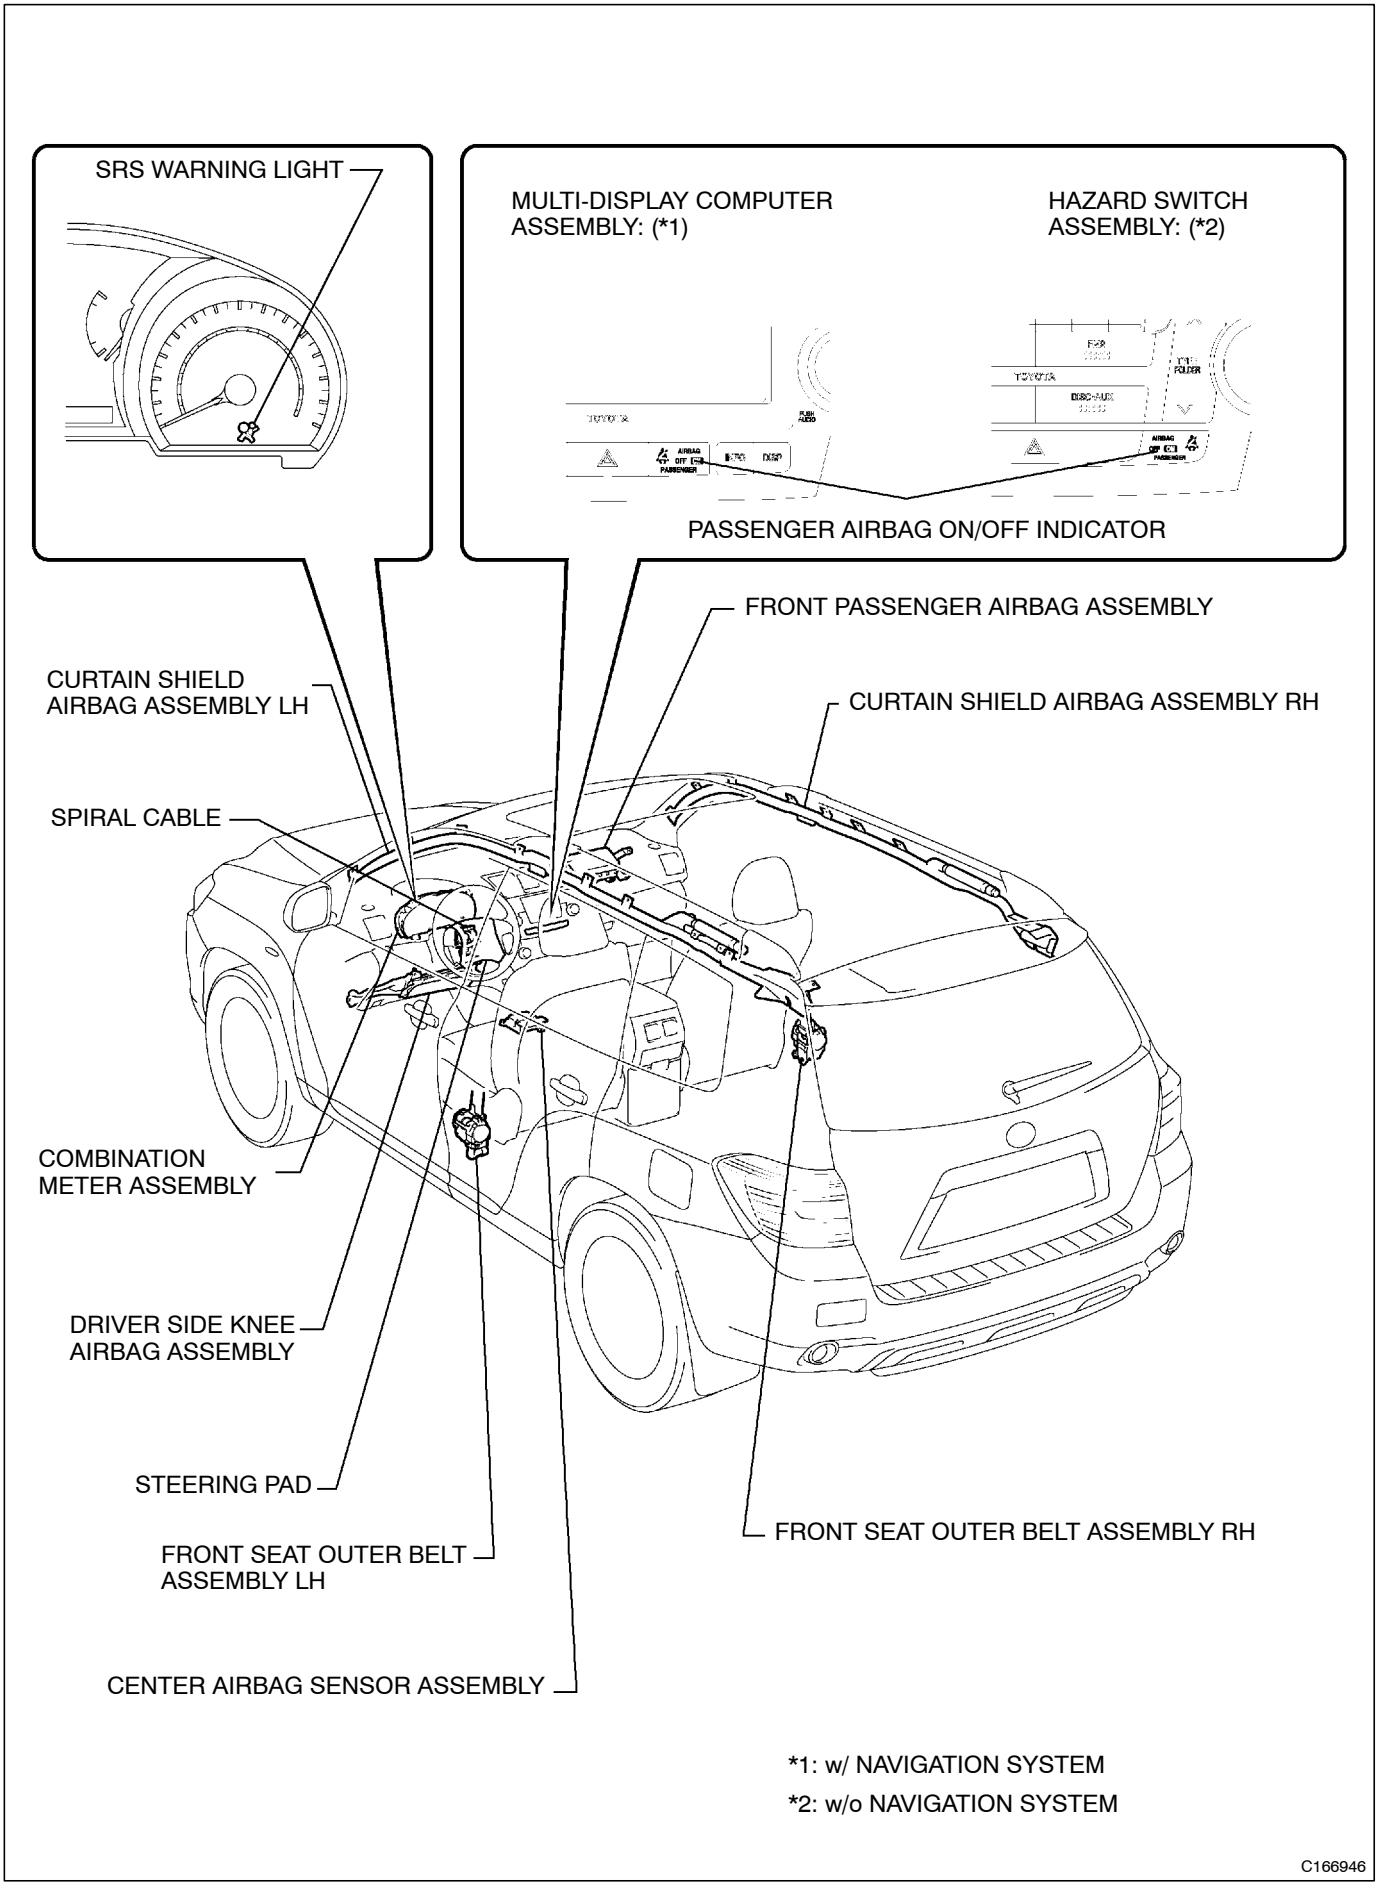
SRS WARNING LIGHT
MULTI-DISPLAY COMPUTER ASSEMBLY: (*1)
HAZARD SWITCH ASSEMBLY: (*2)
PASSENGER AIRBAG ON/OFF INDICATOR
FRONT PASSENGER AIRBAG ASSEMBLY
CURTAIN SHIELD AIRBAG ASSEMBLY LH
CURTAIN SHIELD AIRBAG ASSEMBLY RH
SPIRAL CABLE
COMBINATION METER ASSEMBLY
DRIVER SIDE KNEE AIRBAG ASSEMBLY
STEERING PAD
FRONT SEAT OUTER BELT ASSEMBLY RH
FRONT SEAT OUTER BELT ASSEMBLY LH
CENTER AIRBAG SENSOR ASSEMBLY
*1: w/ NAVIGATION SYSTEM
*2: w/o NAVIGATION SYSTEM
C166946

Except USA:

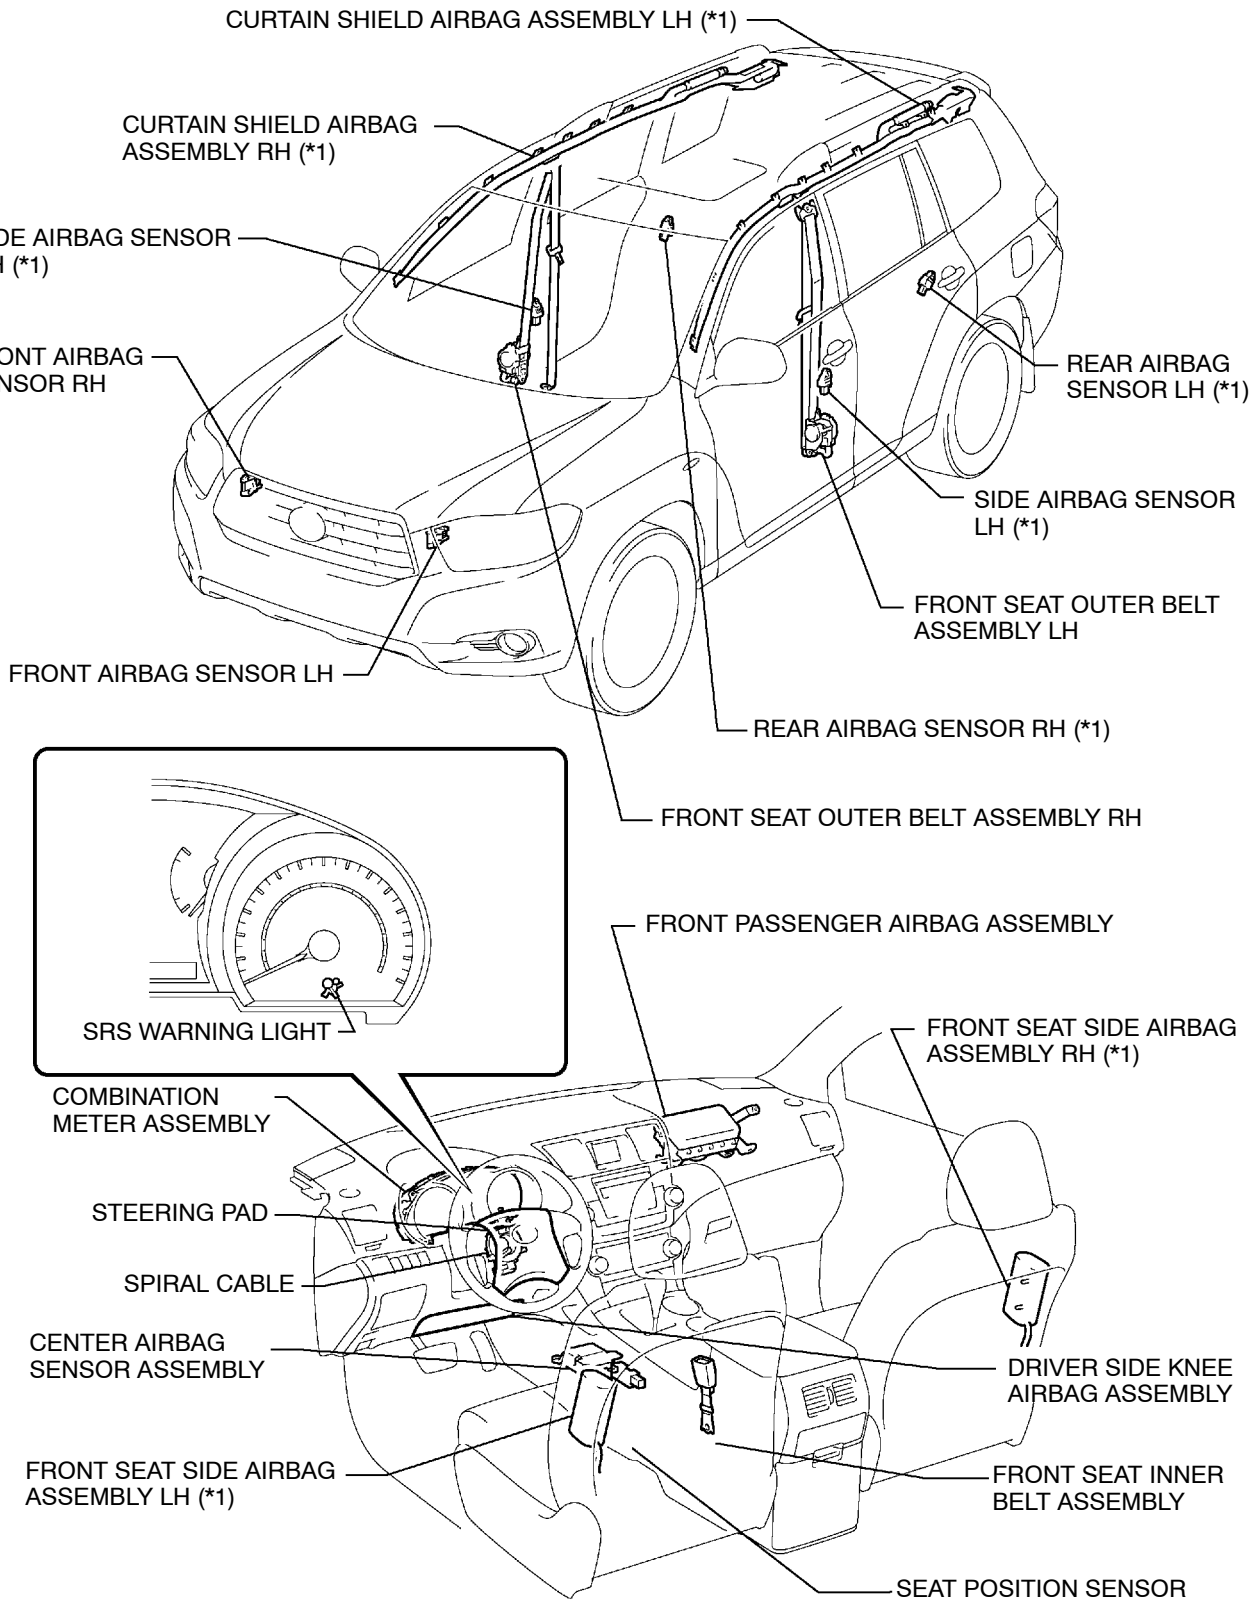

*1: w/ FRONT SEAT SIDE AIRBAG AND CURTAIN SHIELD AIRBAG

C166947