

2. NOTICE ABOUT VEHICLE CONDITION WHEN JACKING UP VEHICLE


(a) NOTICE FOR USING JACK AND SAFETY STAND

for 2WD:

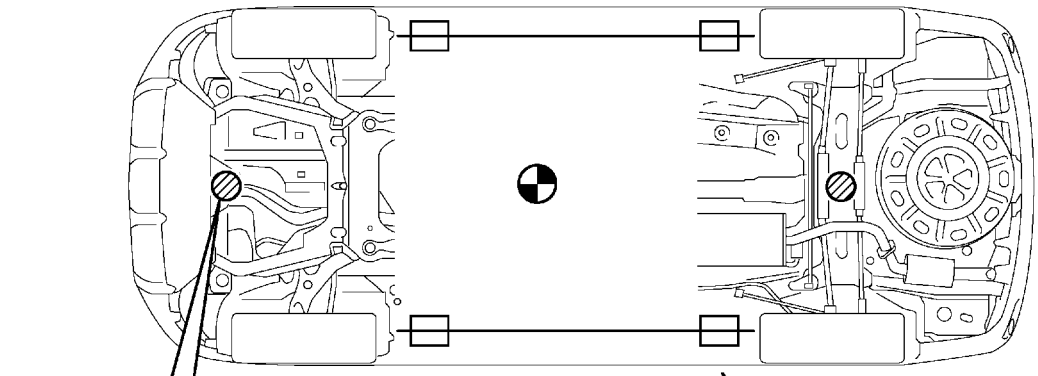


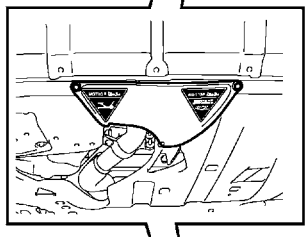


NOTICE :
Remove the metal service cover before jacking up the front of vehicle.

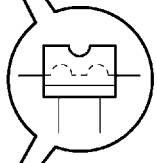

for 4WD:

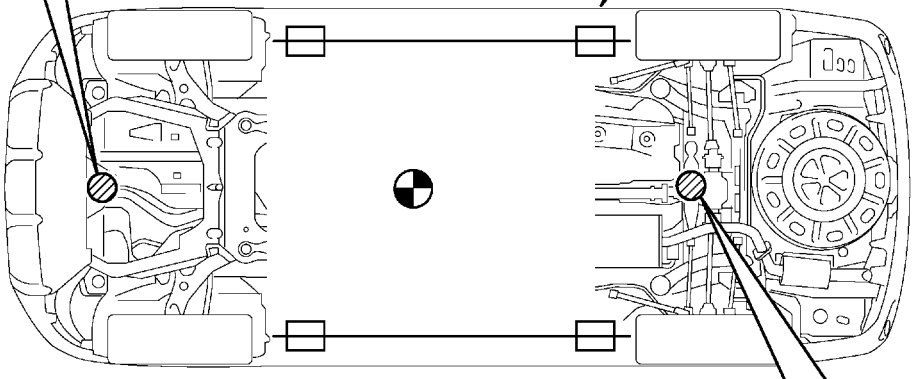

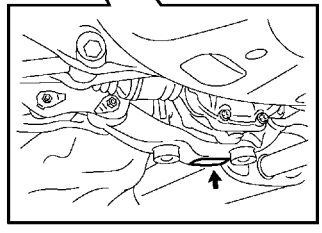

: JACK POSITION


: SUPPORT POSITION, PANTOGRAPH JACK POSITION

: CENTER OF VEHICLE GRAVITY (unloaded condition)

D102185


(b) NOTICE FOR USING SWING ARM TYPE LIFT OR PLATE TYPE LIFT

Swing Arm Type Lift:

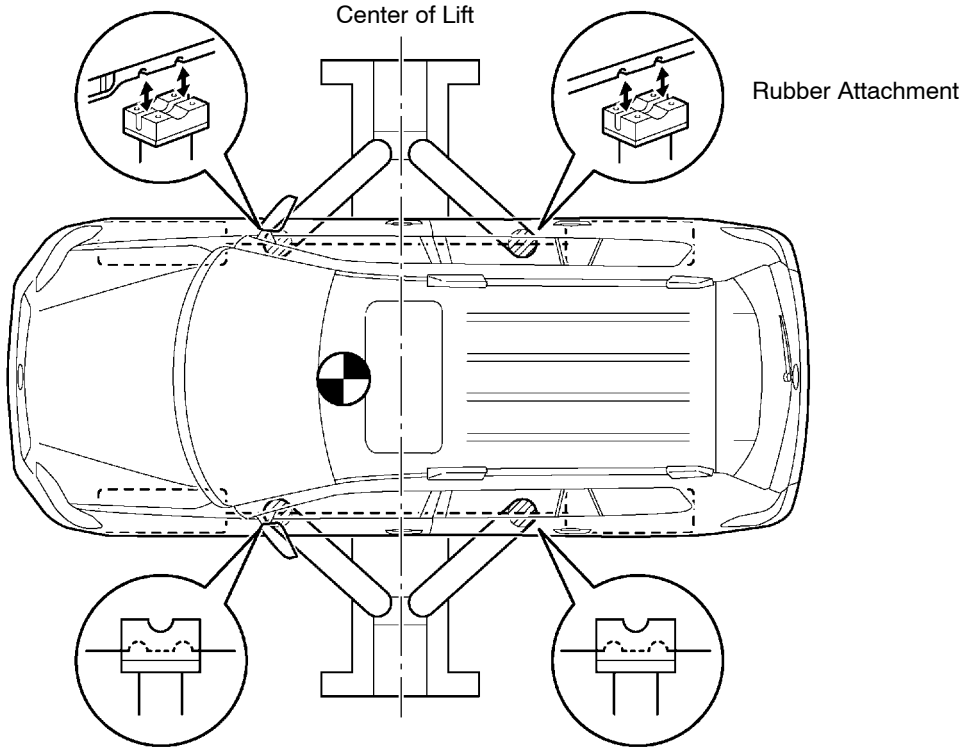


: CENTER OF VEHICLE GRAVITY (unloaded condition)

Plate Type Lift:

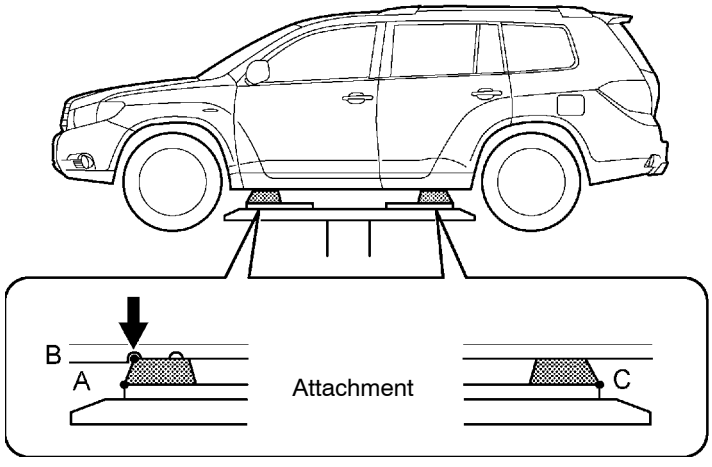

Attachment Dimensions

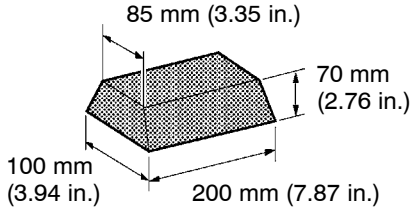

HINT:
Right and left set position
- Place the vehicle over the center of the lift.

Front and rear set position
- Align the cushion ends of he plate with the attachment lower ends (A and C).
- Align the attachment upper end (B) with the rocker flange front side notch.

D102015