# BODY PANEL SEALING AREAS

1 Be sure to apply body sealer to the body panel joints and door edges (tip of outer panel folded part), etc., to waterproof and rustproof them.

*HINT:*


*1) Apply degreasing agent to a clean cloth and clean the sealer application areas.*

*2) After removing the applied spot sealer from the sealer application areas using thinner or equivalent, rust-proof the areas by applying primer or equivalent. Then apply body sealer.*


*3) If sealer is unnecessarily applied to an area, apply degreasing agent to a clean cloth and clean off the sealer immediately.*

| | | | |
|---|---|---|---|
| ++++++++++ | Flat Finishing | ———— | No Flat Finishing |

**1. ENGINE COMPARTMENT**

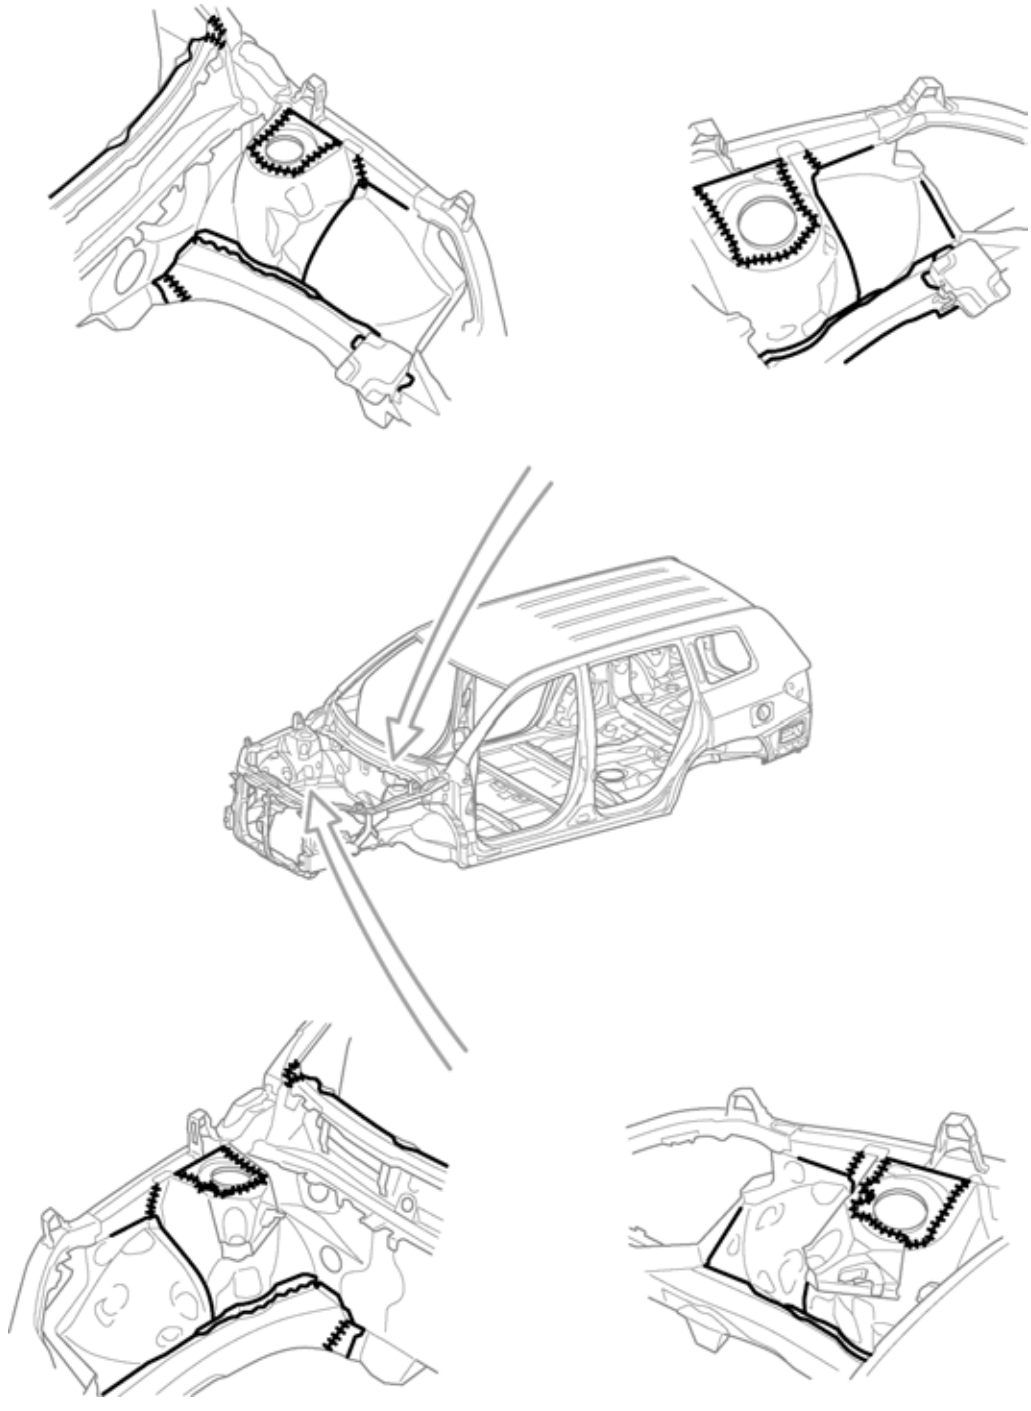


F28351

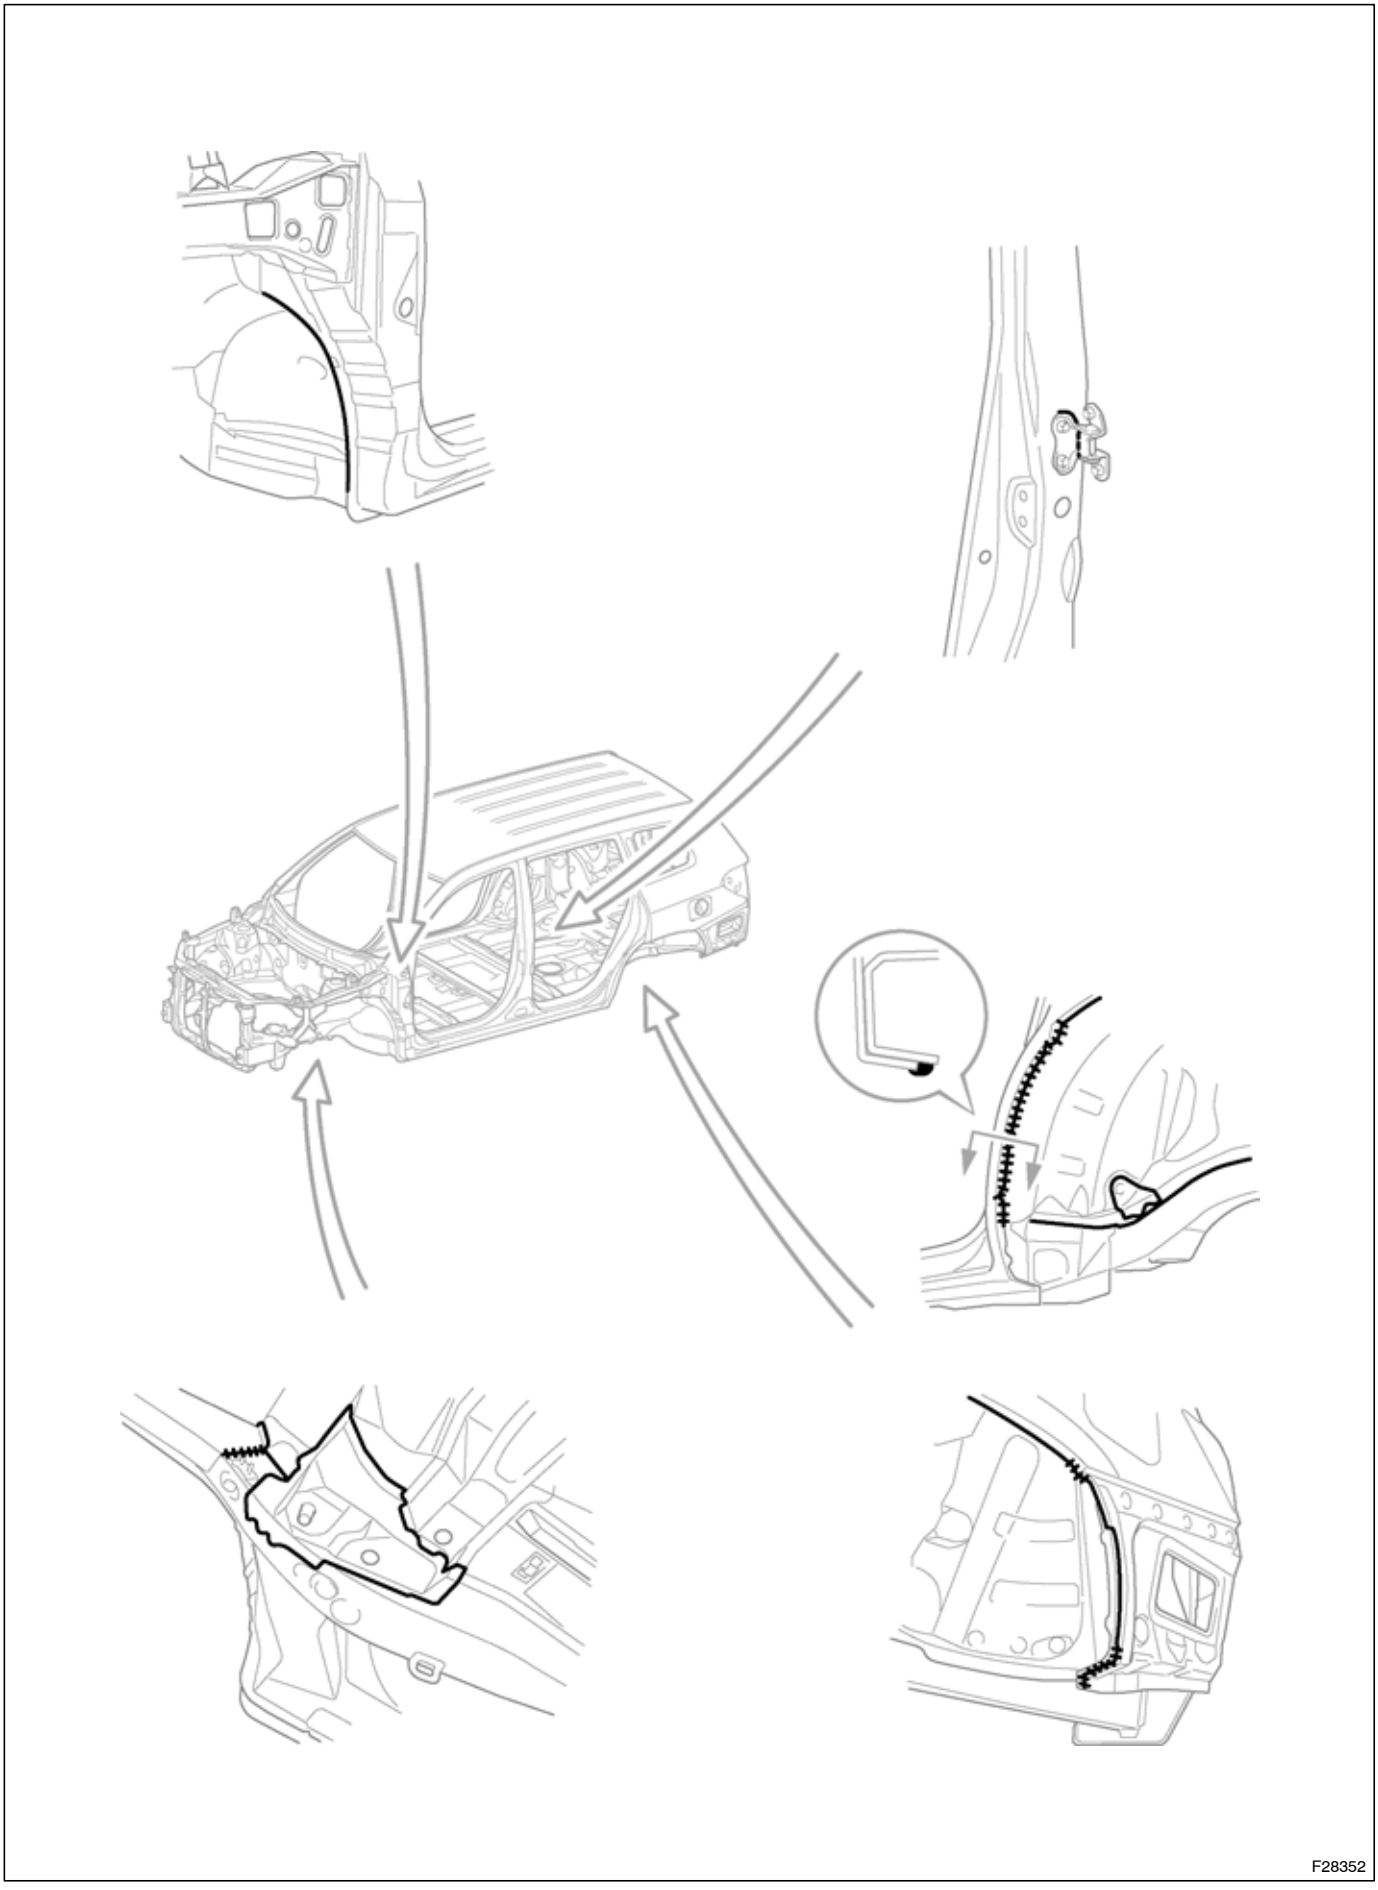


F28352

**2. INSIDE**

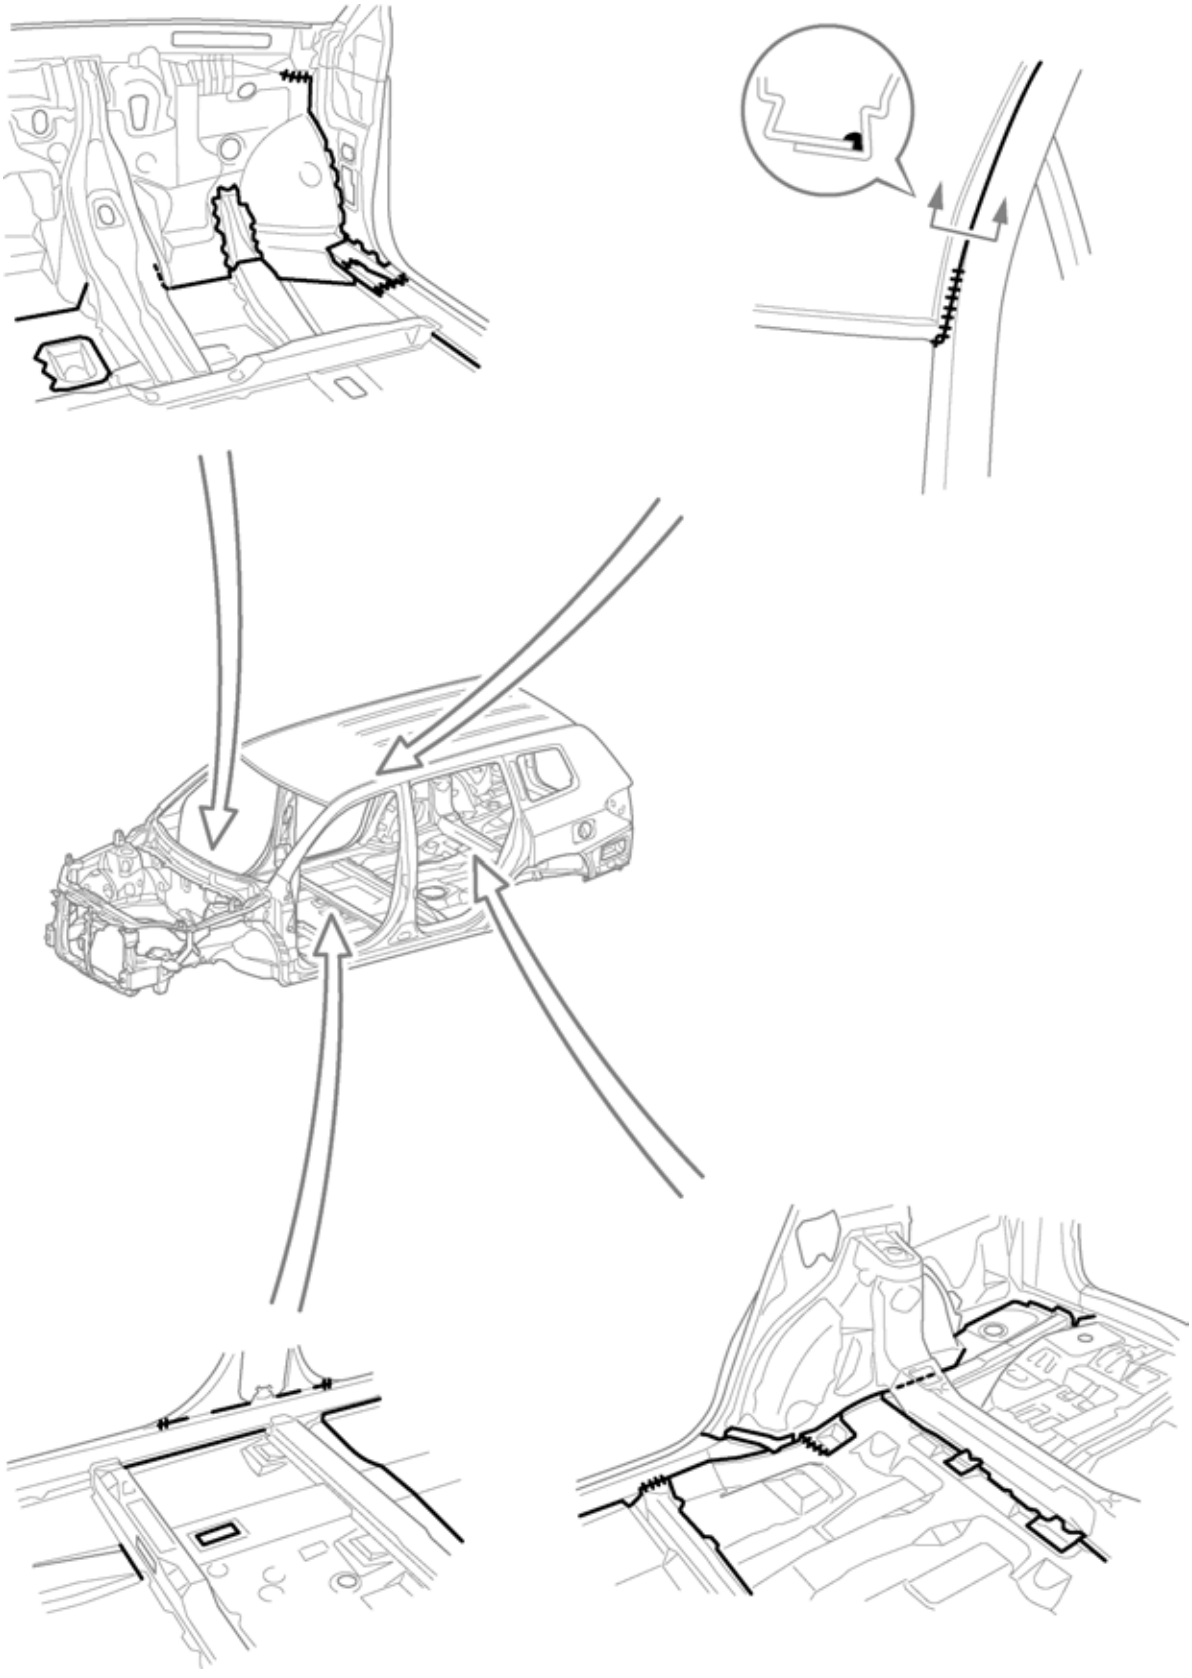


F28353

**3. OUTSIDE**

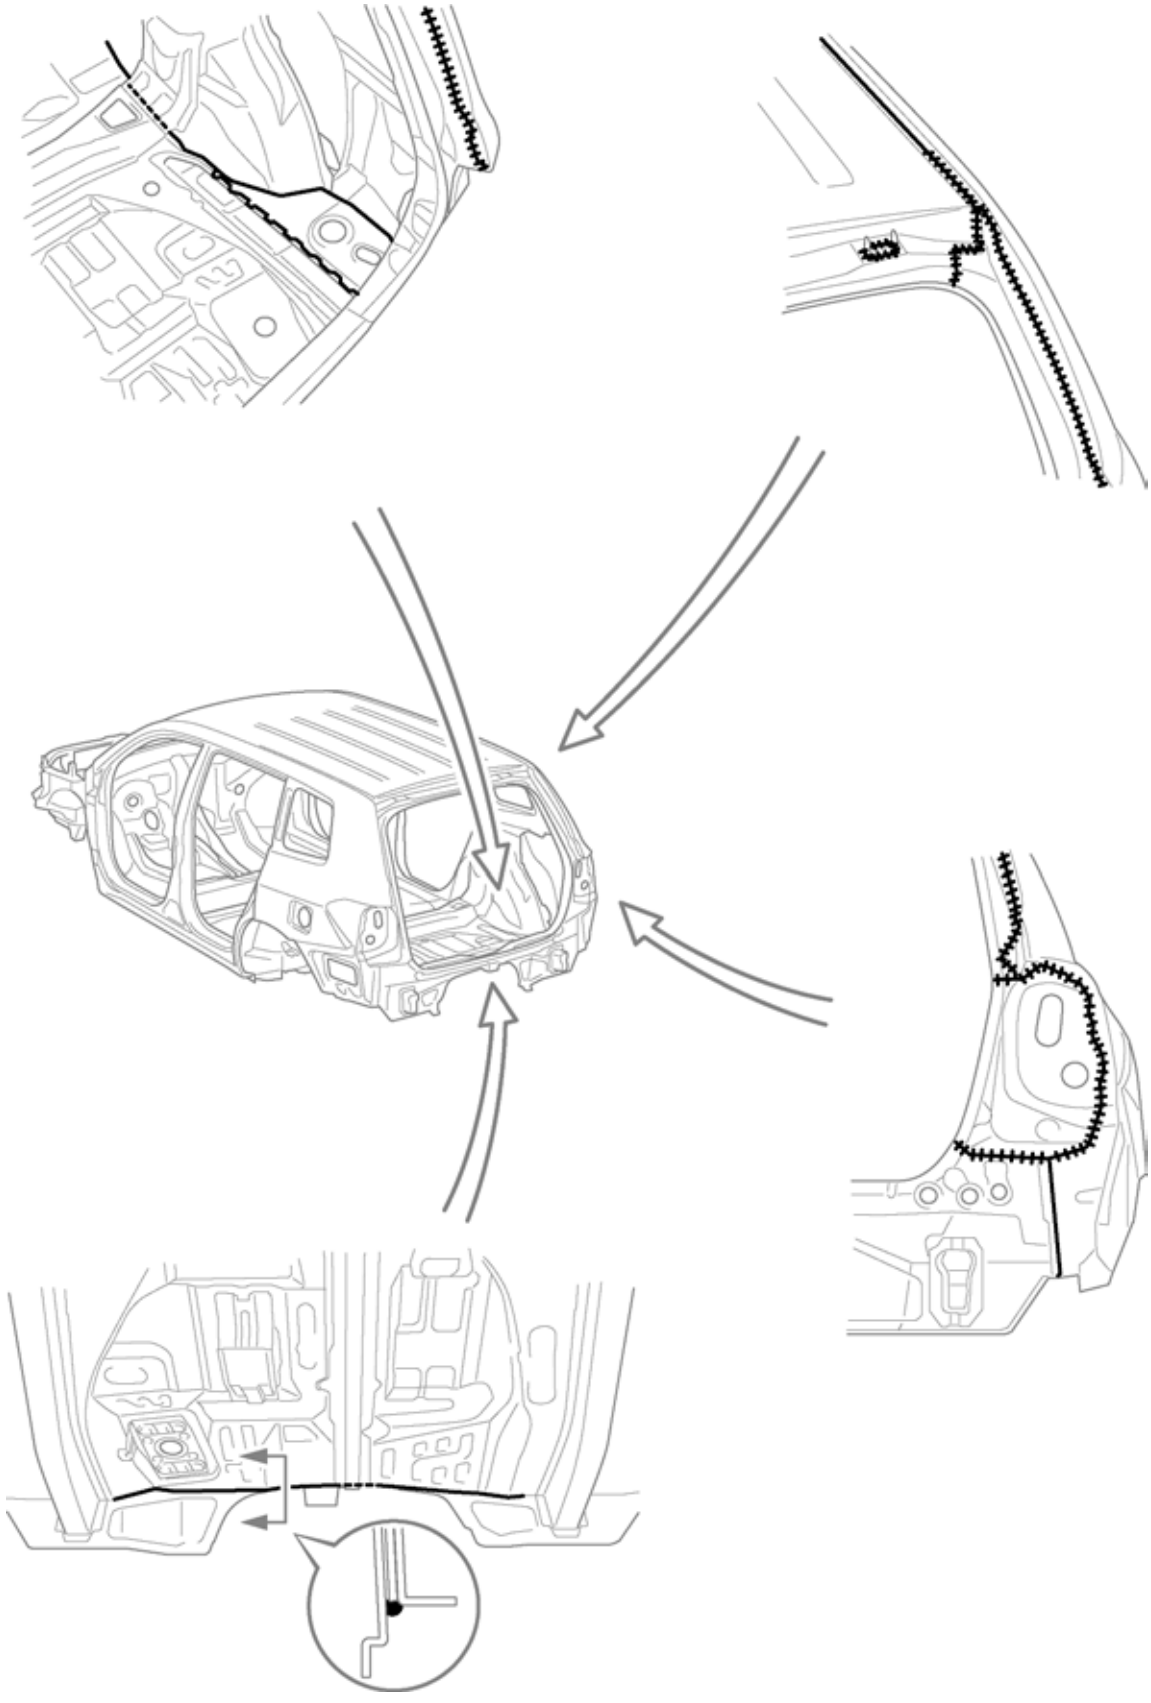


F28354

**4. DOOR PARTS**

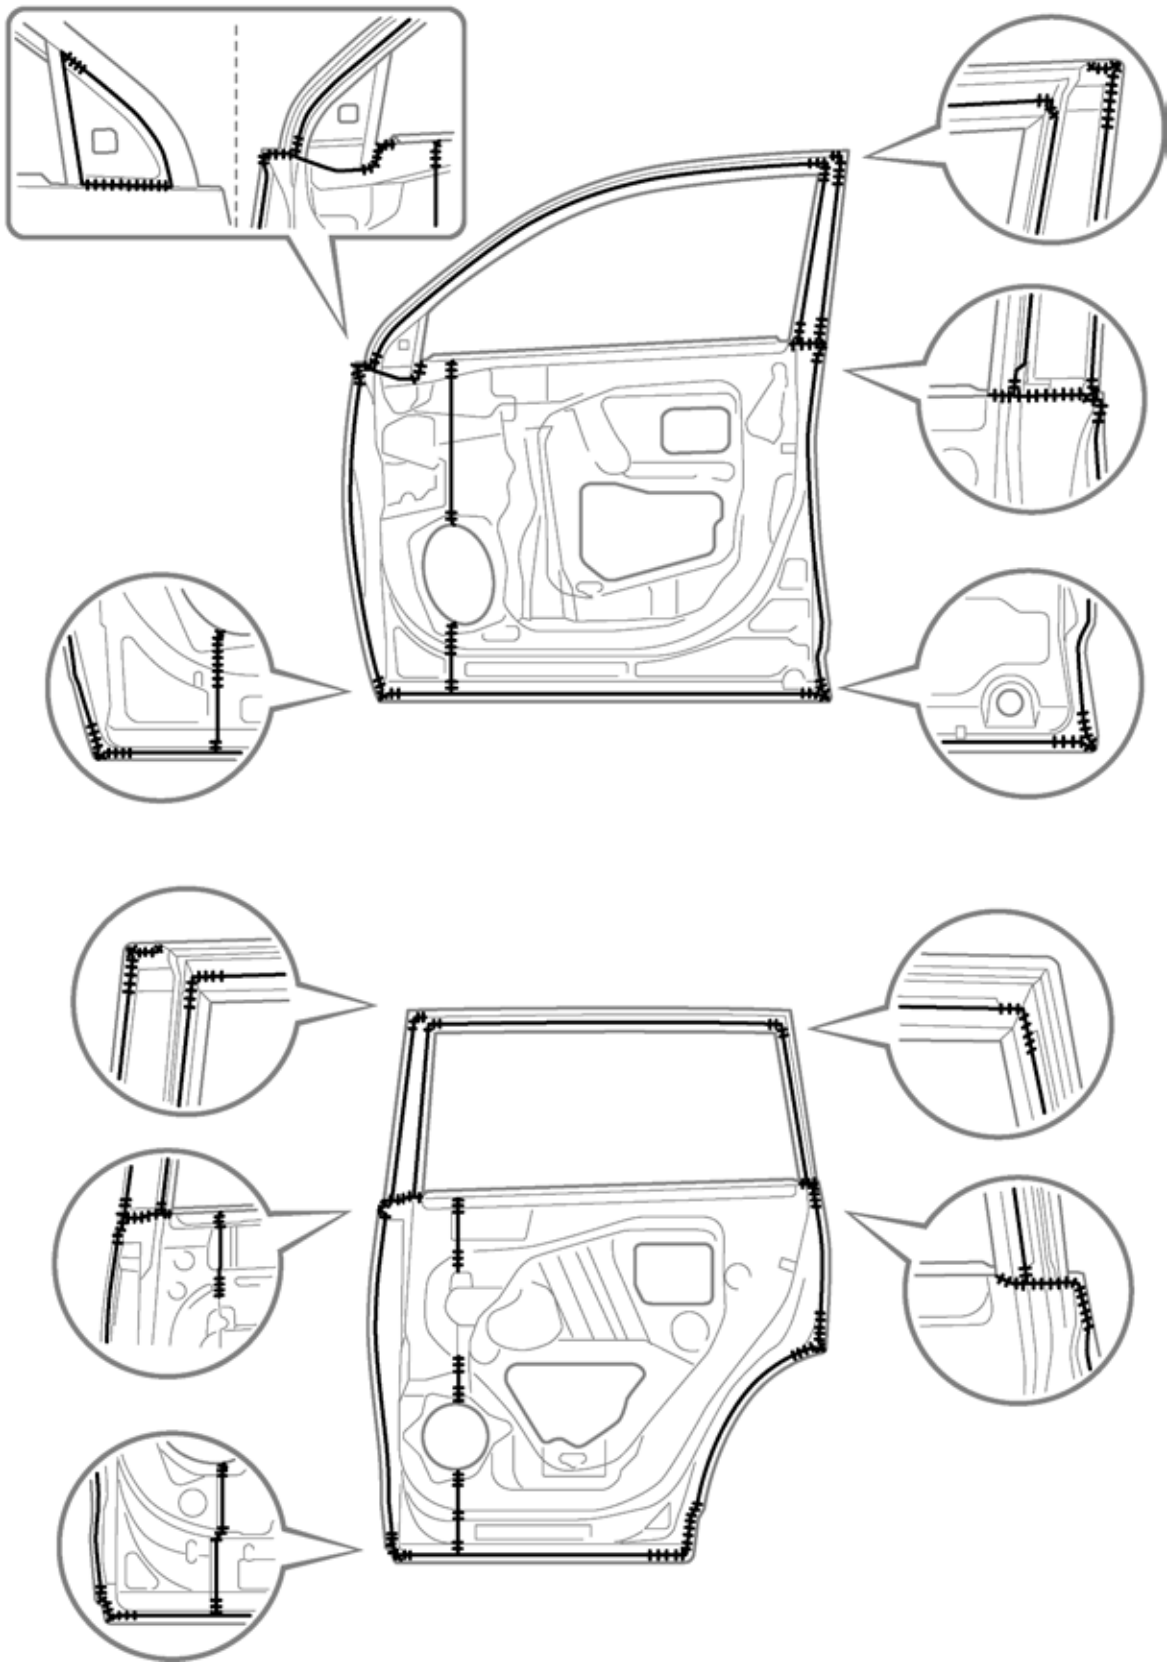

F28355

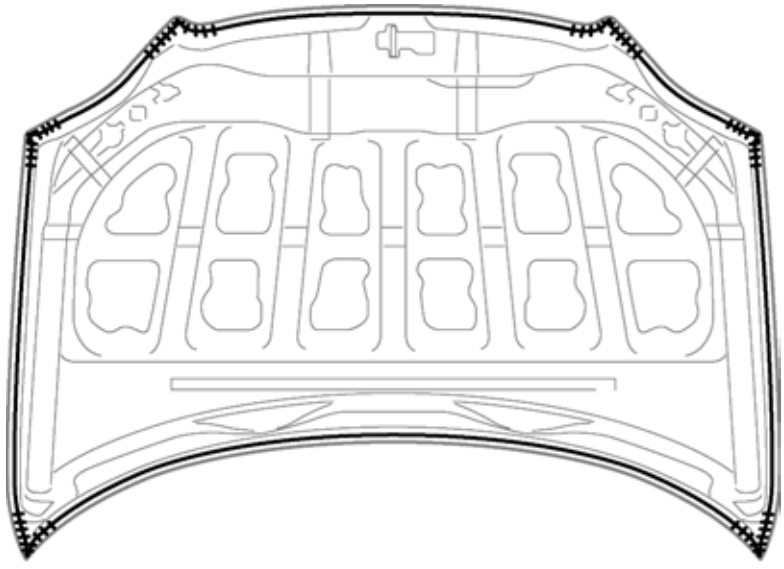



F28356