
■ DAYTIME RUNNING LIGHT SYSTEM

1. General


The daytime running light system is designed to automatically illuminate the headlights (dimmed Lo beam), during the daytime to keep the vehicle highly visible to other vehicles.

- This system is controlled by the Main Body ECU (Instrument Panel Junction Block). The Main Body ECU (Instrument Panel Junction Block) illuminates and dims the Lo beam with the duty control.
- This system is enabled when the conditions given below are met.
  - Ignition switch is ON. (Except Limited Grade)
  - Engine switch is ON. (Limited Grade only)
  - Parking brake switch is OFF.
  - Light control switch is not in the AUTO position (The DRL will operate until the automatic light control system illuminates the headlights.).
  - Light control switch is not in the DRL OFF. (U.S.A. models)
  - Engine speed signal is input (Engine Running Condition).
  - Lo beam is not ON.

2. System Diagram

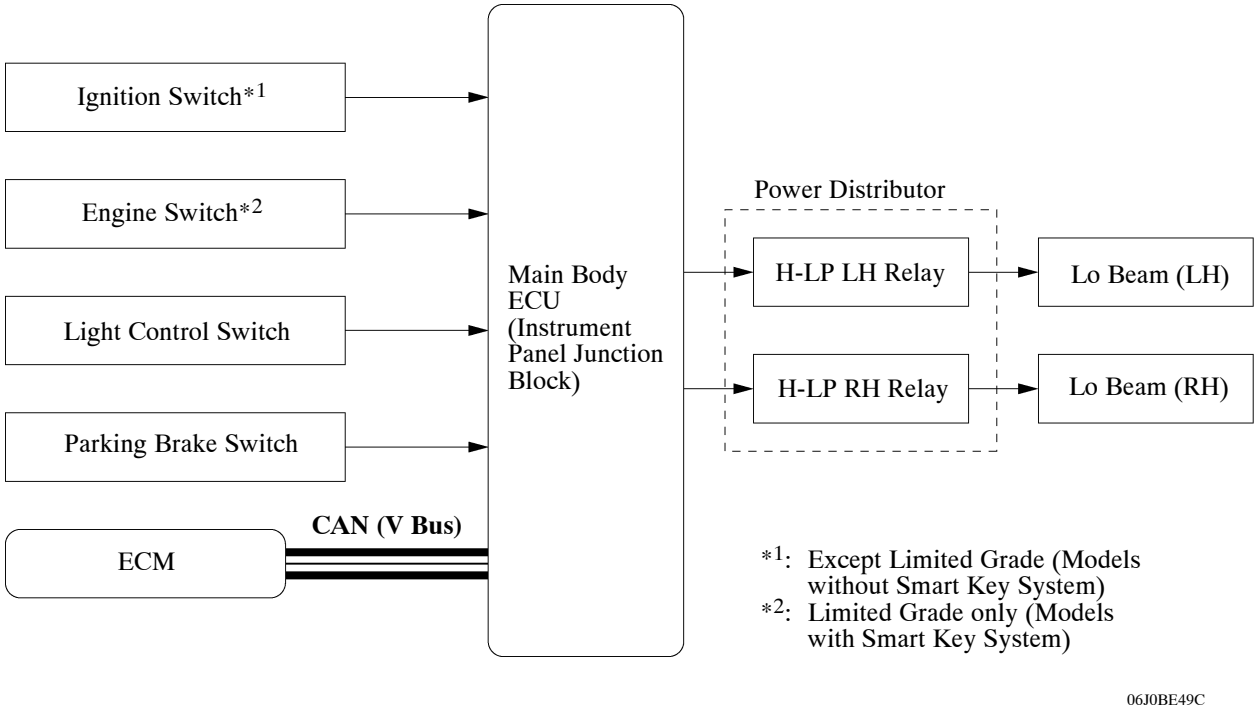


3. Layout of Main Components

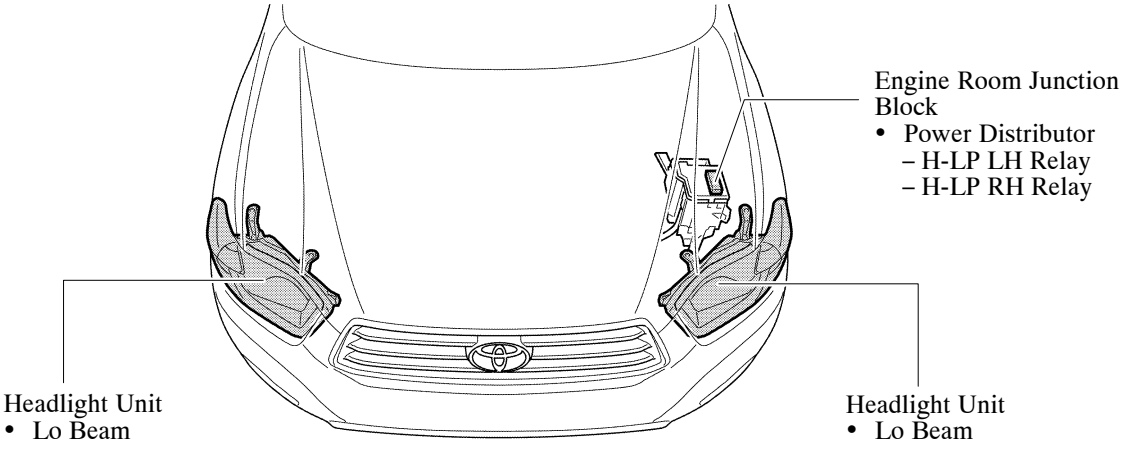

06J0BE23Z

Light Control Switch with Automatic Light Control System

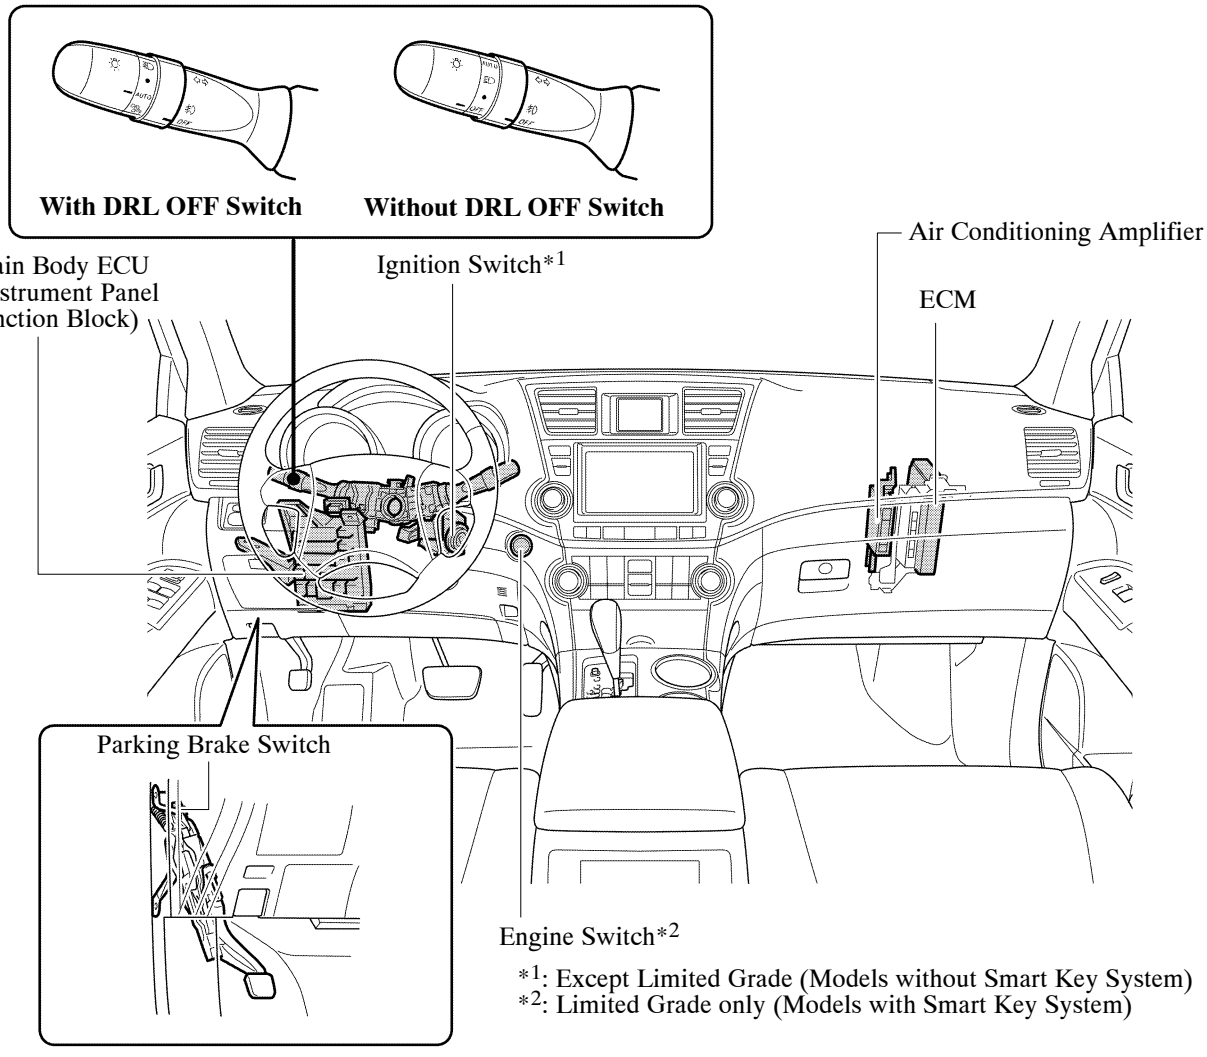

*1: Except Limited Grade (Models without Smart Key System)
*2: Limited Grade only (Models with Smart Key System)

06J0BE24Z

BE