
■ AUTOMATIC LIGHT CONTROL SYSTEM

When the light control switch is in the AUTO position, the light control sensor detects the ambient light level and automatically turns the headlights, taillights, parking lights, and license plate lights ON or OFF accordingly.

- This system is controlled by the Main Body ECU (Instrument Panel Junction Block).

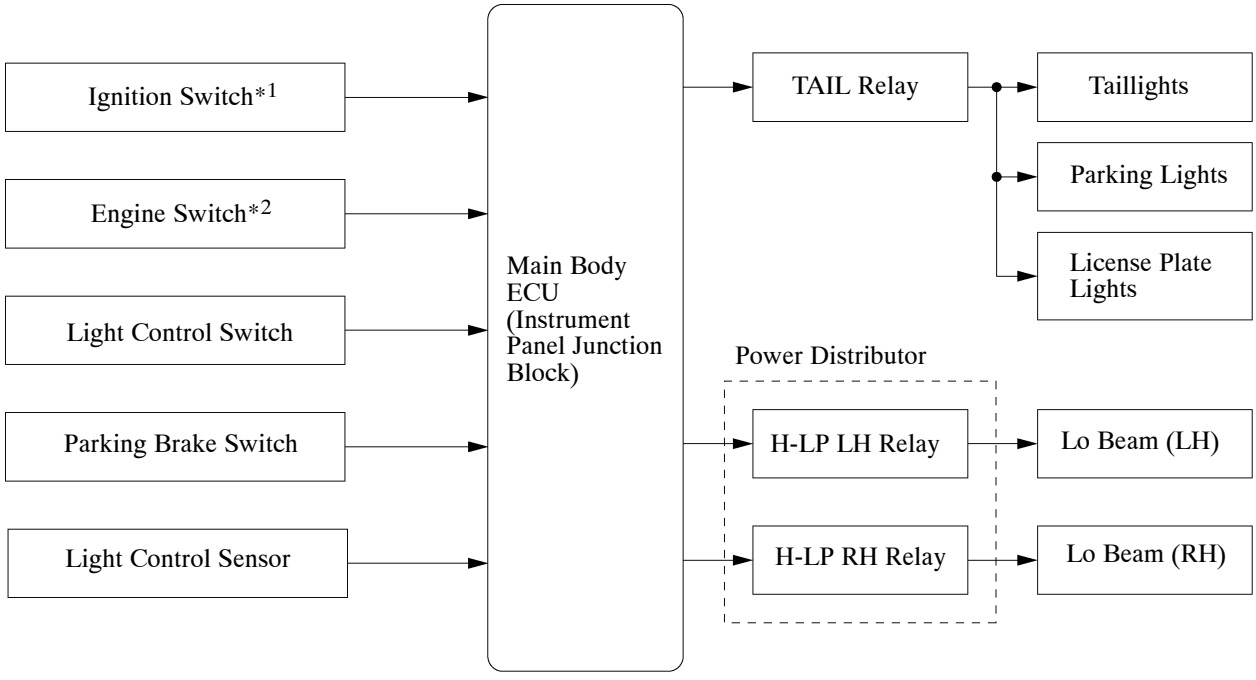

*1: Except Limited Grade (Models without Smart Key System)
*2: Limited Grade only (Models with Smart Key System)

06J0BE50C