
■LIGHT AUTO TURN-OFF SYSTEM

A light automatic turn-off system is used to prevent forgetting to turn off for the exterior lights (headlights, taillights, parking lights, license plate lights).

- This system is controlled by the Main Body ECU (Instrument Panel Junction Block).
- This system has the following functions.

Function	Outline
Driver's Door-linked Function	The exterior lights automatically turn off when all of the following conditions have been met: • The ignition/engine* switch is in the OFF or ACC position. • The driver's door is closed and then opened. • The light control switch is in the TAIL position.
Delay Function	The exterior lights automatically turn off after 30 seconds when all of the following conditions have been met: • The ignition/engine* switch is in the OFF or ACC position. • The driver's door is opened and then closed. • All doors are closed. • The light control switch is in the HEAD position. If the above mentioned conditions have been met, and the driver's door is kept open, the lights automatically turn off after 30 minutes.
Door Control Transmitter-linked Function	The exterior lights turn off immediately when the delay function is active and the following condition has been met: • The "LOCK" button of the door control transmitter or key is pushed twice within 3 seconds.

*: Models with Smart Key System

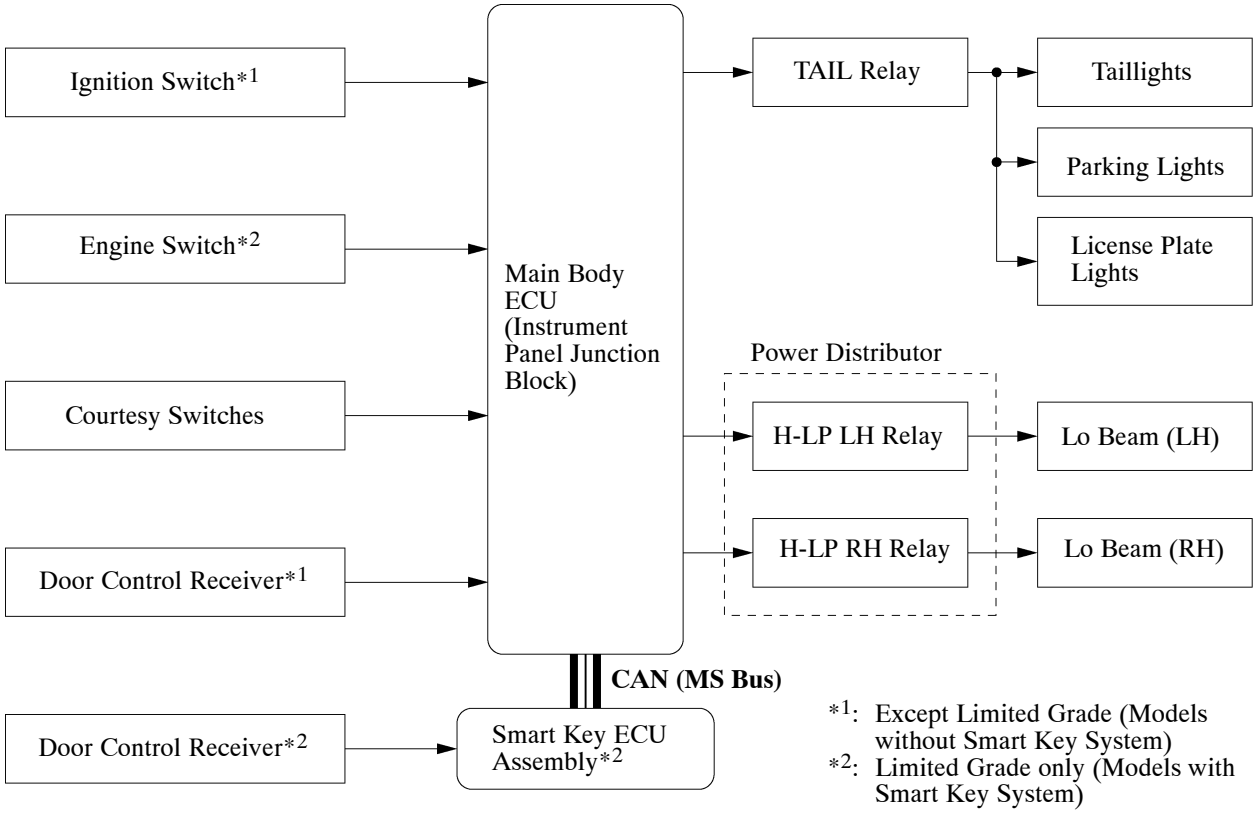

06J0BE51C

BE