
CRUISE CONTROL SYSTEM

■ DESCRIPTION

When the cruise control system is set to a desired vehicle speed, the throttle valve position is adjusted automatically to maintain the vehicle speed without the driver having to depress the accelerator pedal.

- This system effects control through the ETCS-i (Electronic Throttle Control System-intelligent) is standard equipment on all models.

■ SYSTEM DIAGRAM

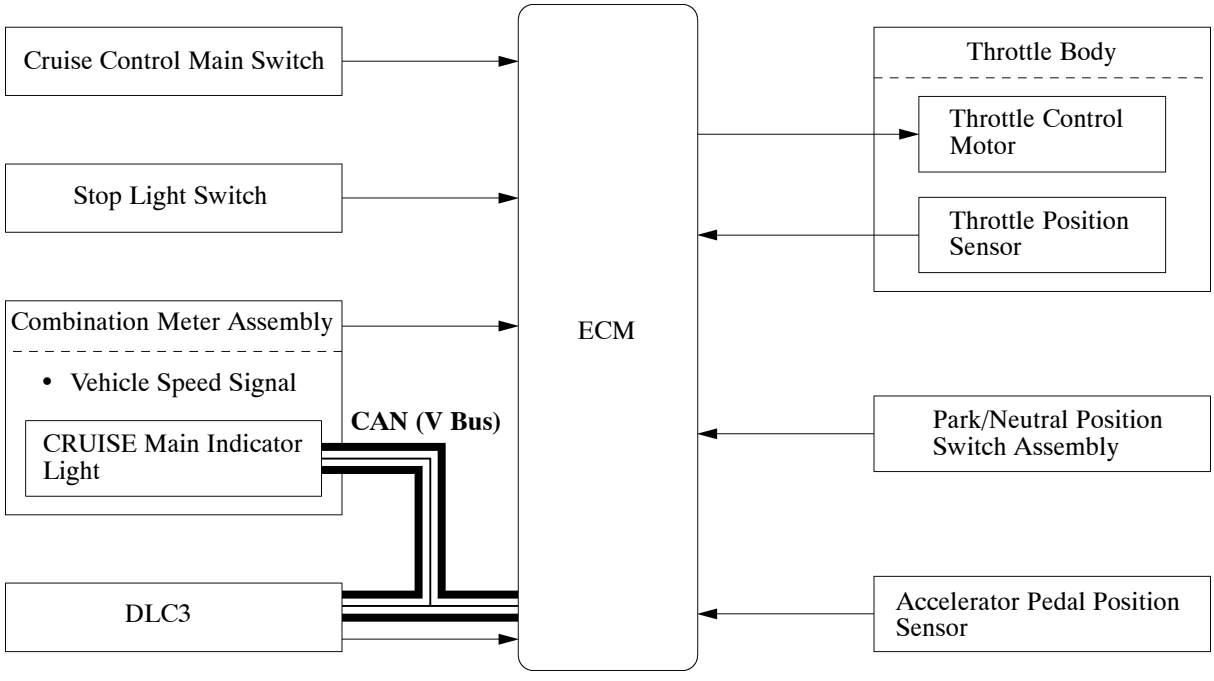

06J0BE151C