TIRE PRESSURE WARNING SYSTEM


■ DESCRIPTION

When the tire pressure warning system detects that the pressure of a tire becomes lower than the threshold, it will turn ON the tire pressure warning light to warn the driver.

- The tire pressure warning antenna and receiver receives the tire inflation pressure, temperature, and ID number information from the four or five (which includes the standard type spare tire*) tire pressure warning valve and transmitters and transmits this information to the Tire Pressure Warning ECU.
- The Tire Pressure Warning ECU monitors each tire pressure warning valve and transmitter to detect low tire pressure.

*: Optional Equipment

▶ System Diagram ◀

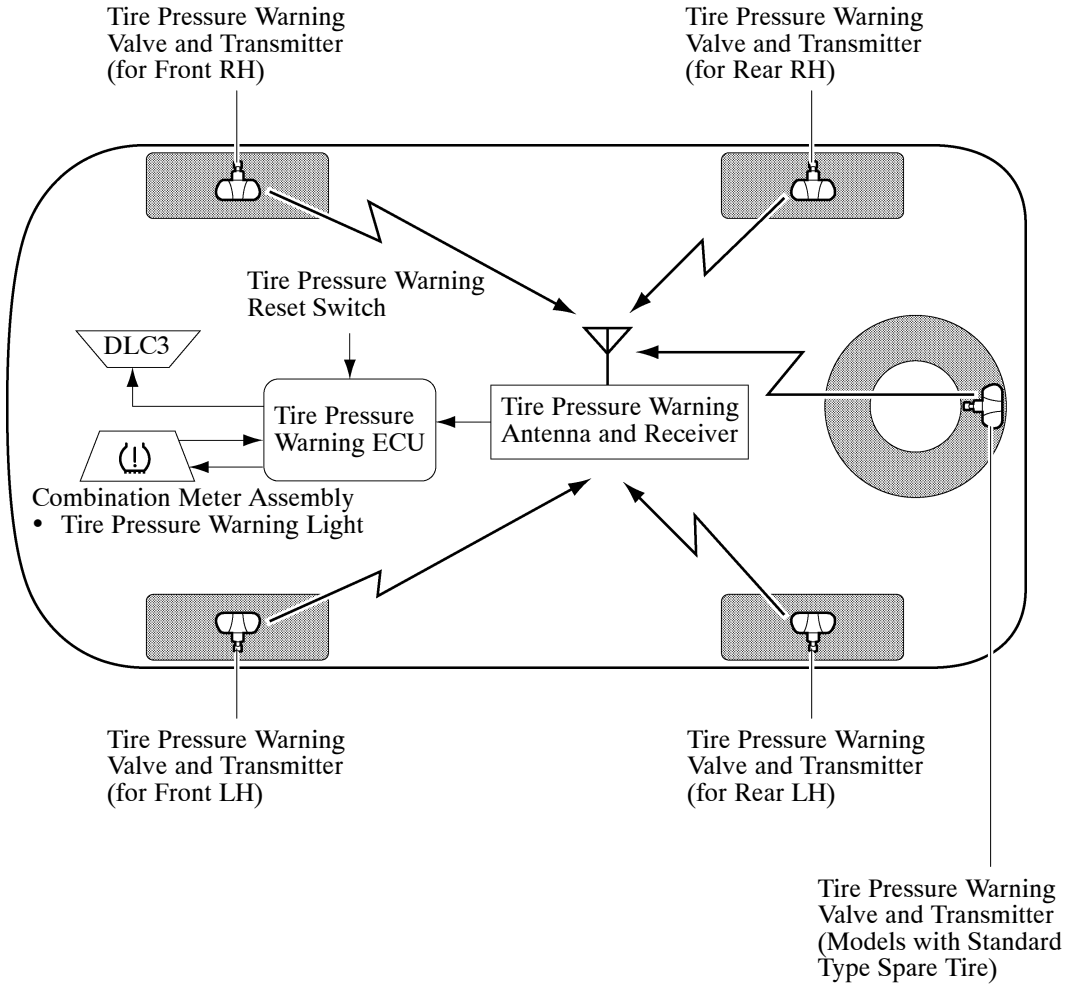

06J0CH91C