
FRONT APRON TO COWL SIDE UPPER MEMBER (ASSY)

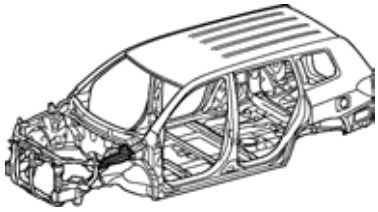

F28382A


With the radiator side support removed.

Symbol meaning


: Remove Weld Points


F28382B

REMOVAL

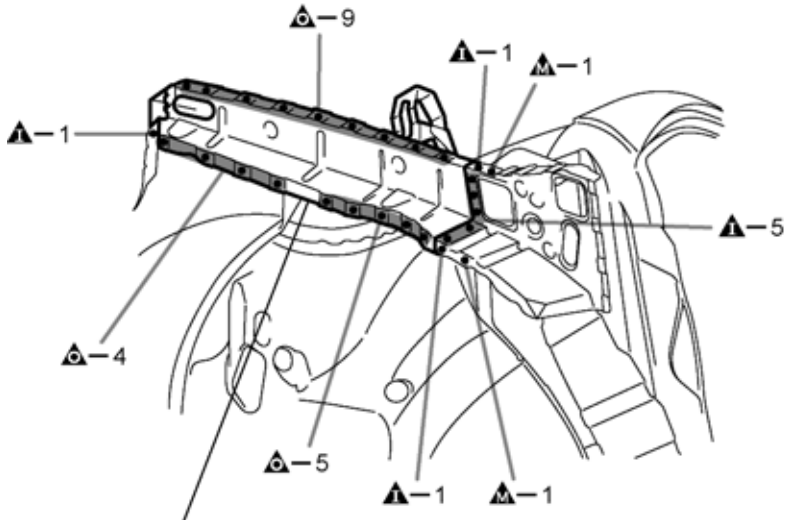

Front Apron To Cowl Side Lower Front Member

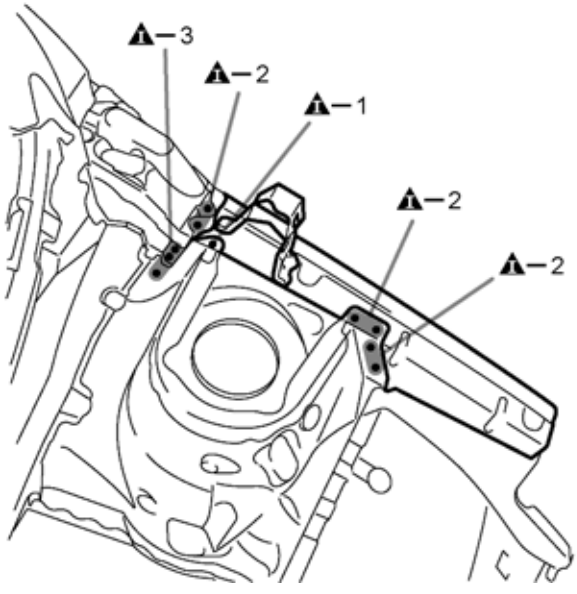

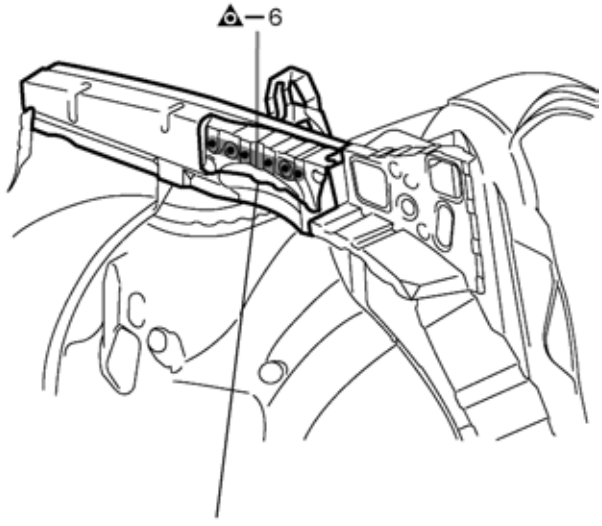

LH: Cowl Top To Cowl Inner No. 2 Brace
RH: Cowl Top To Cowl Inner No. 1 Brace

F28382

REMOVAL POINT

1 After removing the front apron to cowl side lower front member, remove the front apron to cowl side upper member.


2 Remove the cowl top to cowl inner No. 2 brace and cowl top to cowl inner No. 1 brace at the same time.

Symbol meaning

I : Spot Weld O M I : Plug Weld

F28383B

INSTALLATION

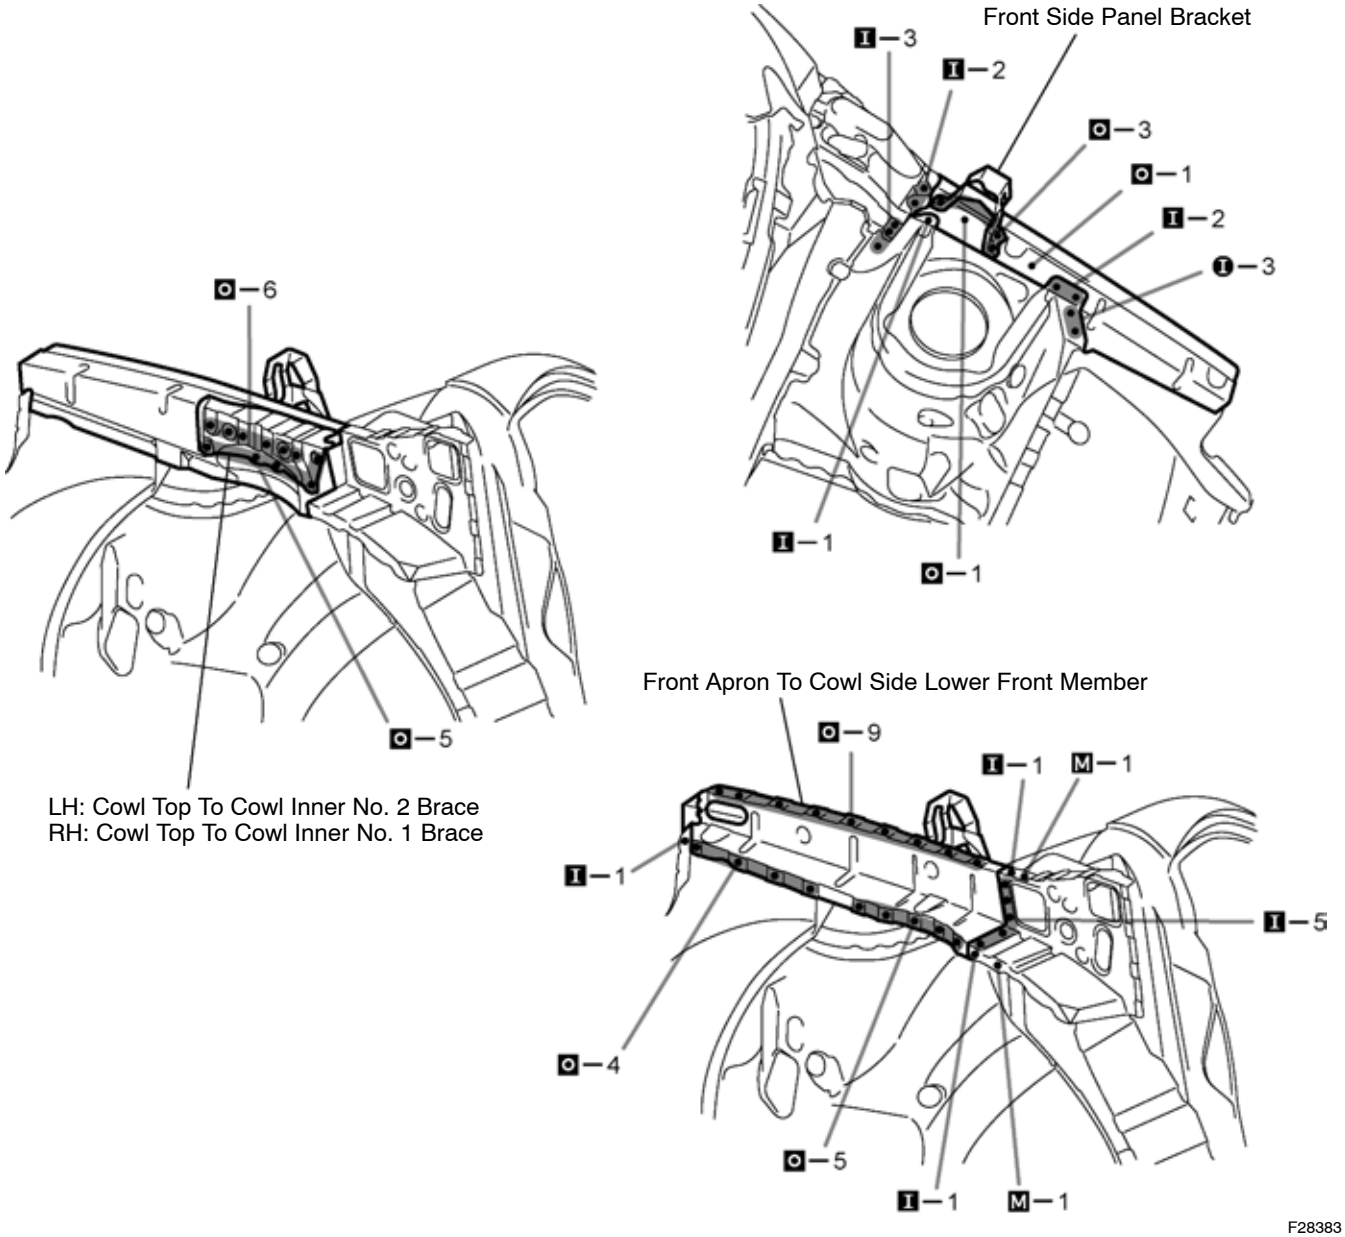

F28383

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding the front apron to cowl side upper member and front side panel bracket to the vehicle side, install the front apron to cowl side lower front member.
4 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.