
REAR FLOOR SIDE PANEL (ASSY)

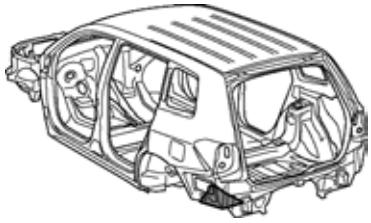

F28429A


With the rear floor pan removed.


Symbol meaning

REMOVAL	▲ ▲ : Remove Weld Points
INSTALLATION	● : Spot Weld ■ : Plug Weld

F28429B

REMOVAL·INSTALLATION

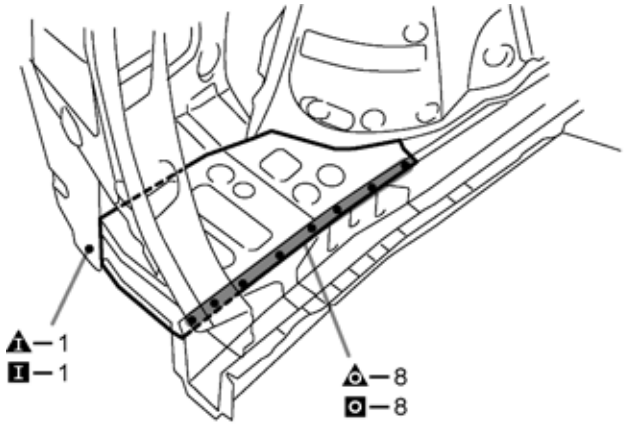

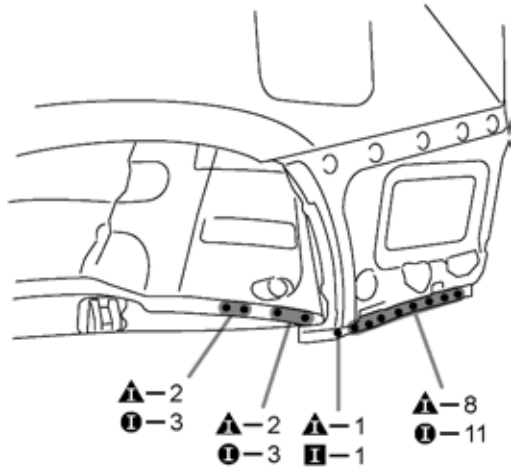

F28429

INSTALLATION POINT

1 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.