
REAR FLOOR SIDE REAR MEMBER (ASSY)

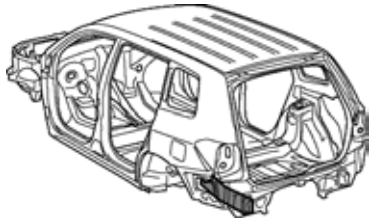

F28432A


With the body lower back panel removed.

Symbol meaning

REMOVAL	▲ ▲ : Remove Weld Points
INSTALLATION	● ■ : Plug Weld

F28432B

REMOVAL·INSTALLATION

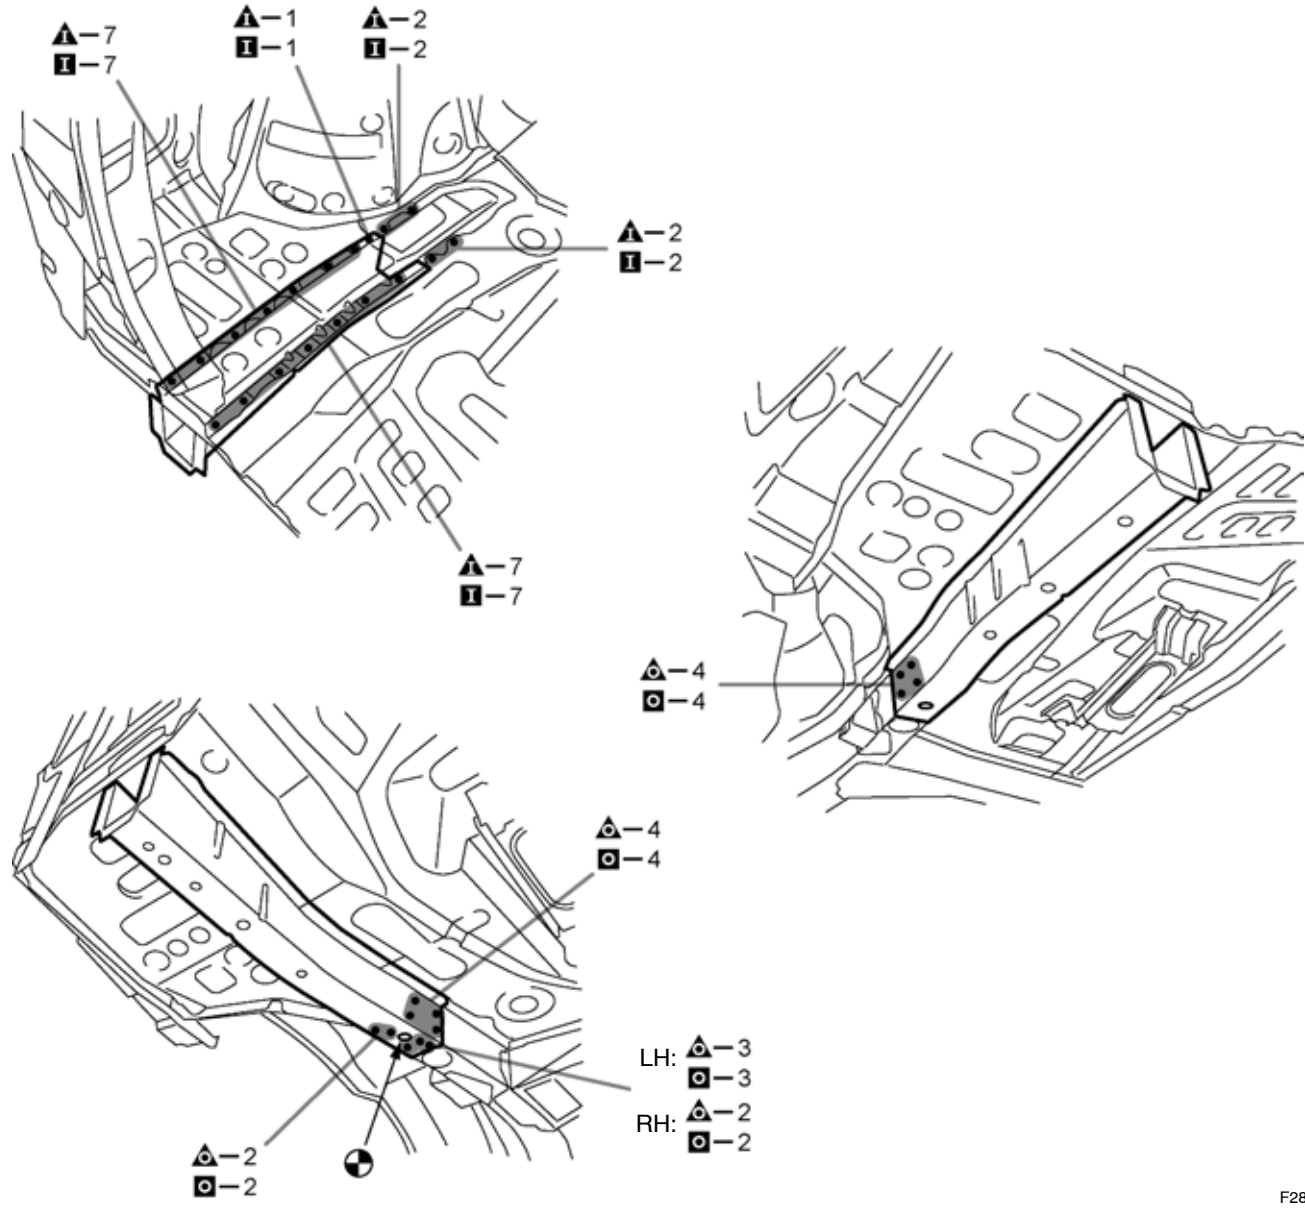

F28967

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 For positioning of the new parts, align the installation standard holes of the rear floor side rear member and the member.
3 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.