BODY PANEL SEALING AREAS

1 Be sure to apply body sealer to the body panel joints and door edges (tip of outer panel folded part), etc., to waterproof and rustproof them.

HINT:


1) Apply degreasing agent to a clean cloth and clean the sealer application areas.

2) After removing the applied spot sealer from the sealer application areas using thinner or equivalent, rust-proof the areas by applying primer or equivalent. Then apply body sealer.


3) If sealer is unnecessarily applied to an area, apply degreasing agent to a clean cloth and clean off the sealer immediately.

++++++++++	Flat Finishing	————	No Flat Finishing

1. ENGINE COMPARTMENT

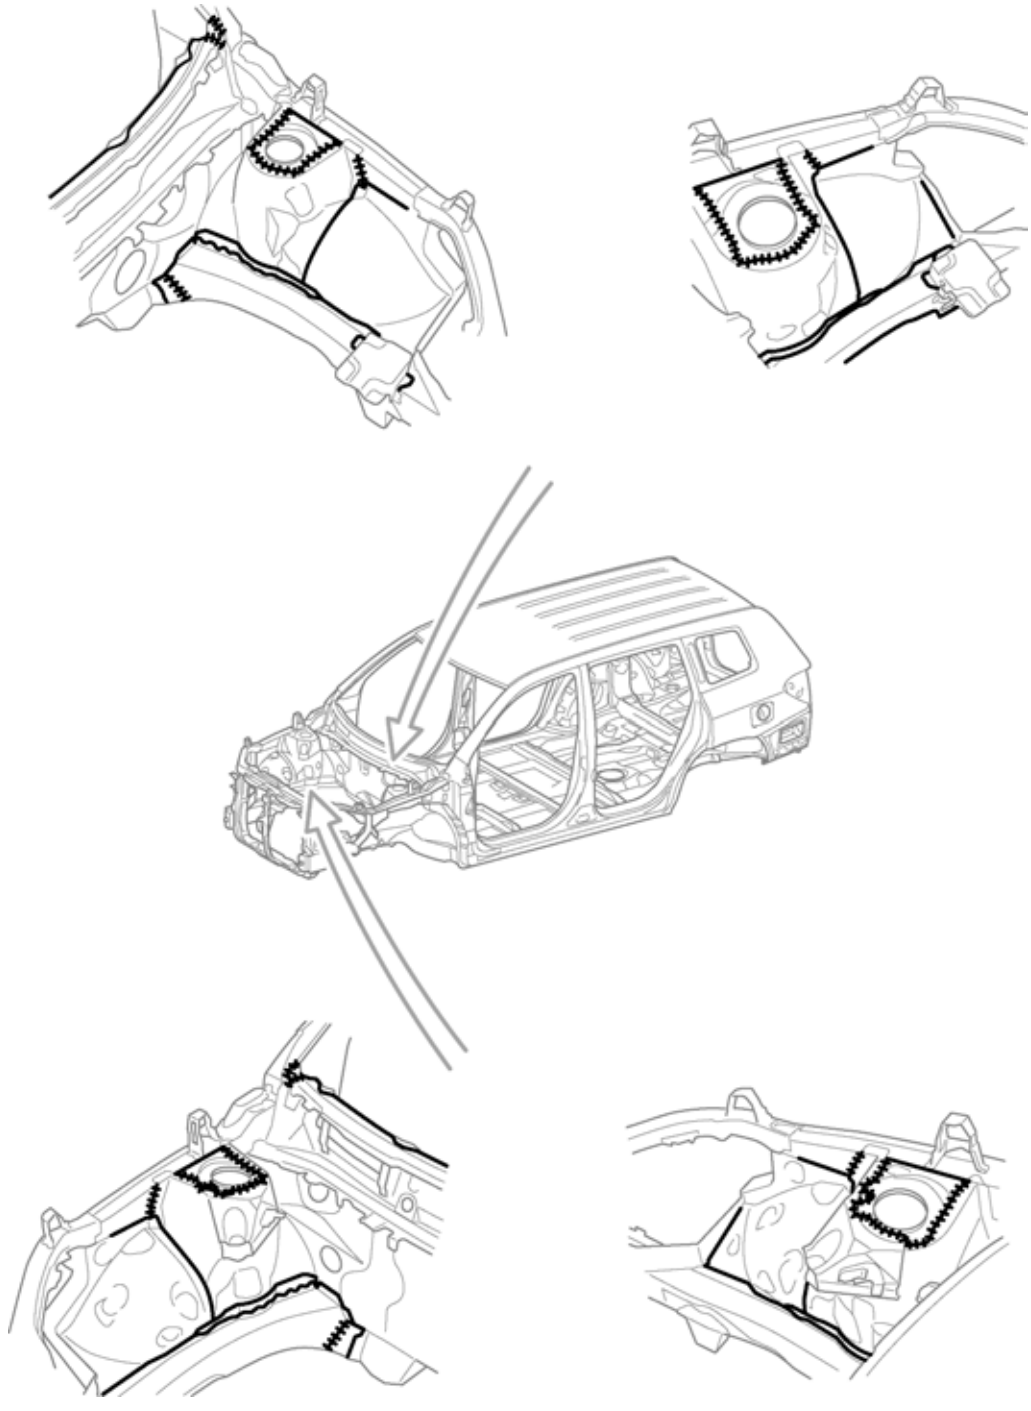


F28351

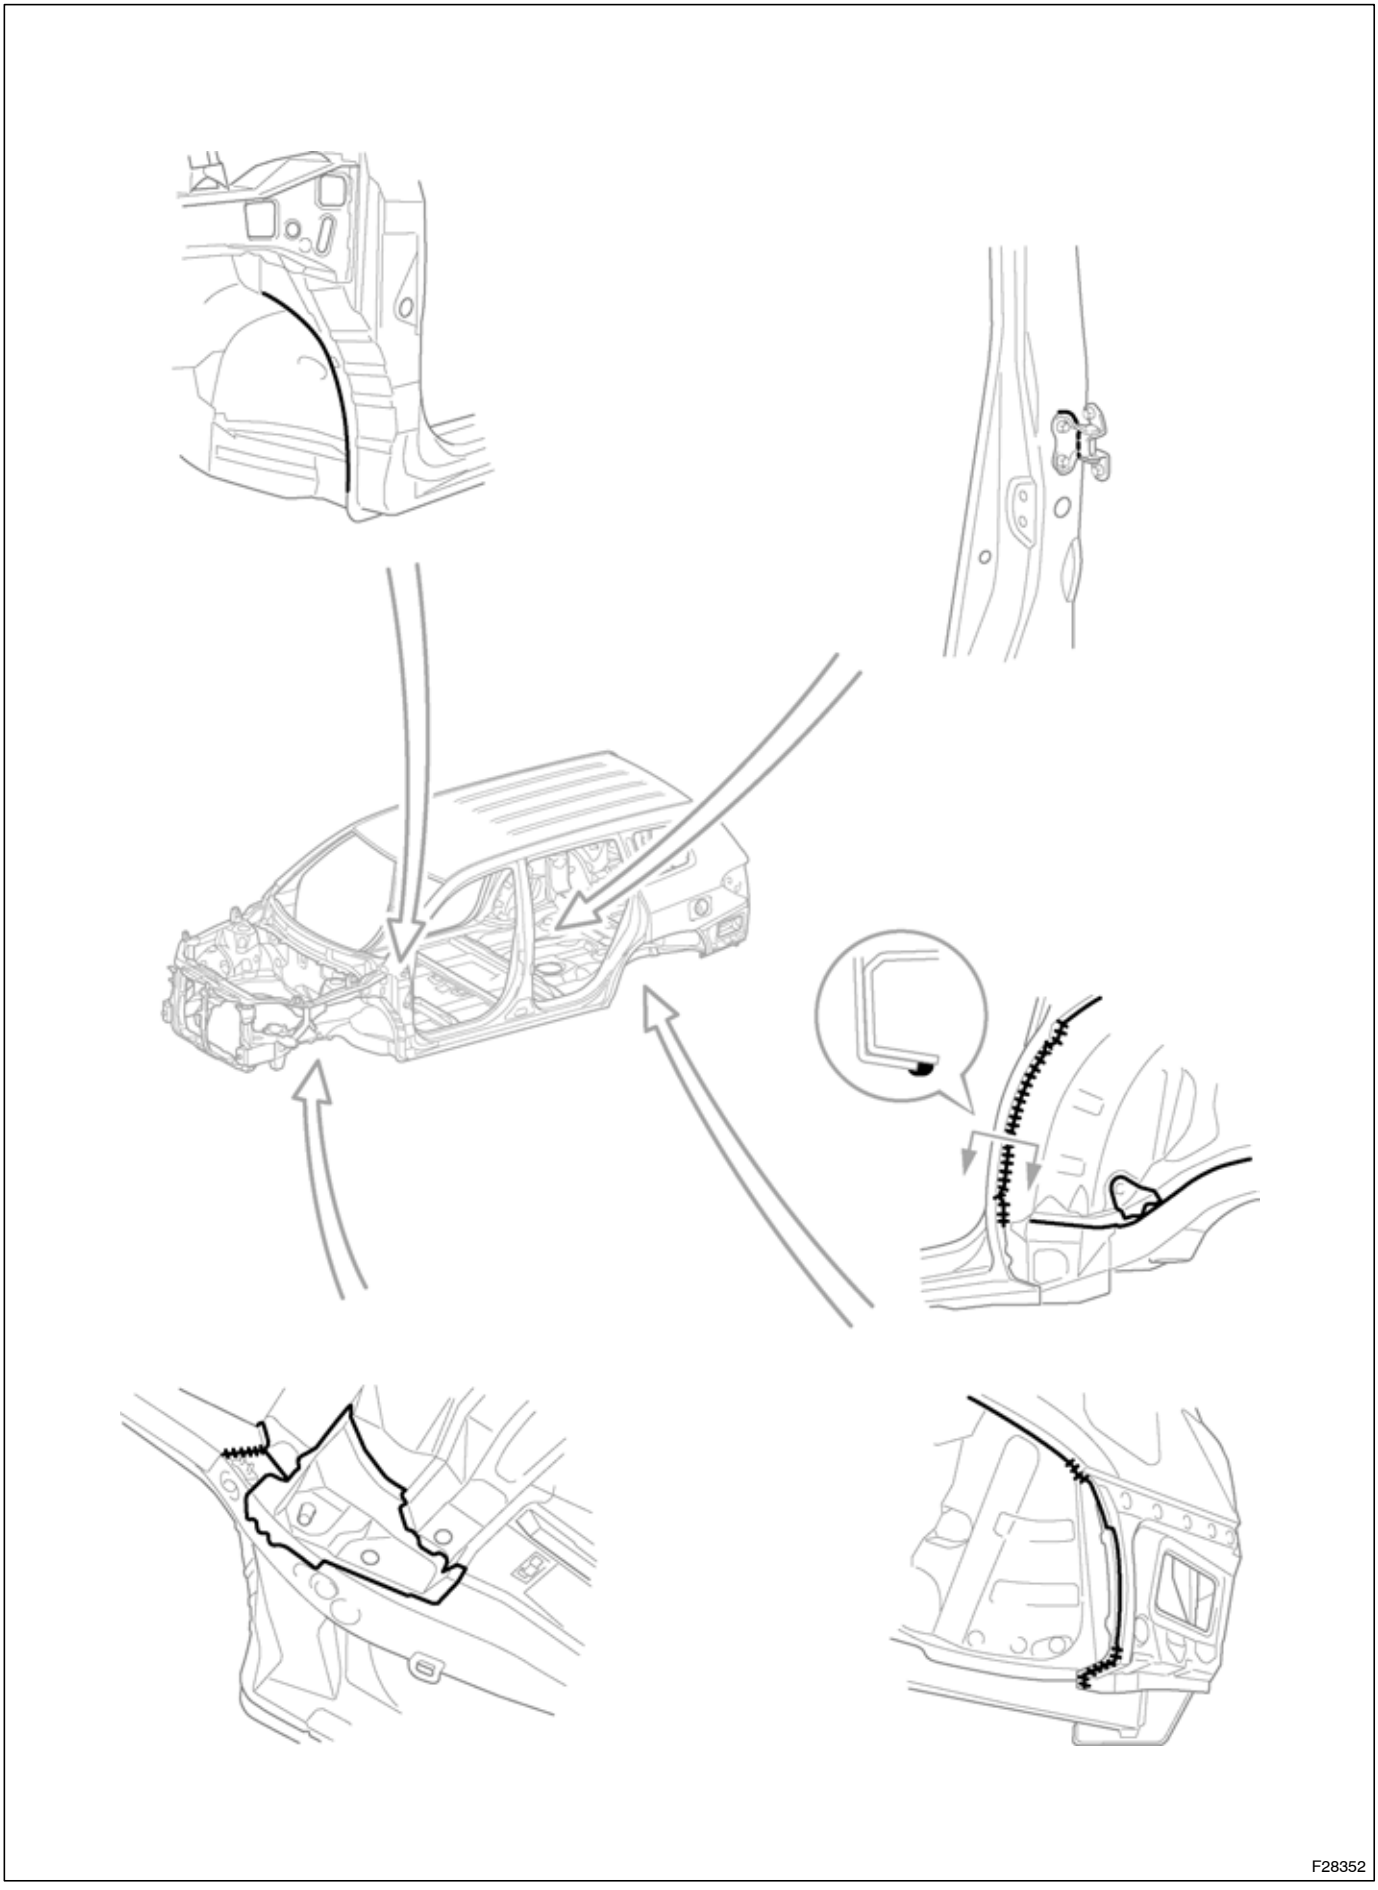


F28352

2. INSIDE

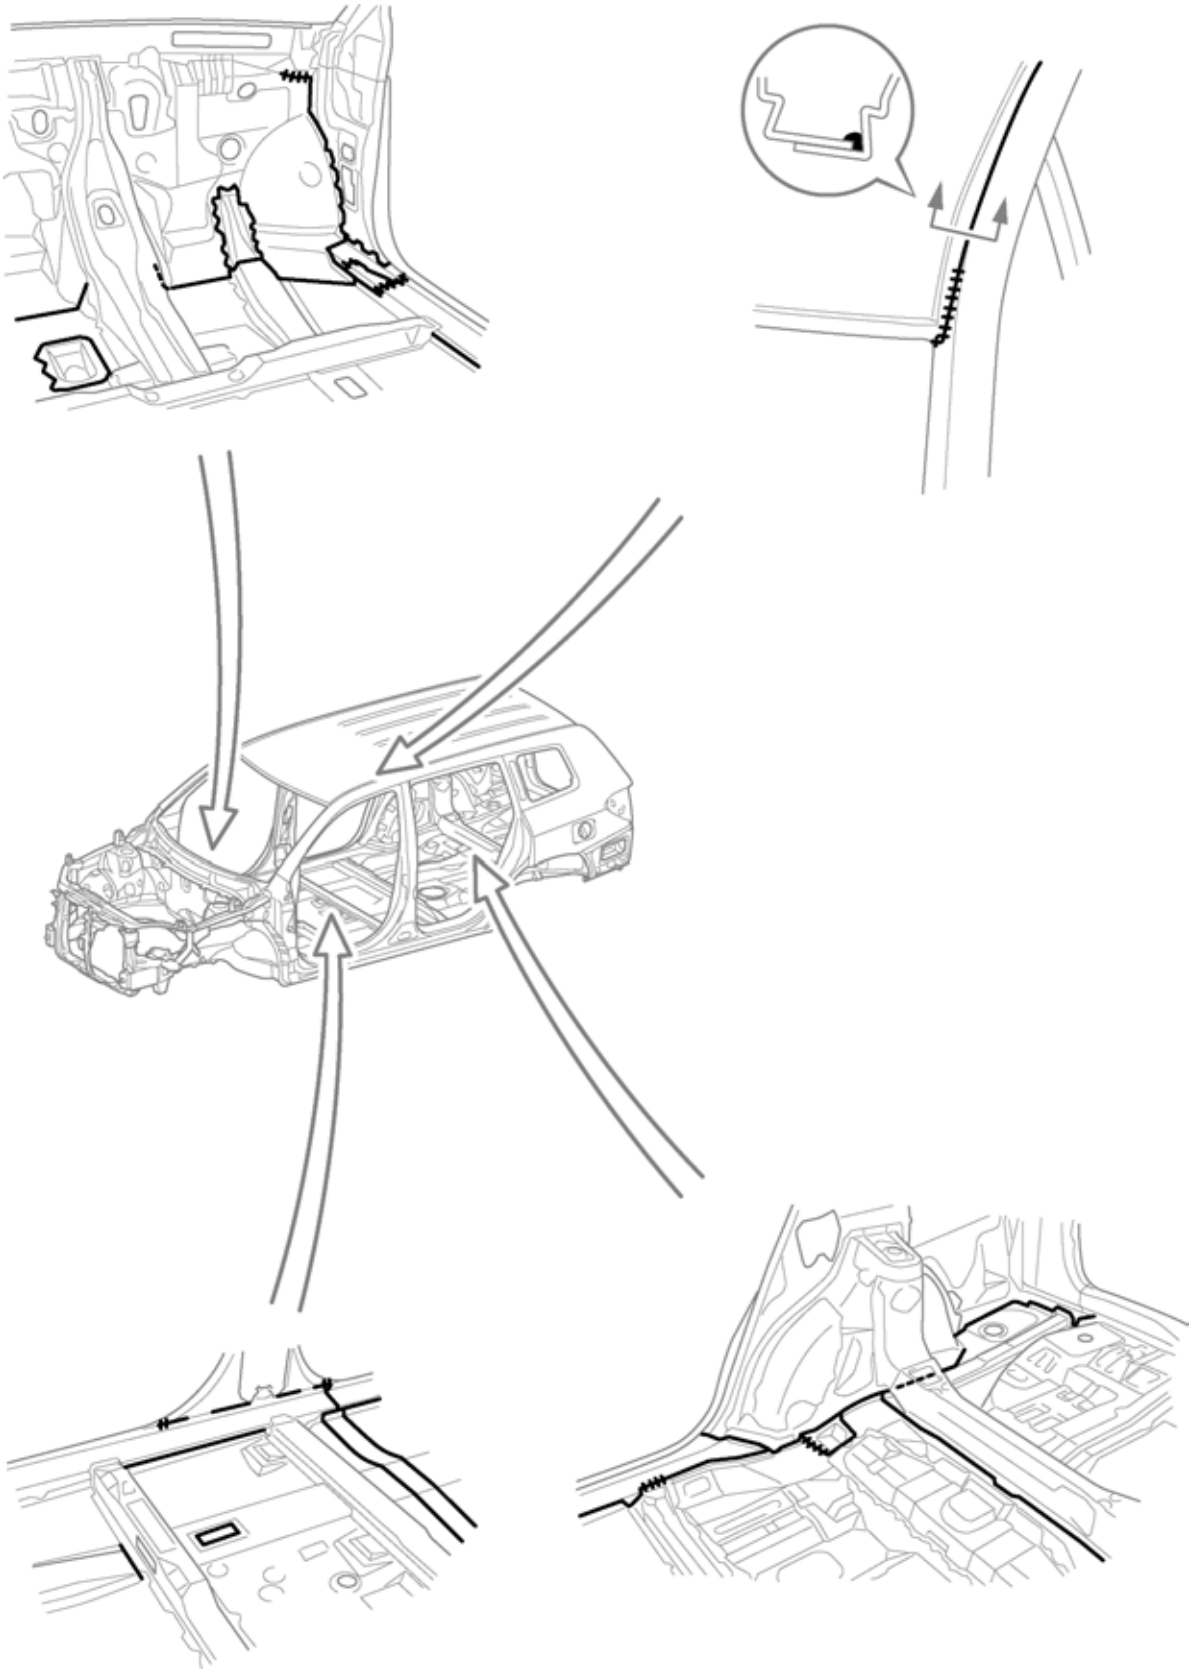


F28970

3. OUTSIDE

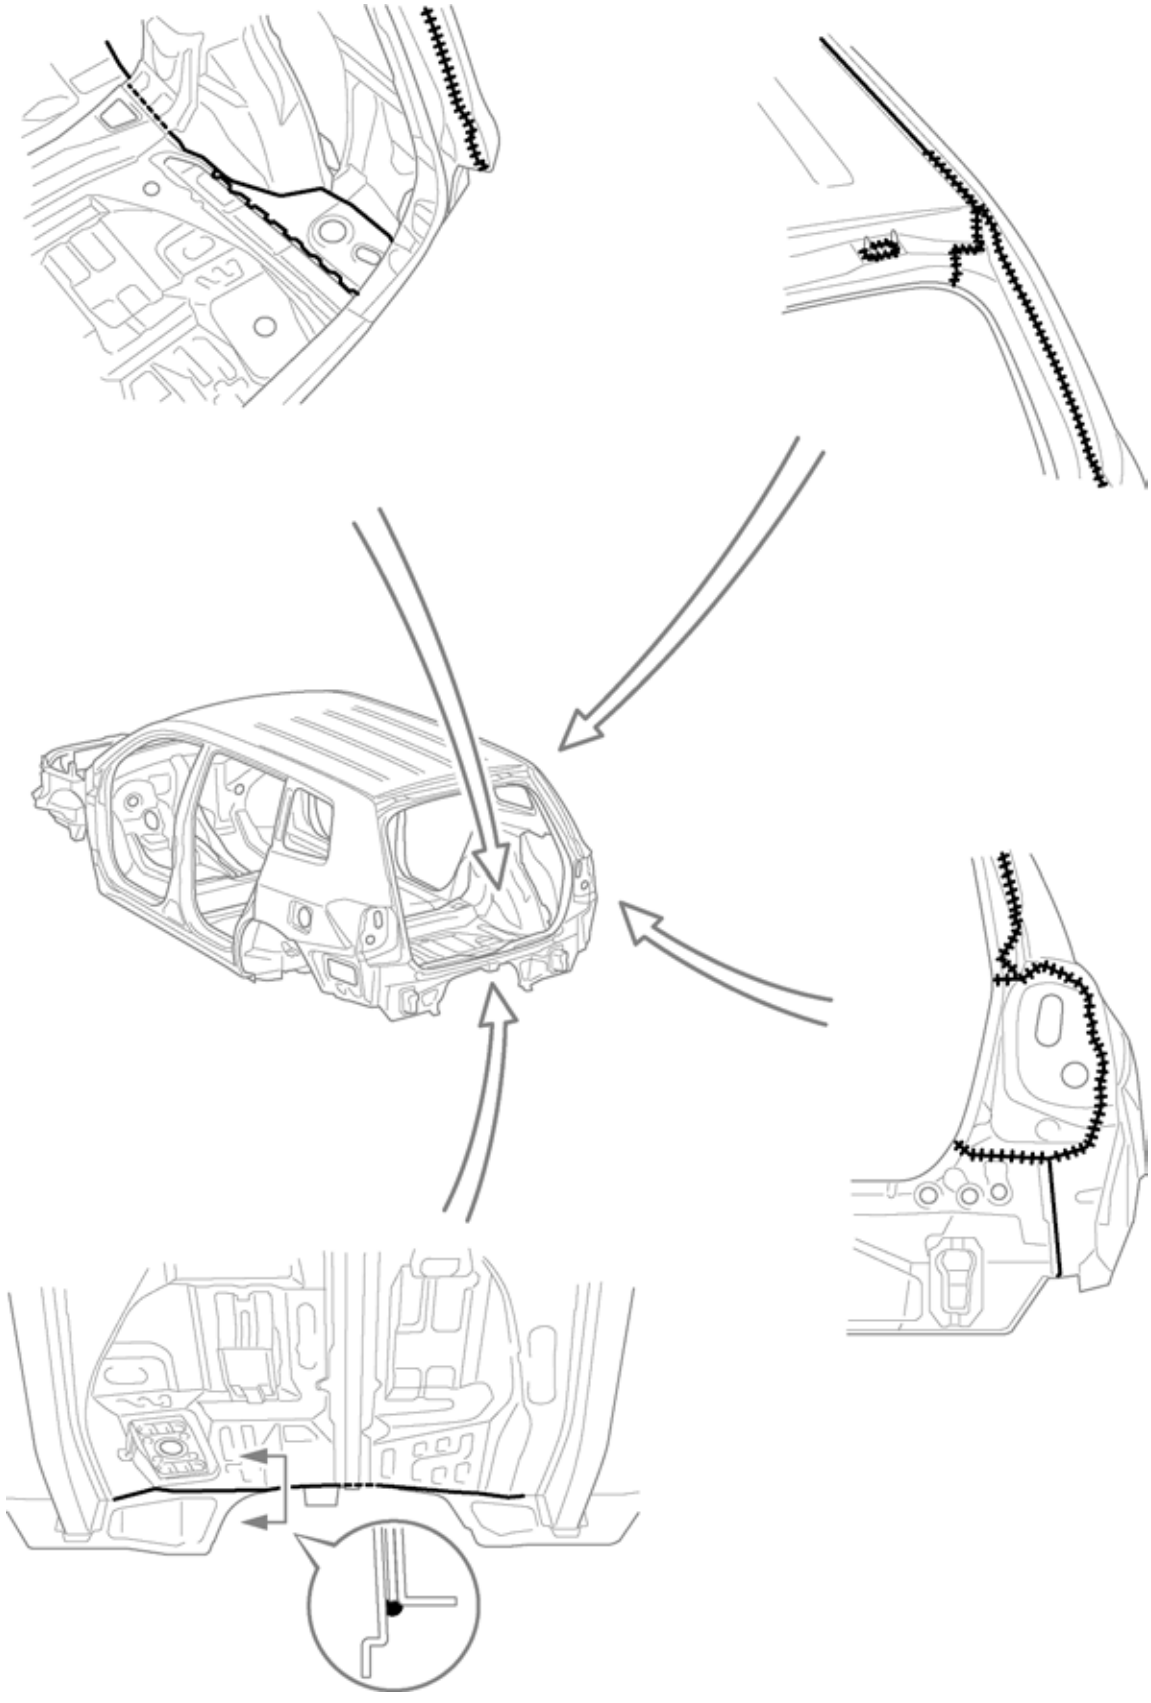


F28354

4. DOOR PARTS

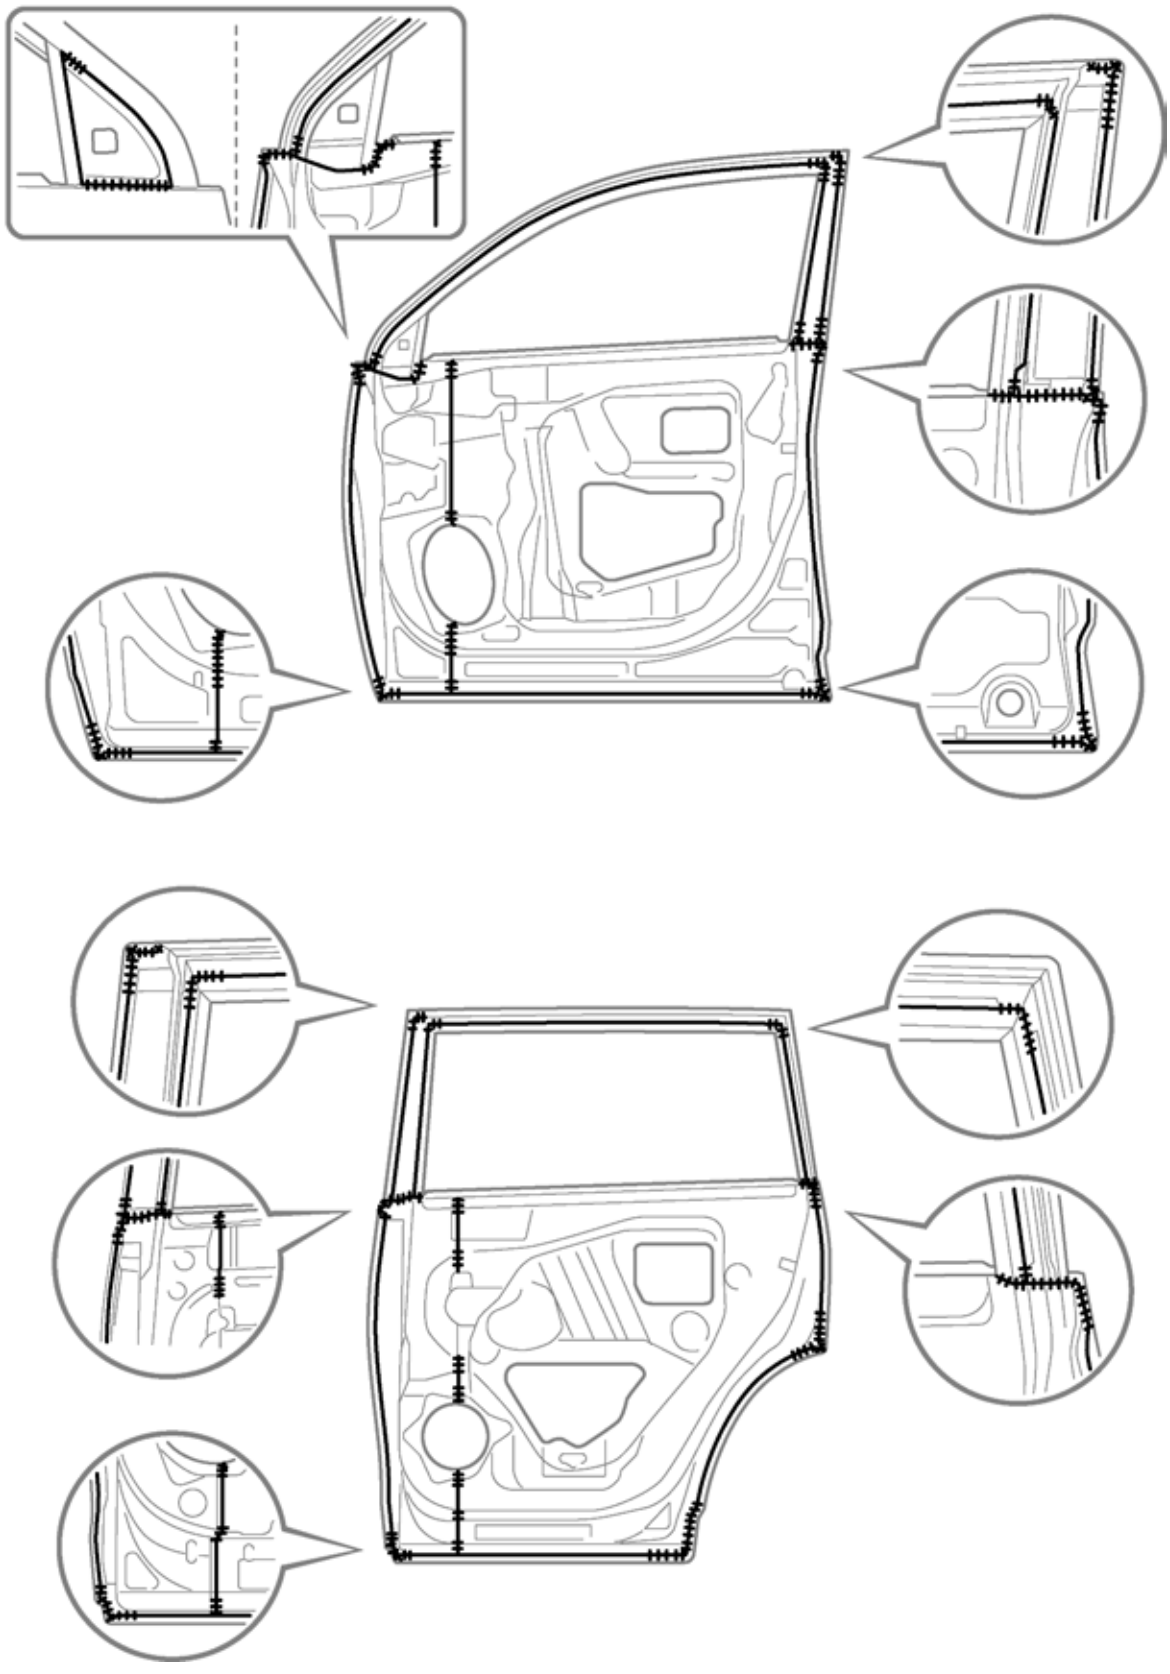

F28355

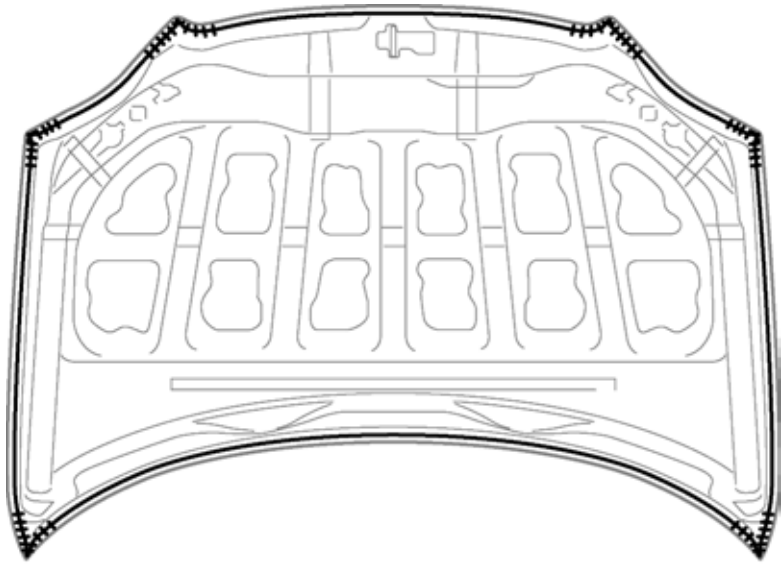



F28356