

(Cont. next page)

SRS

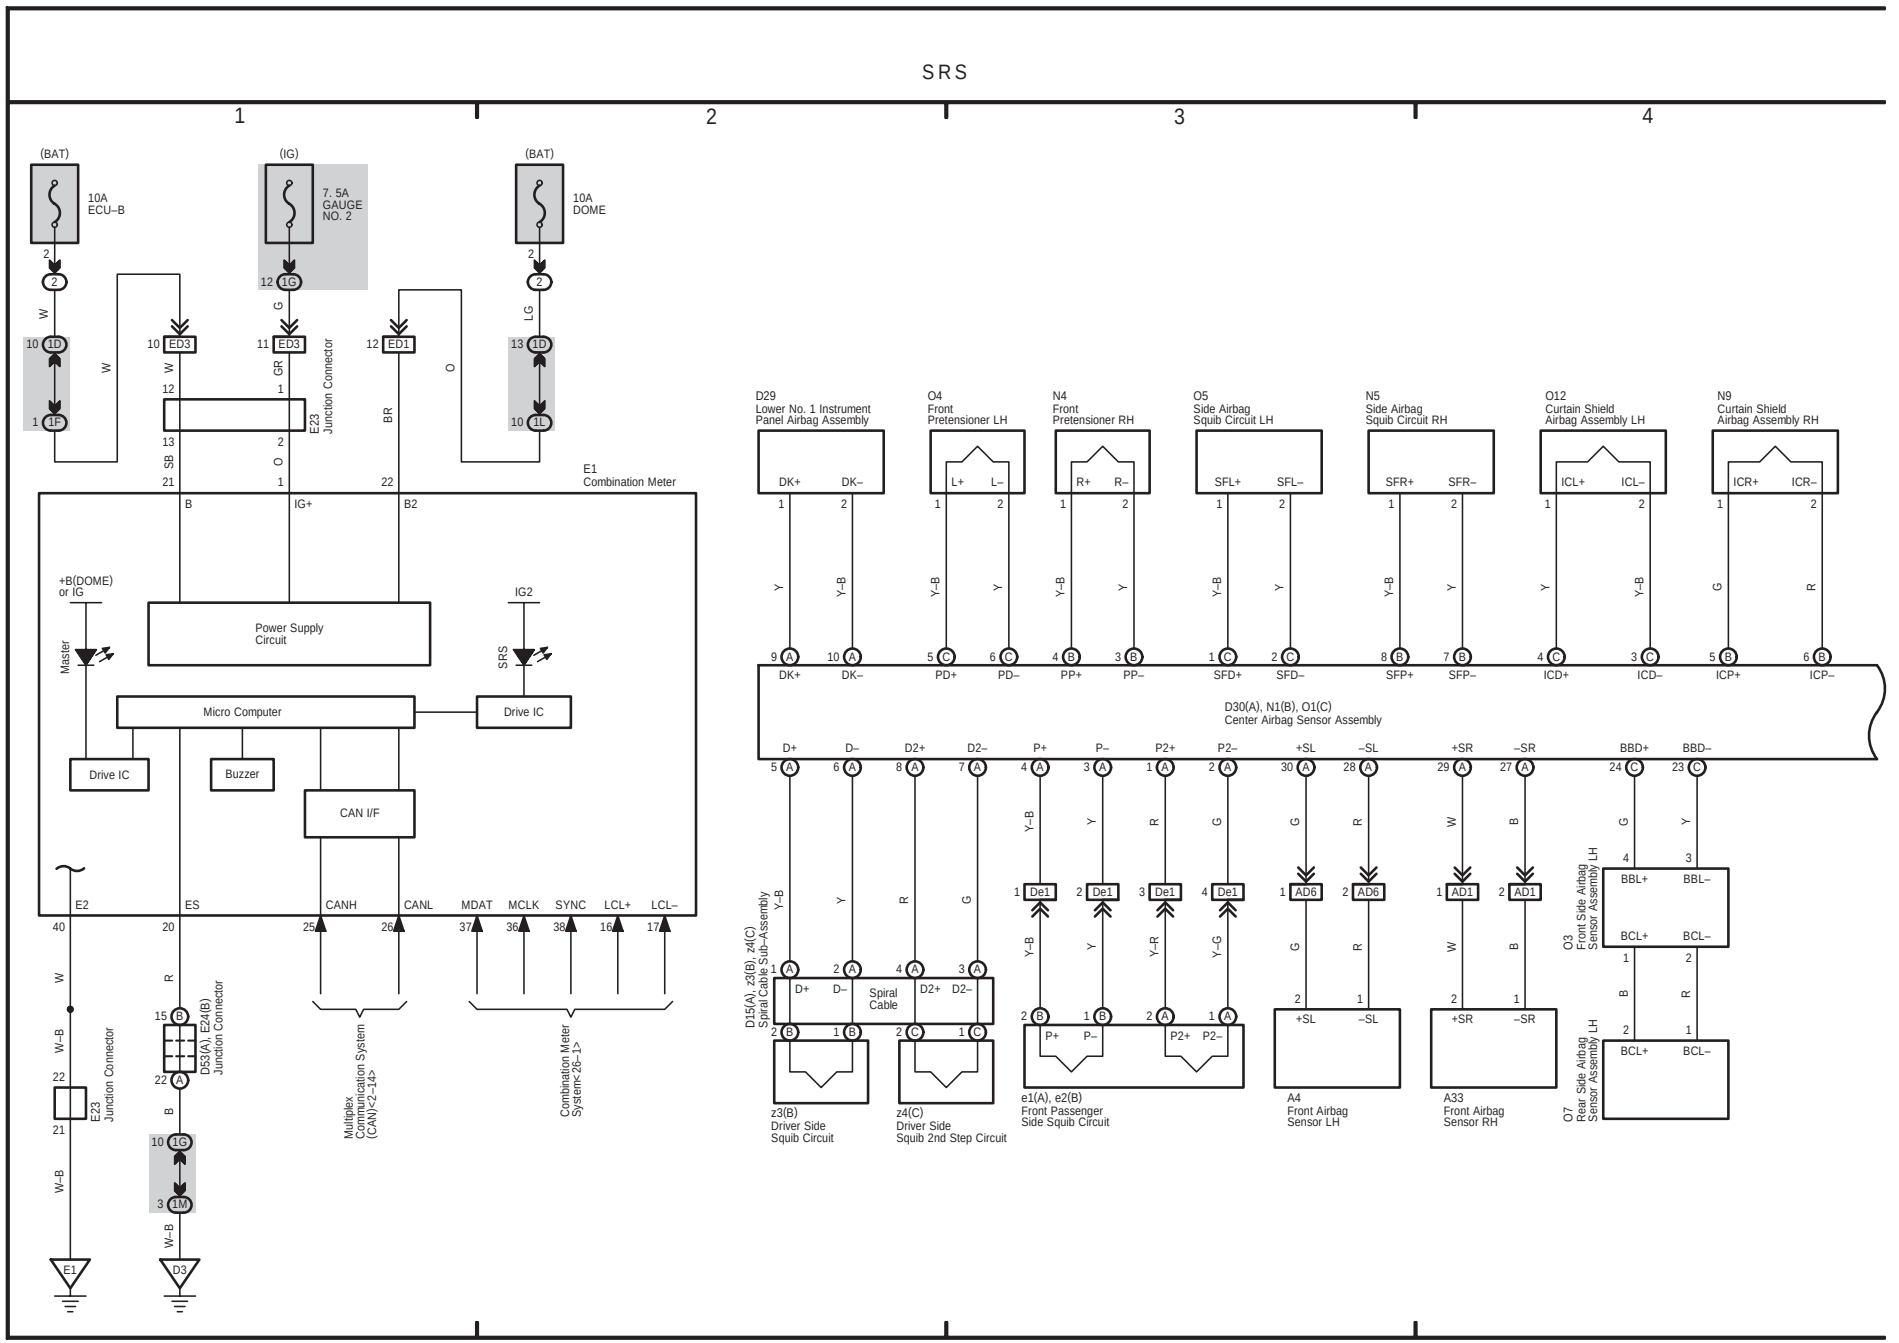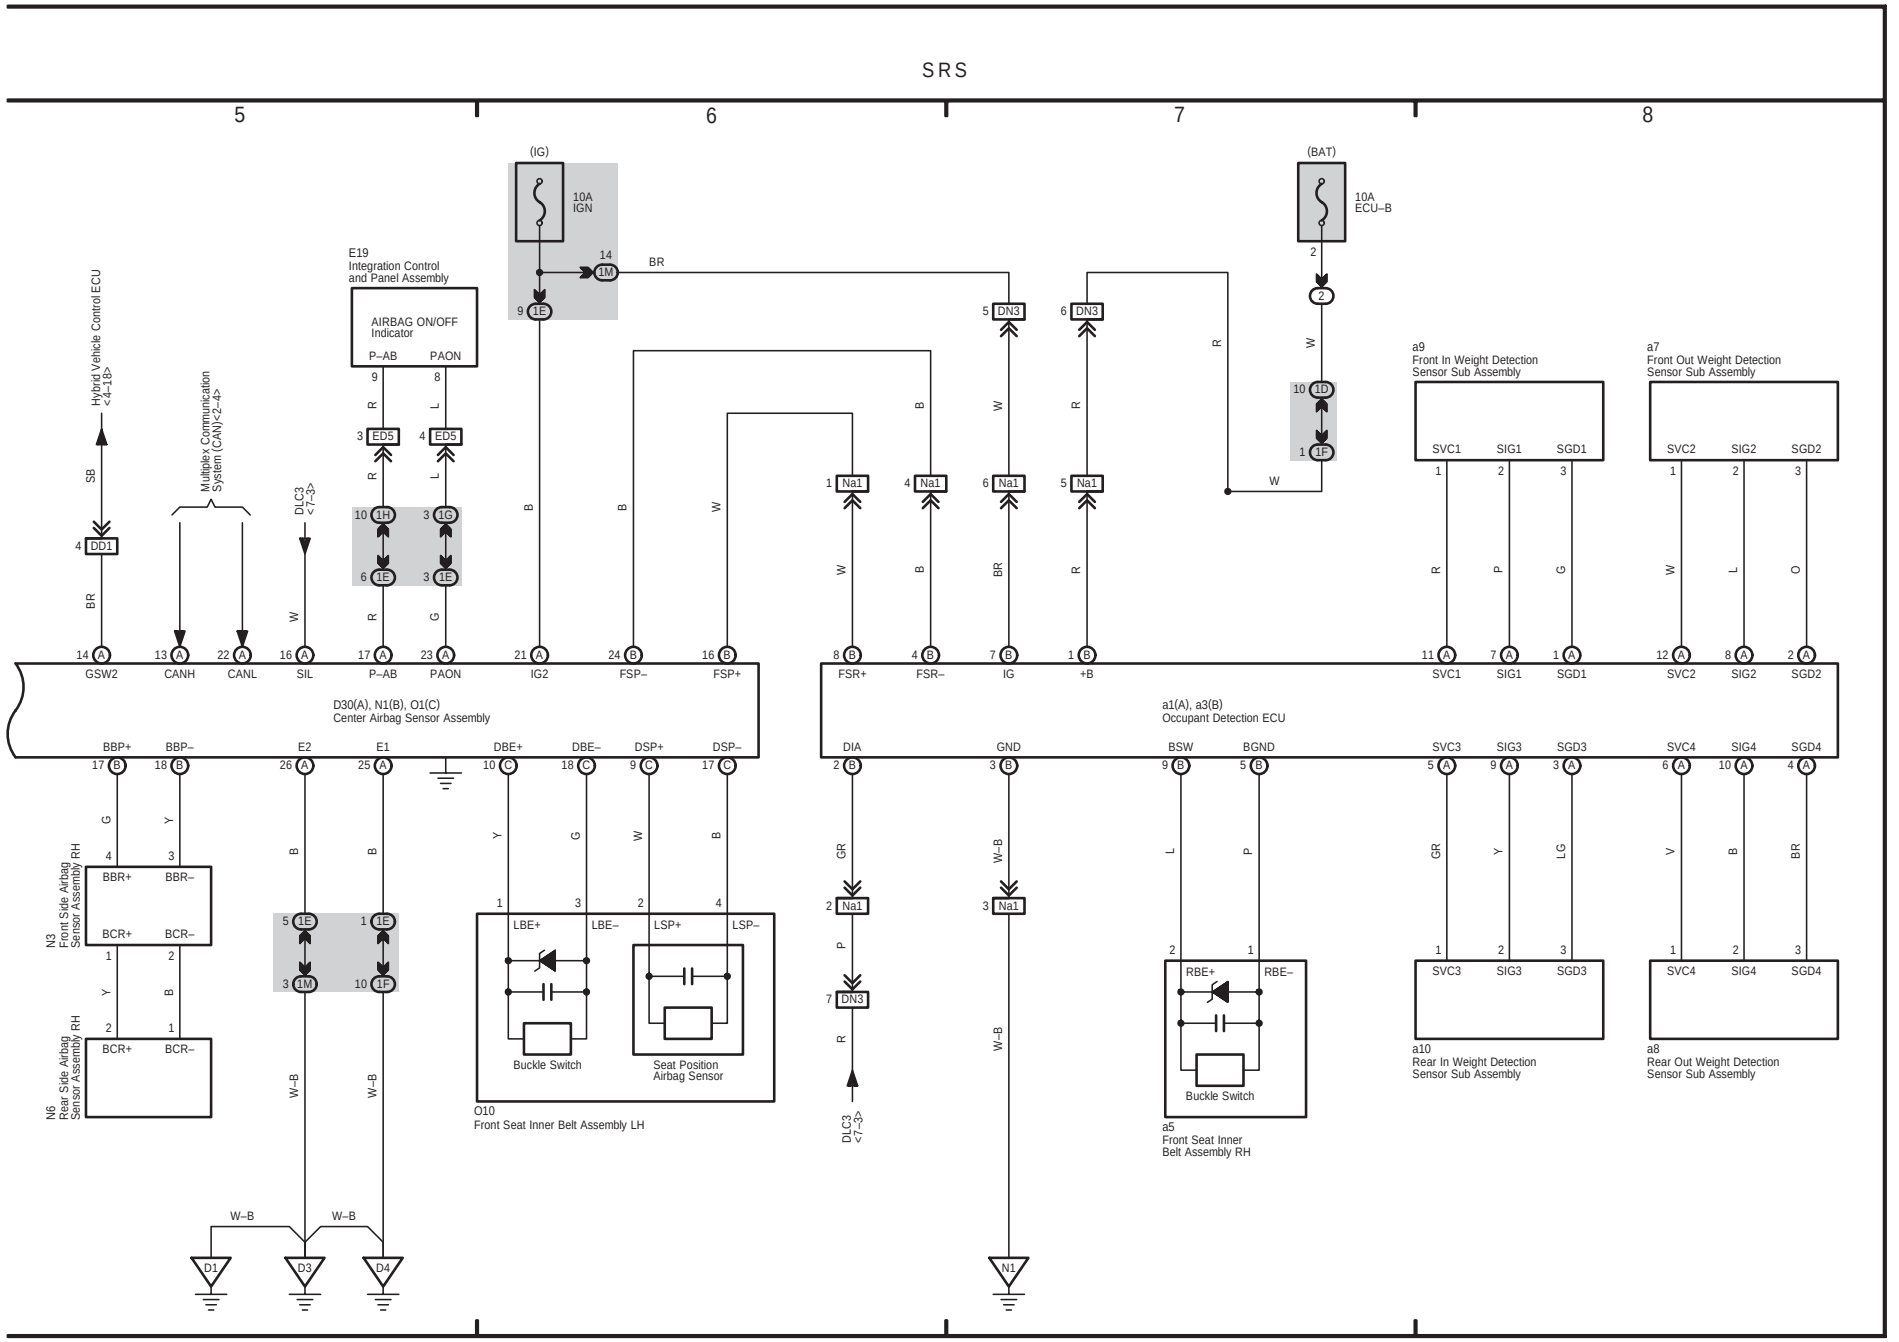


SRS
5
6
7
8
(IG)
10A
IGN
(BAT)
10A
ECU–B
E19
Integration Control
and Panel Assembly
AIRBAG ON/OFF
Indicator
P–AB
PAON
Hybrid Vehicle Control ECU
<4–1B>
Multiplex Communication
System (CAN)<2–4>
DLC3
<7–3>
GSW2
CANH
CANL
SIL
P–AB
PAON
IG2
FSP–
FSP+
FSR+
FSR–
IG
+B
D30(A), N1(B), O1(C)
Center Airbag Sensor Assembly
a1(A), a3(B)
Occupant Detection ECU
a9
Front In Weight Detection
Sensor Sub Assembly
a7
Front Out Weight Detection
Sensor Sub Assembly
SVC1
SIG1
SGD1
SVC2
SIG2
SGD2
BBP+
BBP–
E2
E1
DBE+
DBE–
DSP+
DSP–
DIA
GND
BSW
BGND
SVC3
SIG3
SGD3
SVC4
SIG4
SGD4
N3
Front Side Airbag
Sensor Assembly RH
BBR+
BBR–
BCR+
BCR–
N6
Rear Side Airbag
Sensor Assembly RH
LBE+
LBE–
LSP+
LSP–
Buckle Switch
Seat Position
Airbag Sensor
O10
Front Seat Inner Belt Assembly LH
RBE+
RBE–
a5
Front Seat Inner
Belt Assembly RH
a10
Rear In Weight Detection
Sensor Sub Assembly
a8
Rear Out Weight Detection
Sensor Sub Assembly
W–B
D1
D3
D4
N1