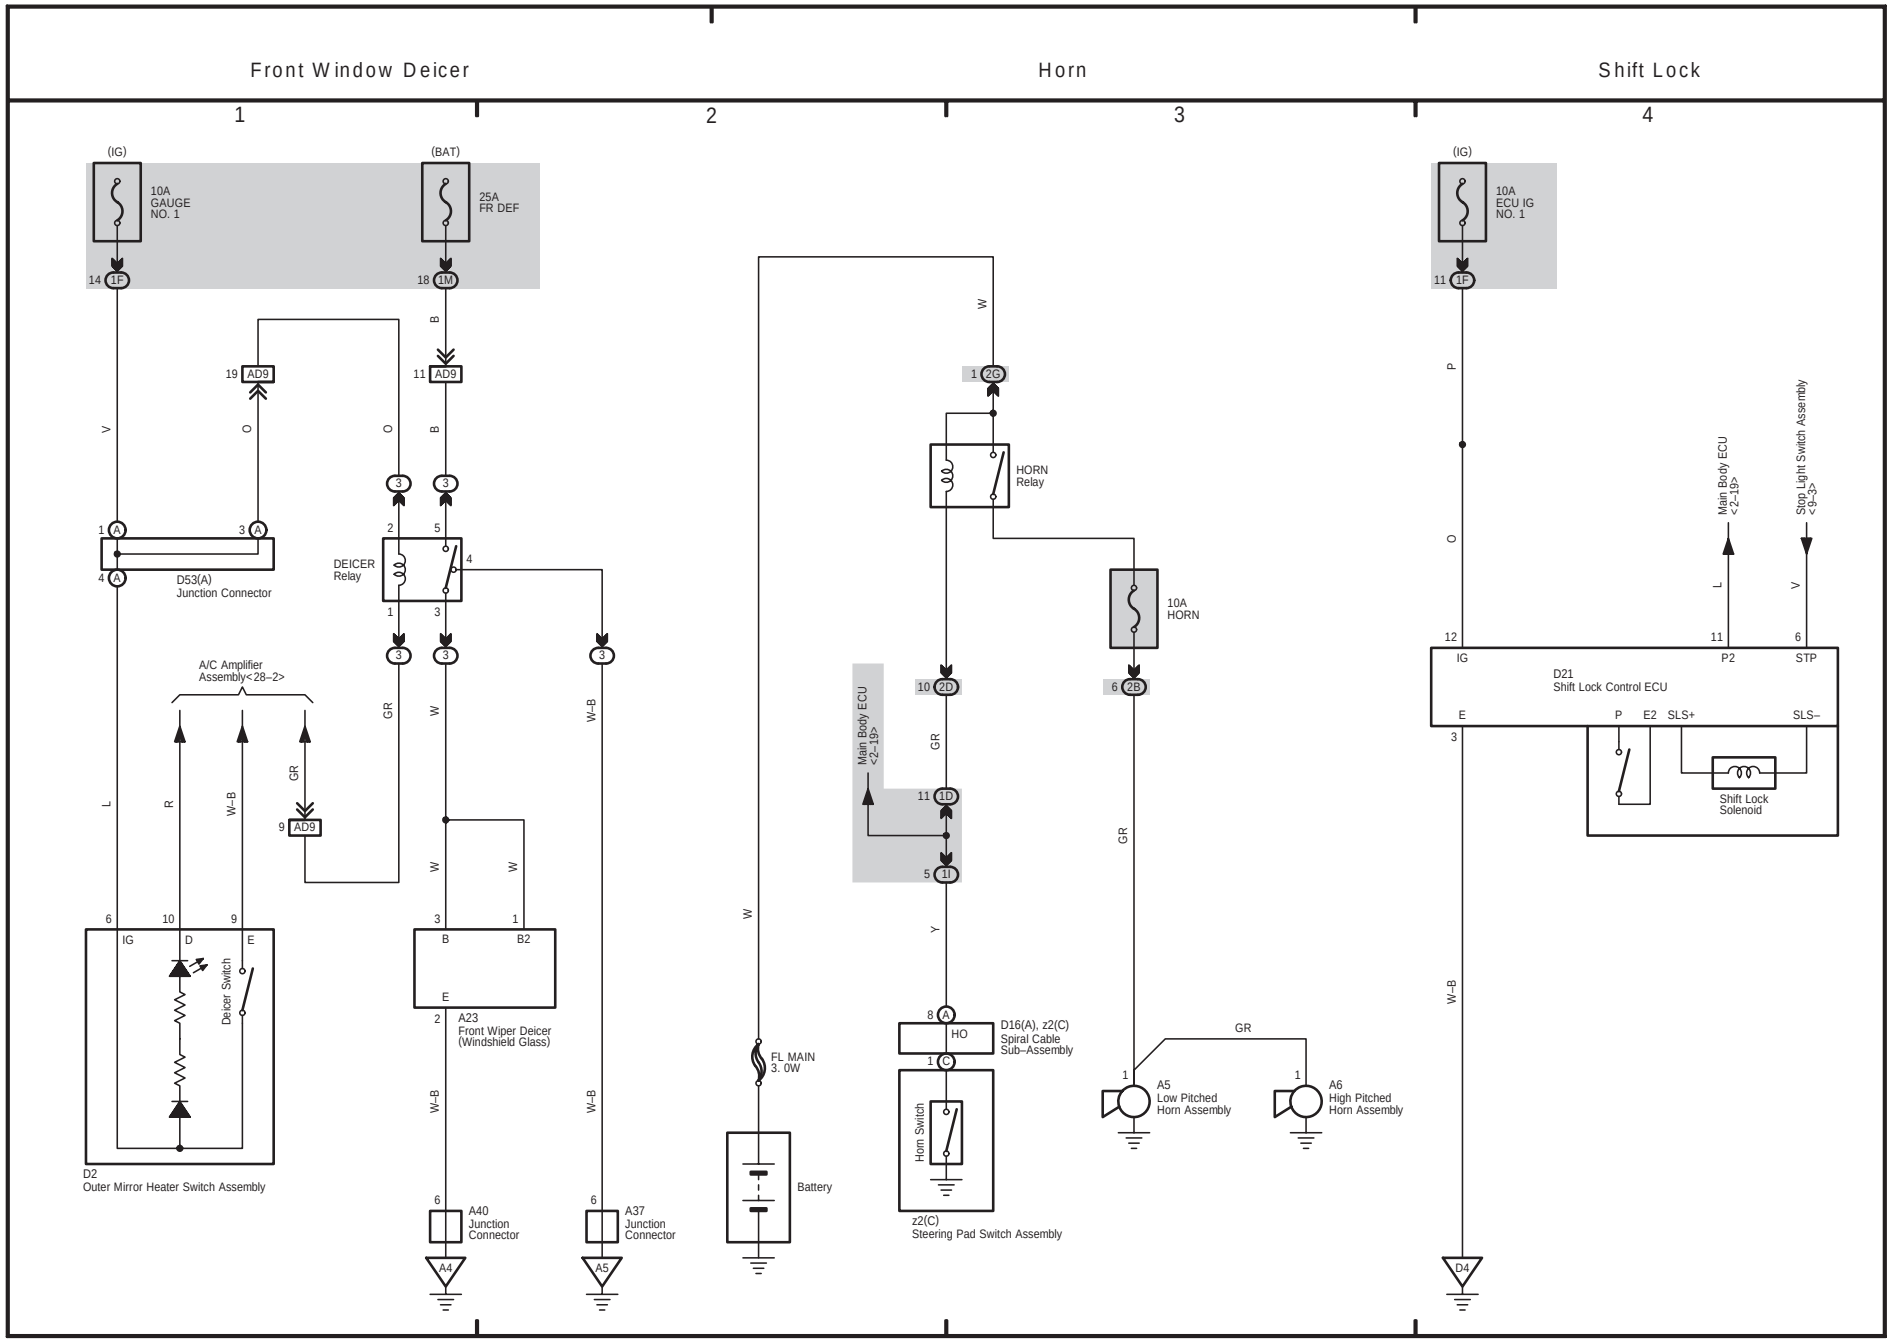

Front Window Deicer
Horn
Shift Lock
1
2
3
4
(IG)
10A
GAUGE
NO. 1
(BAT)
25A
FR DEF
14 1F
18 1M
19 AD9
11 AD9
V
O
B
1 A
3 A
4 A
D53(A)
Junction Connector
DEICER
Relay
3
2
5
4
1
3
A/C Amplifier
Assembly<28–2>
GR
W
W–B
L
R
9 AD9
6
10
9
IG
D
E
Deicer Switch
D2
Outer Mirror Heater Switch Assembly
B
B2
E
2
A23
Front Wiper Deicer
(Windshield Glass)
6
A40
Junction
Connector
A4
6
A37
Junction
Connector
A5
W
FL MAIN
3. 0W
Battery
1 2G
HORN
Relay
10A
HORN
6 2B
10 2D
11 1D
5 1I
Main Body ECU
<2–19>
GR
Y
8 A
HO
1 C
D16(A), z2(C)
Spiral Cable
Sub–Assembly
Horn Switch
z2(C)
Steering Pad Switch Assembly
1
A5
Low Pitched
Horn Assembly
1
A6
High Pitched
Horn Assembly
(IG)
10A
ECU IG
NO. 1
11 1F
P
O
12
IG
D21
Shift Lock Control ECU
E
3
P
E2
SLS+
SLS–
Shift Lock
Solenoid
Main Body ECU
<2–19>
Stop Light Switch Assembly
<9–3>
L
V
11
P2
6
STP
W–B
D4