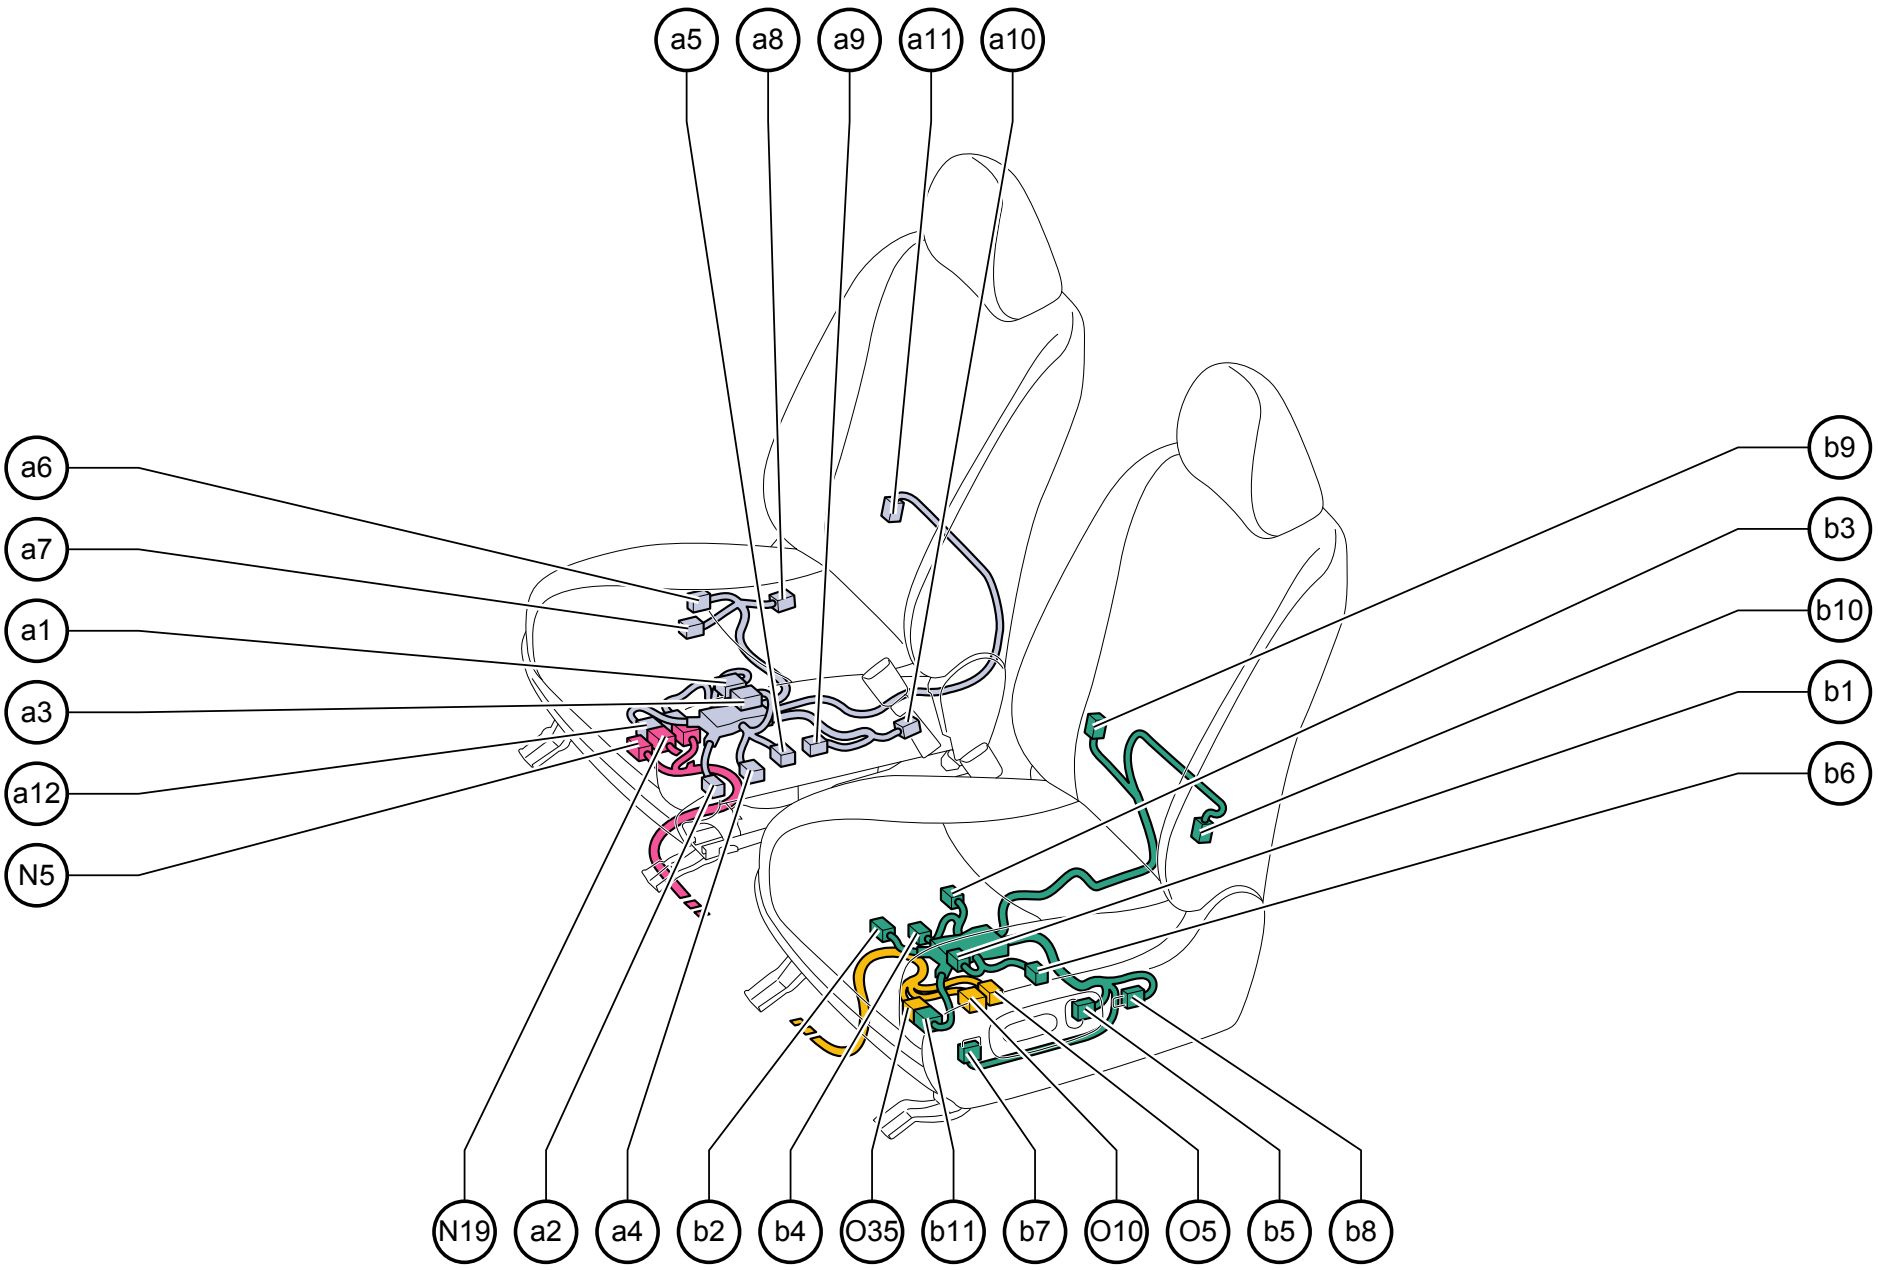

a5
a8
a9
a11
a10
a6
a7
a1
a3
a12
N5
b9
b3
b10
b1
b6
N19
a2
a4
b2
b4
O35
b11
b7
O10
O5
b5
b8


N 5 Side Airbag Squib Circuit RH
N 19 Junction Connector

O 5 Side Airbag Squib Circuit LH
O 10 Front Seat Inner Belt Assembly LH
O 35 Junction Connector


a 1 Occupant Detection ECU
a 2 Front Power Seat Slide Position Motor Assembly RH
a 3 Occupant Detection ECU
a 4 Seat Heater Control Sub-Assembly RH
a 5 Front Seat Inner Belt Assembly RH
a 6 Front Power Seat Switch RH
a 7 Front Out Weight Detection Sensor Sub Assembly
a 8 Rear Out Weight Detection Sensor Sub Assembly
a 9 Front In Weight Detection Sensor Sub Assembly
a 10 Rear In Weight Detection Sensor Sub Assembly
a 11 Front Power Seat Reclining Position Motor Assembly RH
a 12 Junction Connector

b 1 Front Power Seat Vertical Position Motor Assembly LH
b 2 Front Power Seat Slide Position Motor Assembly LH
b 3 Front Power Seat Lift Position Motor Assembly LH
b 4 Seat Heater Control Sub-Assembly LH
b 5 Front Power Seat Switch LH
b 6 Front Power Seat Cushion Control Motor Assembly LH
b 7 Seat Variable Cushion Switch LH
b 8 Lumbar Support Switch LH (Power Seat Switch LH)
b 9 Front Lumbar Support Forward and Back Motor Assembly LH
b 10 Front Power Seat Reclining Position Motor Assembly LH
b 11 Junction Connector

N 5
Yellow

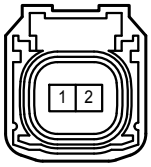

N 19
White

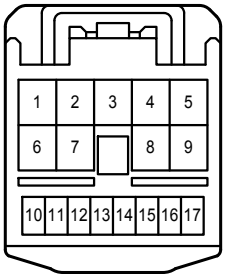


O 5
Yellow




O 10
White




O 35
White

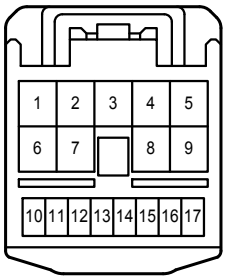


a 1
Gray

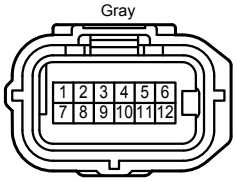

a 2
Black




a 3
Black

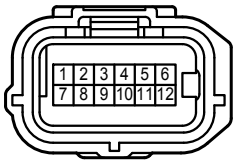


a 4
White




a 5
Gray

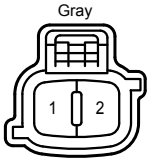


a 6
Black

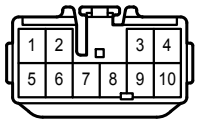


a 7
Gray

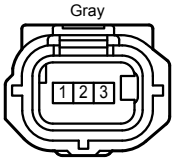


a 8
Black

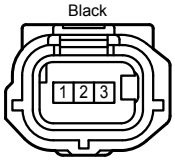

a 9
Black

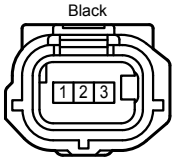


a 10
Gray

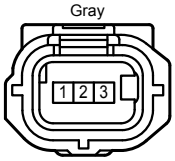


a 11
Black




a 12
White

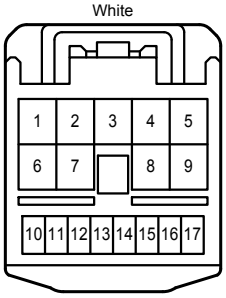


b 1
Black



b 2
Black




b 3
White




b 4
White




b 5
Black

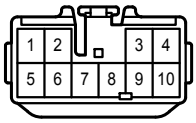


b 6
White




b 7
White

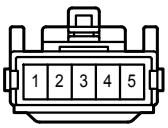


b 8
White

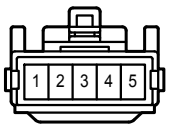

b 9
White



b 10
Black



b 11
White

