■AVC-LAN

1. General


The AVC-LAN is used to transmit data only between the audio head unit, or navigation receiver assembly, stereo amplifier, and the rear display.

2. System Diagram



04E2BE04C

3. Layout of Main Components

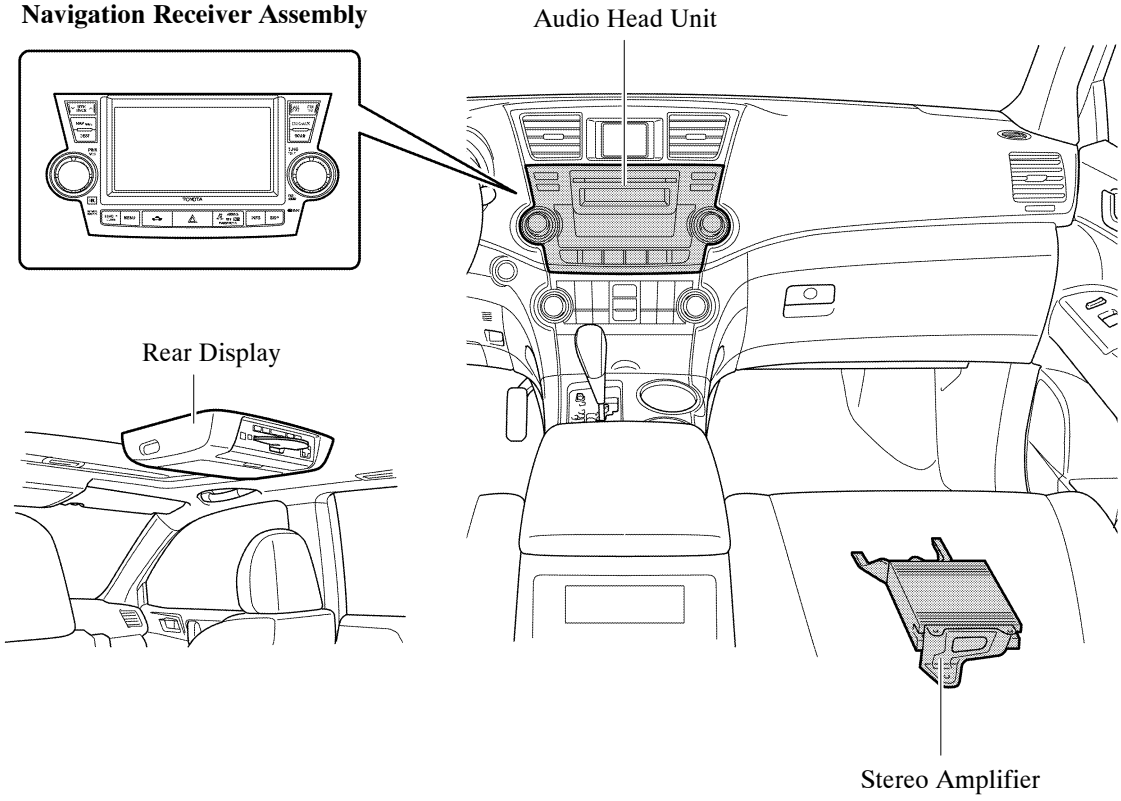

06J0BE05Z

4. Diagnosis

If a malfunction occurs in the AVC-LAN communication bus, the audio head unit stores a DTC (Diagnostic Trouble Code) in its memory.

- The DTCs of models having the navigation with AV system can be read on the diagnosis menu display on the navigation receiver assembly.
- The DTCs of models without the navigation with AV system can be read on the LCD of the audio head unit.

For details, see the 2008 HIGHLANDER HYBRID VEHICLE Repair Manual (Pub. No. RM07V0U).