
■ DAYTIME RUNNING LIGHT SYSTEM

1. General


The daytime running light system is designed to automatically illuminate the headlights (dimmed Lo beam), during the daytime to keep the vehicle highly visible to other vehicles.

- This system is controlled by the main body ECU (instrument panel junction block). The main body ECU (instrument panel junction block) illuminates and dims the Lo beam with the duty control.
- This system is enabled when the conditions given below are met.
  - The power switch is ON.
  - The parking brake switch is OFF.
  - The light control switch is not in the AUTO position (The DRL will operate until the automatic light control system illuminates the headlights.).
  - The light control switch is not in the DRL OFF position. (U.S.A. models)
  - A READY signal is input.
  - The Lo beam is not ON.

2. System Diagram

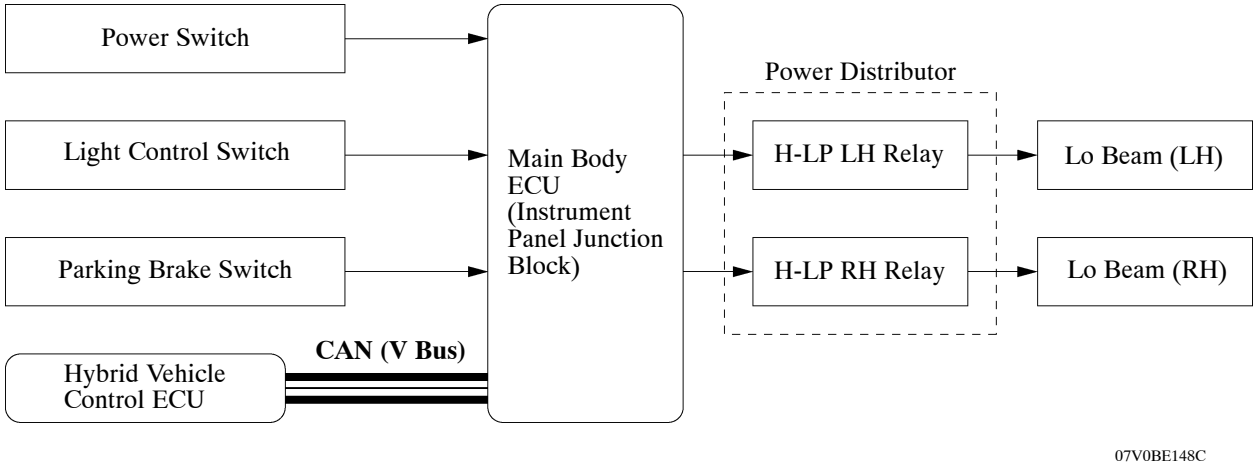



3. Layout of Main Components

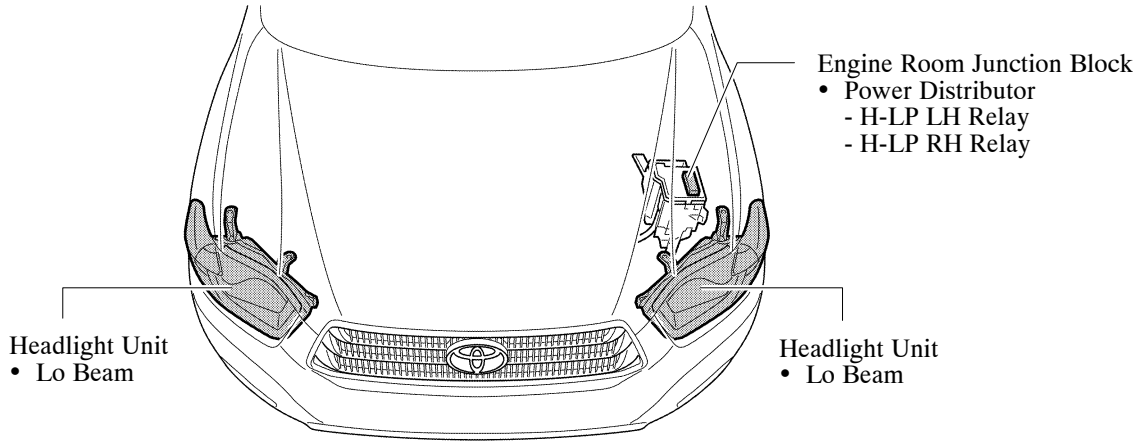

07V0BE104Z

Light Control Switch with Automatic Light Control System

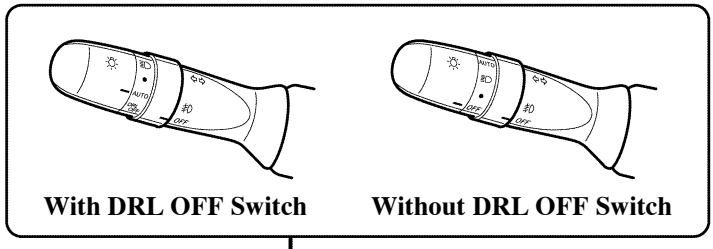

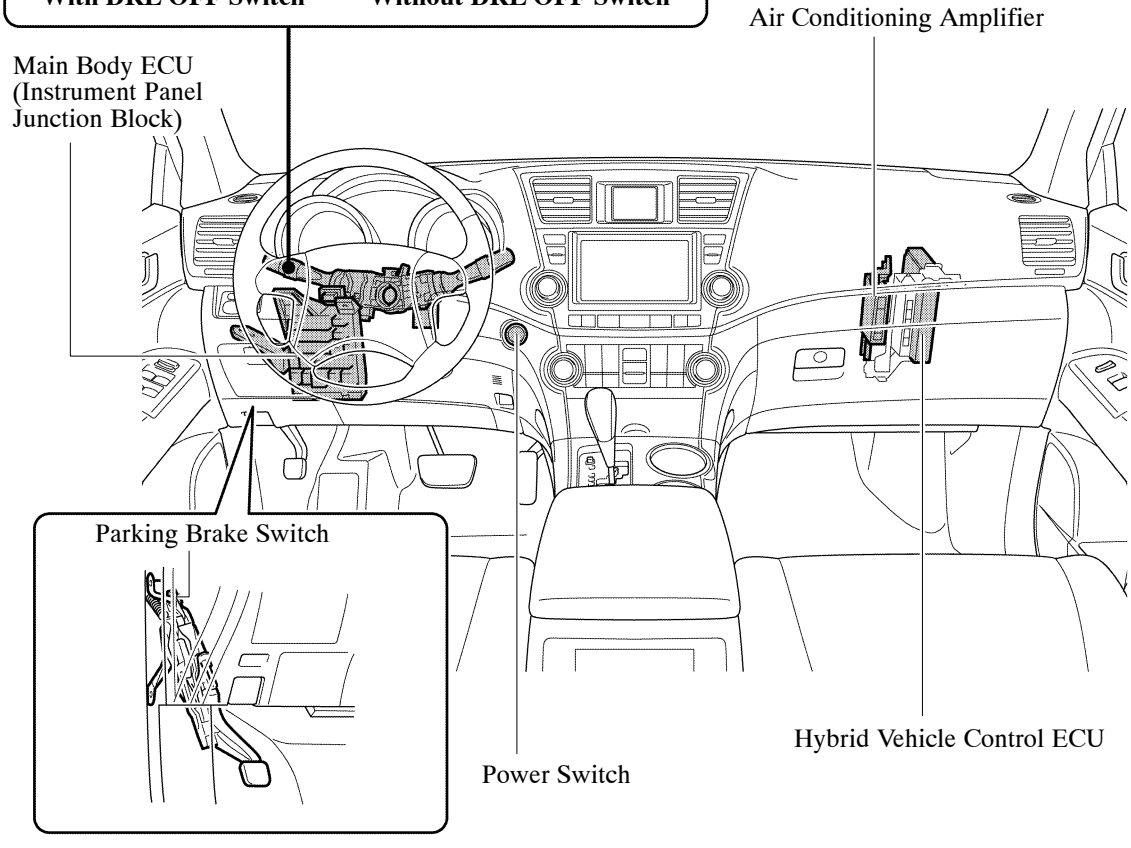

07V0BE105Z

BE