
■LIGHT AUTO TURN-OFF SYSTEM

A light auto turn-off system is used to prevent forgetting to turn off the exterior lights (headlights, taillights, parking lights, license plate lights).

- This system is controlled by the main body ECU (instrument panel junction block).
- This system has the following functions:

Function	Outline
Driver's Door-linked Function	The exterior lights automatically turn off when all of the following conditions have been met: • The power source mode is OFF or ACC. • The driver's door is closed and then opened. • The light control switch is in the TAIL position.
Delay Function	The exterior lights automatically turn off 30 seconds after all of the following conditions have been met: • The power source mode is OFF or ACC. • The driver's door is opened and then closed. • All doors are closed. • The light control switch is in the HEAD position.
Key-linked Function	The exterior lights turn off immediately when the delay function is active and the following condition has been met: • The "LOCK" button of the key is pushed twice within 3 seconds.

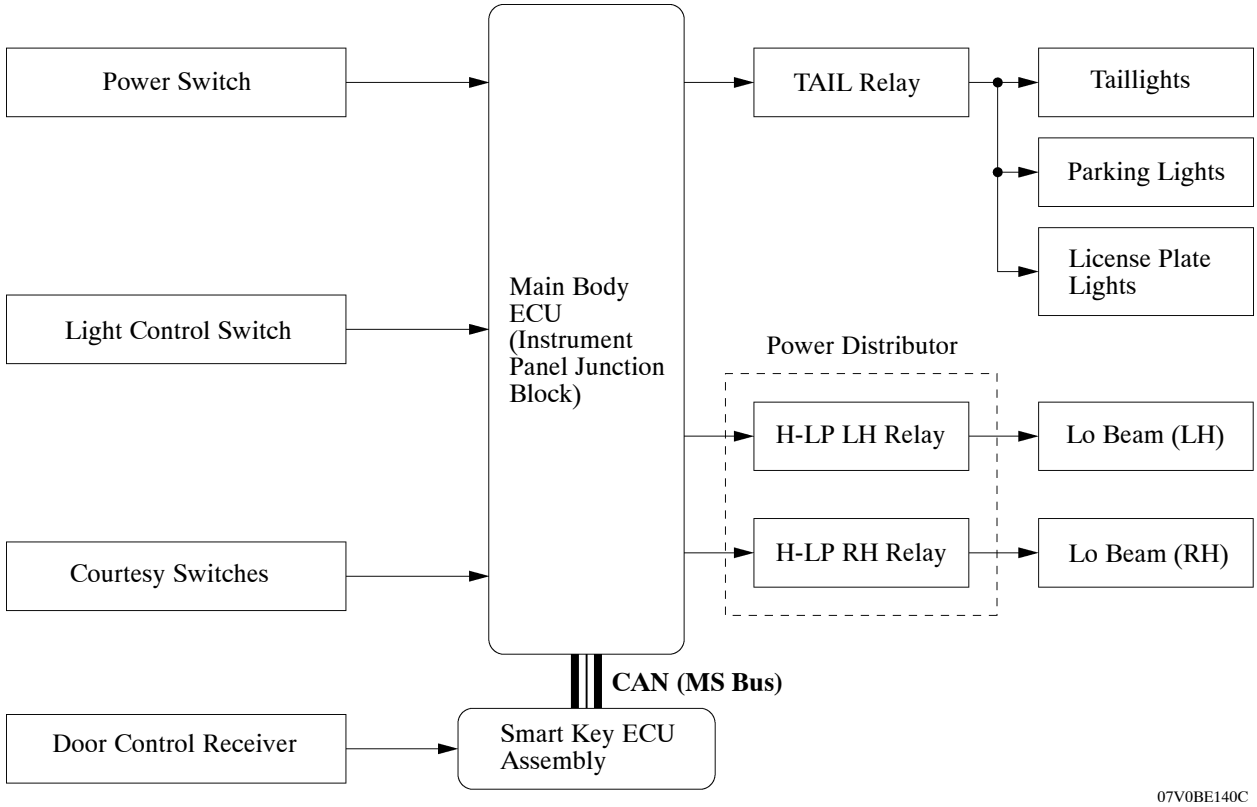

BE