
■SYSTEM OPERATION

The states of the theft deterrent system are as follows:

×: Detected -: Not Detected

State	Description	Theft Detection
Disarmed State	The theft deterrent system is not set by the user.	-
Armed Preparation State	The standby state before the theft deterrent system activates when the system has already set.	-
Armed State	The theft deterrent system is being activated. (Theft can be detected.)	×
Alarm State	Theft has been detected and the warning operation activates.	-

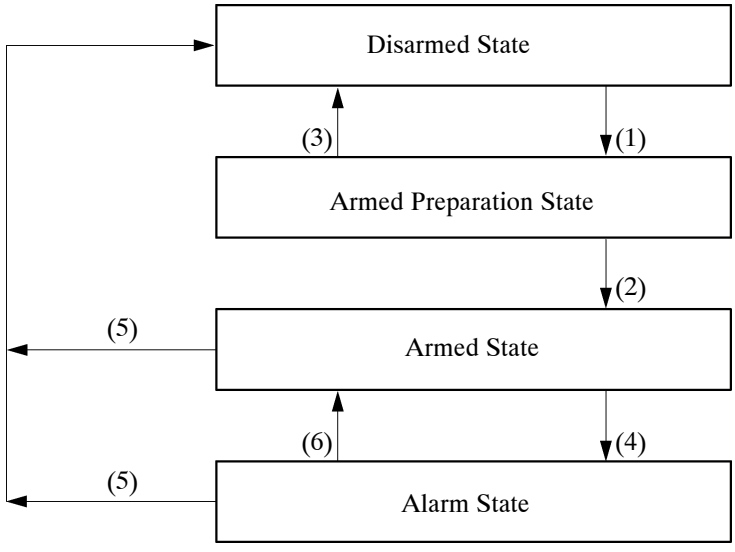

06J0BE130C

BE

The theft deterrent system activates as shown in the diagram above when one of the items for each condition in the chart occurs in order to cause the system to enter the respective state.

Condition	Item
(1)	• Key is in the actuation area. • All doors, engine hood, back door and glass hatch are closed. • All doors are locked using the key lock button, smart key system, or mechanical key.
(2)	The system state is switched when the doors, engine hood, back door and glass hatch are all closed and locked, and 30 seconds have elapsed.
(3)	The system state is switched when one of the following conditions is met. • Any door, engine hood, back door or glass hatch is opened. • Any door, engine hood, back door or glass hatch is unlocked. • The power switch is pushed. • A terminal is disconnected from the auxiliary battery and reconnected.
(4)	The system state is switched when one of the following conditions is met. • With all doors closed, the engine hood, back door, or glass hatch is opened. • With all doors locked, any door is unlocked by a method other than the mechanical key or key. • A terminal is disconnected from the auxiliary battery and reconnected.
(5)	The system state is switched when one of the following conditions is met. • Any door is unlocked with the mechanical key or key. • The power source mode is changed to IG-ON.
(6)	The system state reverts to the armed state after the alarm time (60 seconds) elapses.