
CRUISE CONTROL SYSTEM

■DESCRIPTION

- Once the cruise control system is set to the desired vehicle speed, the hybrid vehicle control ECU controls the throttle valve and MG ECU to automatically regulate the motive force to maintain the set vehicle speed without any accelerator pedal operation.
- This system is controlled by the hybrid vehicle control ECU, and is standard equipment on all models.

■SYSTEM DIAGRAM

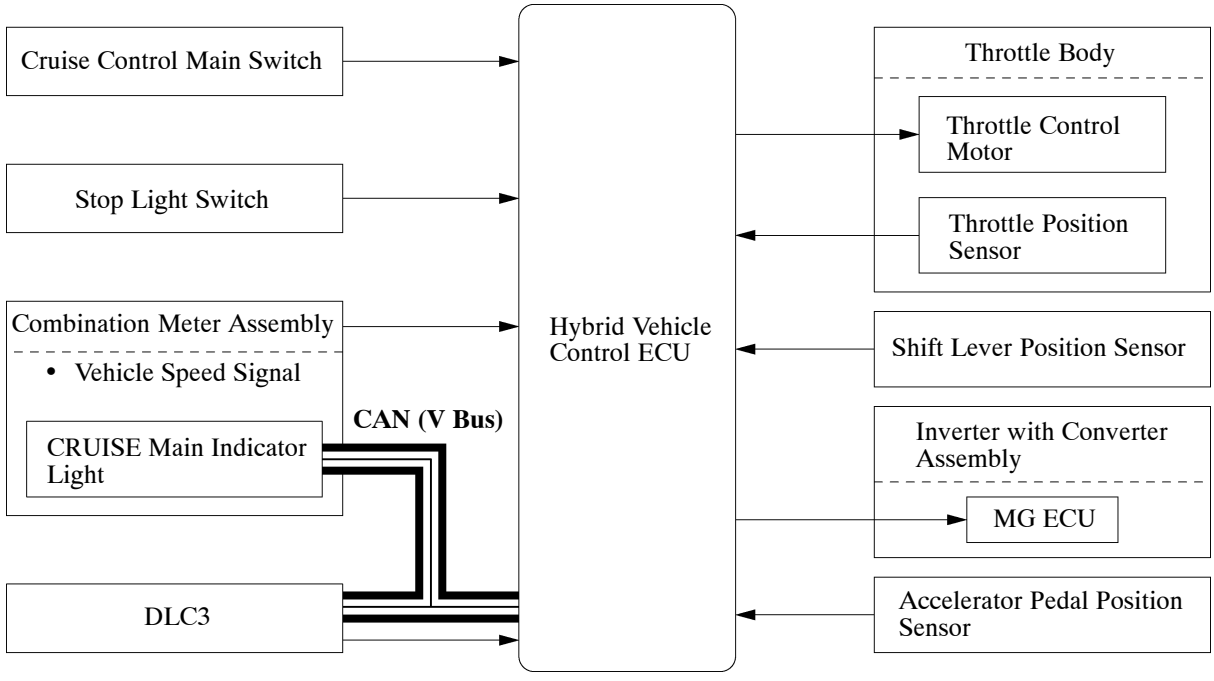

07V0BE151C