
■ MIRROR HEATER

1. General

The mirror heaters use a heater element in both outside rear view mirrors to help to defog them.


- The mirror heaters are controlled by the Air Conditioning Amplifier.
- The mirror heater operates at the same time as the rear defogger system.
- This system is activated when the power source is turned IG-ON, and rear defogger & mirror heater switch is pushed. The Air Conditioning Amplifier activates to keep the mirror heater ON for approx. 15 minutes.

2. System Diagram

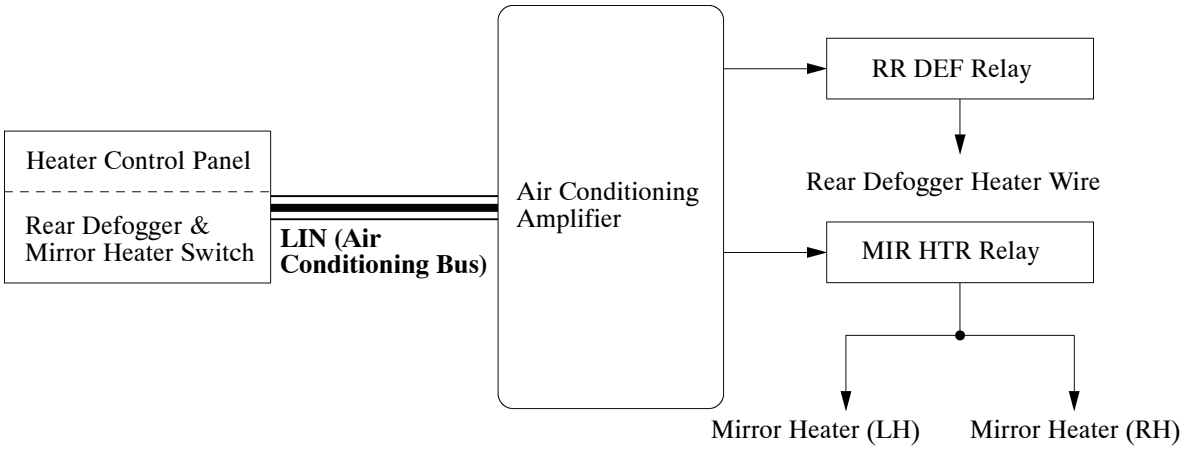


06J0BE154C

3. Layout of Main Components

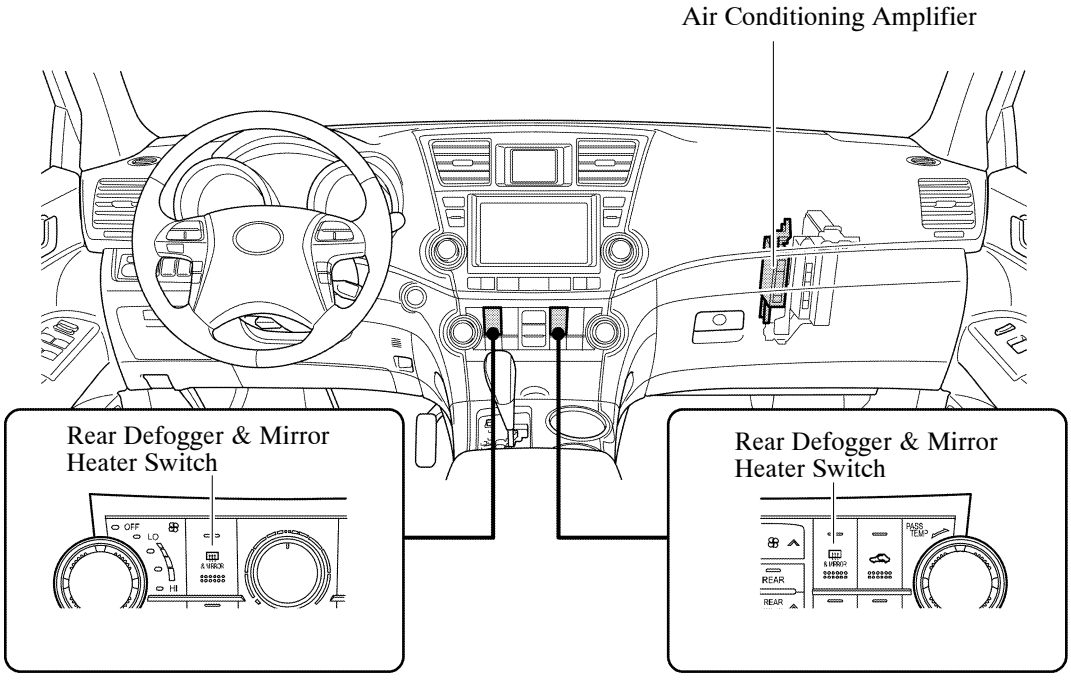

06J0BE39Z

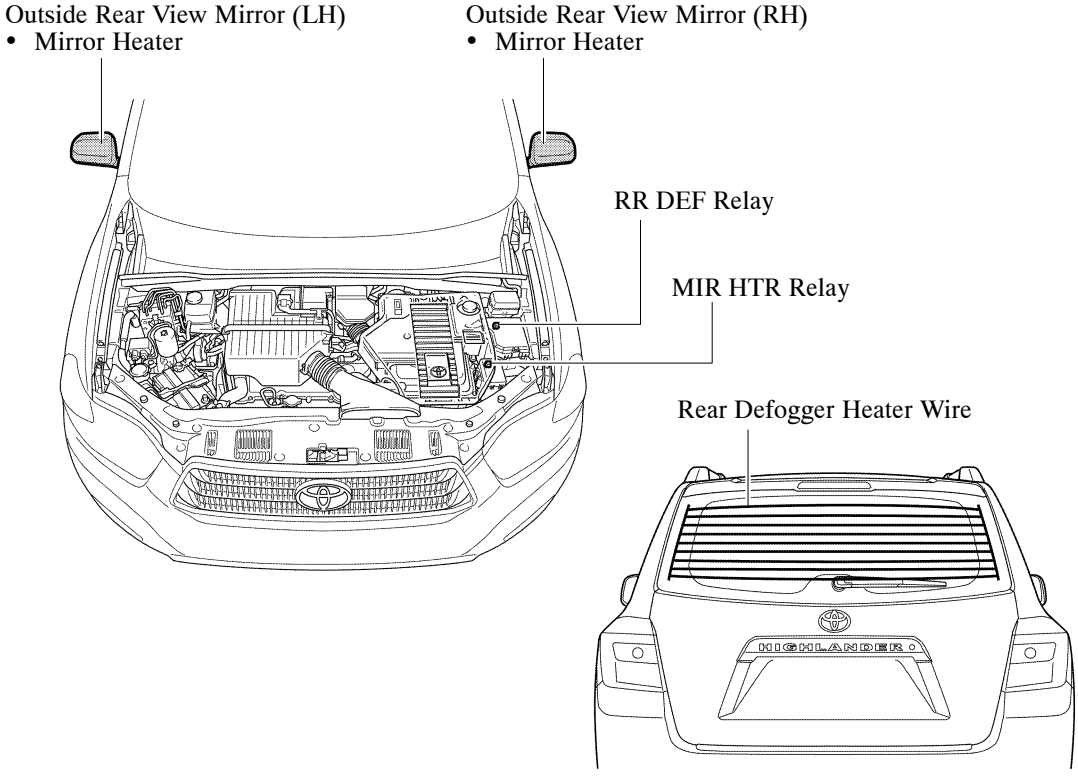

07V0BE38Z

BE