
SEAT HEATER SYSTEM

■ DESCRIPTION

The seat heater system can steplessly adjust the temperature of the seat surface between 38°C (100°F) and 42°C (108°F) through the operation of a dial-type heater switch.

- A thermostat controls the temperature of the seat surface.
- This system is optional equipment on the driver and front passenger seats.

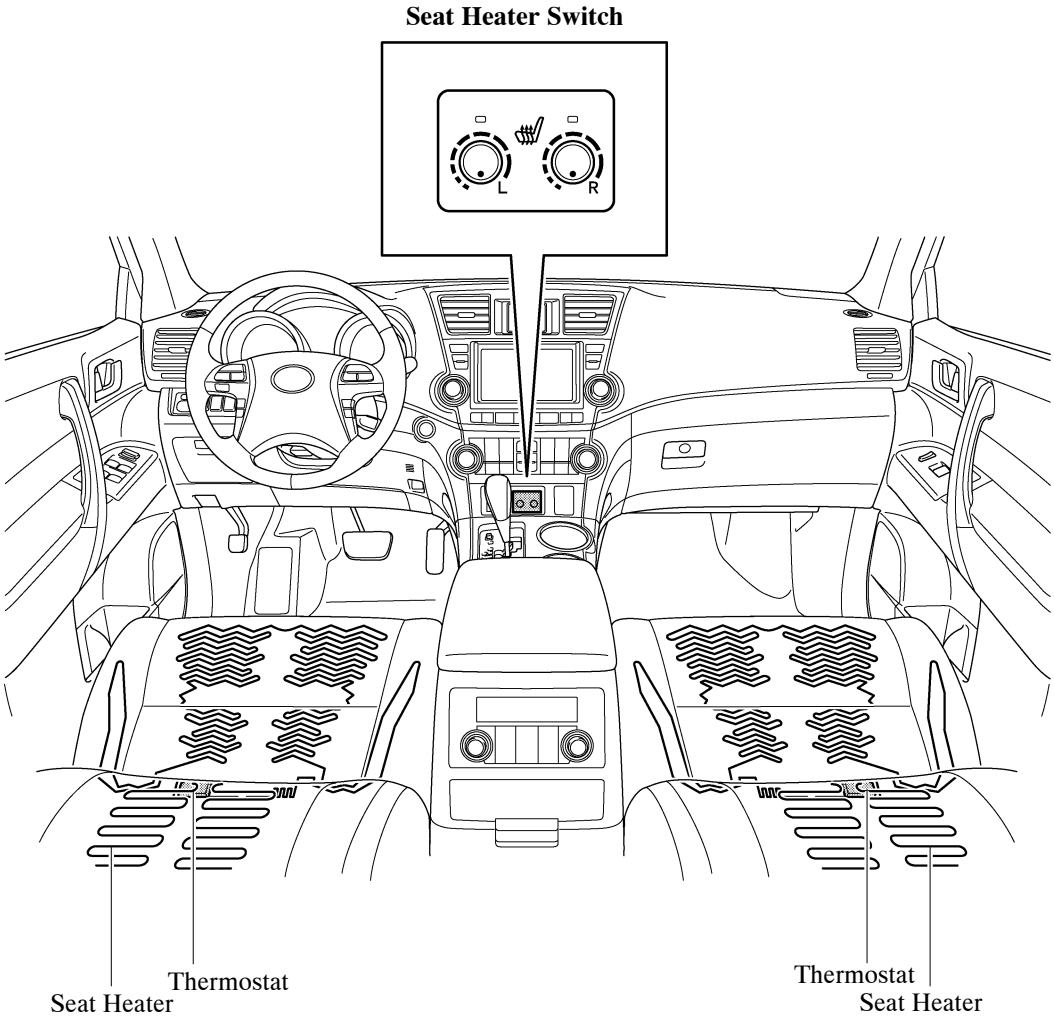

06J0BE33Z