■SEAT BELT

1. General


The following types of seat belts are provided.

Seat	Seat Belt Type	Remarks
Driver Seat	3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter
Front Passenger Seat	3-point ELR*1 & ALR*2	Electrical Sensing Type Pretensioner & Force Limiter
2nd-row Seat and 3rd-row Seat	3-point ELR*1 & ALR*2	—

*1: Emergency Locking Retractor *2: Automatic Locking Retractor

2. Pretensioner and Force Limiter

In accordance with the ignition signal from the Center Airbag Sensor Assembly, the seat belt pretensioners activate simultaneously with the deployment of SRS airbags for a frontal collision.
In the beginning of the collision if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.

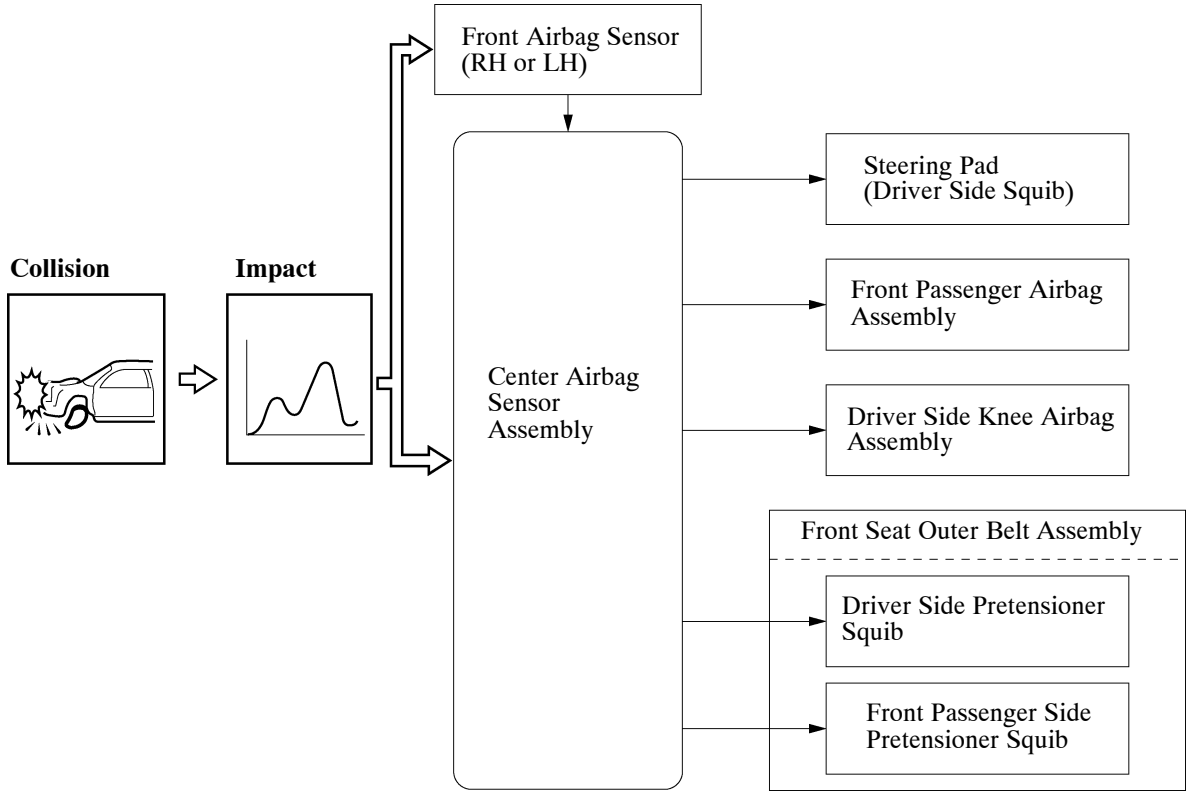

06J0BO11C

BO