
■SHIFT LOCK SYSTEM

The shift lock system uses the shift lock ECU to control the shift lock function.

- The shift lock function prevents the shift lever from being shifted from the P position, unless the power switch is on (IG or READY) and the brake pedal is pressed.
- A concealed shift lock override button allows for a manual override of the shift lock system if this is necessary.

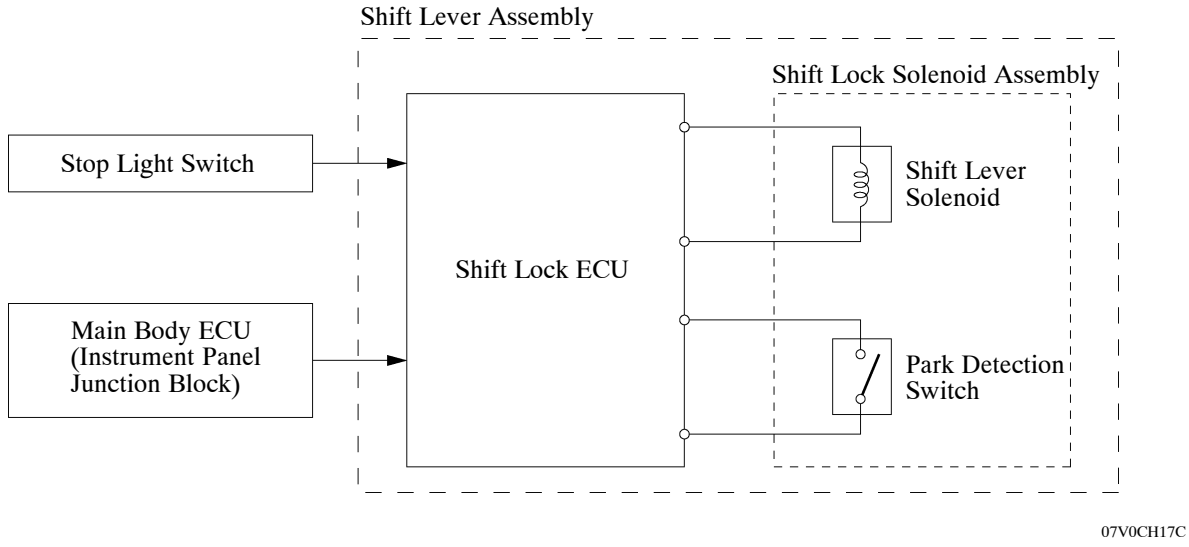

07V0CH17C