




(BAT)
7. 5A
DOME
(BAT)
7. 5A ECU–B (*6)
10A ECU–B (*7)
(BAT)
25A
DOOR
R
R–B
R–L
R–L
G–Y
W–B
W–B
L
LG
R–B
R–L
R–L
G–Y
W–B
12 2L
4 2H
27 2O
31 2O
15 2O
10 2O
18 2D
9 2D
4 BECU
5 ALTB
16 DCTY
13 PCTY
17 KSW
1 GND
Integration Relay
RDA
PRG
HAZ
LSWD
ACT+
ACT–
12
10
18
8
3
2
8 2J
25 2Q
24 2S
2 2D
5 2D
25 2O
7 2D
28 2R
27 2R
V–R
G–W
G–O
L–R
L
L–Y
3 IH1
1 IH1
8 IH1 (*8)
2 IH1 (*9)
5 +B
2 RDA
3 PRG
GND
1
D12
Door Control Receiver
8
HAZ
T22
Turn Signal
Flasher
J24(A), J25(B)
Junction
Connector
5 A
7 B
L(*2)
L–Y(*2)
L(*3)
L–Y(*3)
R–Y
(*12)
R–Y(*13)
BR
(*4)
BR
(*5)
7 A
8 A
11 A
12 A
3 A
12 B
7 B
4 B
J26(A), J27(B)
Junction
Connector
1
F12
Front Seat
Inner Belt
(Driver' s Side)
2
W–B
(LHD)
W–B
(RHD *13)
11 A
12 B
11 B
J20(A), J21(B)
Junction
Connector
W–B
BR
(*5)
8 A
7 B
4 A
4 B
1 A
1 B
7 A (LHD)
8 B (RHD)
Unlock
Detection
M
D 6(A), (B)
Door Lock Assembly (Driver' s Side)
W–B
(*12)
2
3
J28
Junction
Connector
J15
Junction Connector
ID
IG
IF


R
R–B
R–L
R–L
G–Y
W–B
W–B
R
R–B
R–L
R–L
G–Y
W–B
∗ 1 : Double Cab
∗ 2 : Double Cab LHD
∗ 3 : Double Cab RHD
∗ 4 : 2KD–FTV
∗ 5 : Except 2KD–FTV
∗ 6 : Before Aug. 2008 Production
∗ 7 : From Aug. 2008 Production
∗ 8 : LHD, RHD Before Aug. 2008 Production
∗ 9 : RHD From Aug. 2008 Production
∗12 : w/ Power Seat
∗13 : w/o Power Seat
11 2K
10 2K
L
L–Y
L(∗2)
L–Y(∗2)
L(∗3)
L–Y(∗3)
R–Y
(∗12)
W–B
(∗12)
R–Y(∗2)
R(∗2)
R
(∗3)
R–Y
(∗3)
L–Y(∗2)
R(∗3)
L(∗2)
16 A
17 A
11 B
10 B
J55(A), J56(B)
Junction
Connector
F29
Front Seat Inner Belt
(Driver' s Side)
1
2
5 BC1
4 BC1
8 A
7 A
10 A
11 A
10 B
7 B
J13(A), J14(B)
Junction
Connector
5 BB1
4 BB1
L–Y
(∗1)
L
(∗1)
R
R–Y
W–B
M
D 9
Door Lock Assembly
(Rear RH)
D 7
Door Lock Assembly
(Front Passenger' s Side)
D 8
Door Lock Assembly
(Rear LH)
IE


R
R–B
R–L
R–L
G–Y
W–B
(IG)
7. 5A
MET
1
2D
B–O
R–B
R
15
1
21
CPU
C 8
Combination Meter
R–L
R–L
13
14
IA1
IA1
(*10)
(*11)
17
22
16
R–L
Y
R–B
R–L
(*1)
R–L
(Except *1)
J29
Junction Connector
11
3
8
10
3
4
IA1
IA1
(*10)
(*11)
G–Y
R–L
(*1)
R–L
(*1)
R–L
(*1)
R–L(LHD)
R–B
(RHD)
1
2
U 1
Unlock Warning SW
D 3
Door Courtesy SW
(Front Passenger' s Side)
D 4
Door Courtesy SW
(Rear LH)
D 5
Door Courtesy SW
(Rear RH)
10
A
11
B
12
B
J22(A), J23(B)
Junction
Connector
D 2
Door Courtesy SW
(Driver' s Side)
GR
GR
W–B
W–B
ID
* 1 : Double Cab
*10 : LHD Before Aug. 2008 Production, RHD
*11 : LHD From Aug. 2008 Production

C 8
White

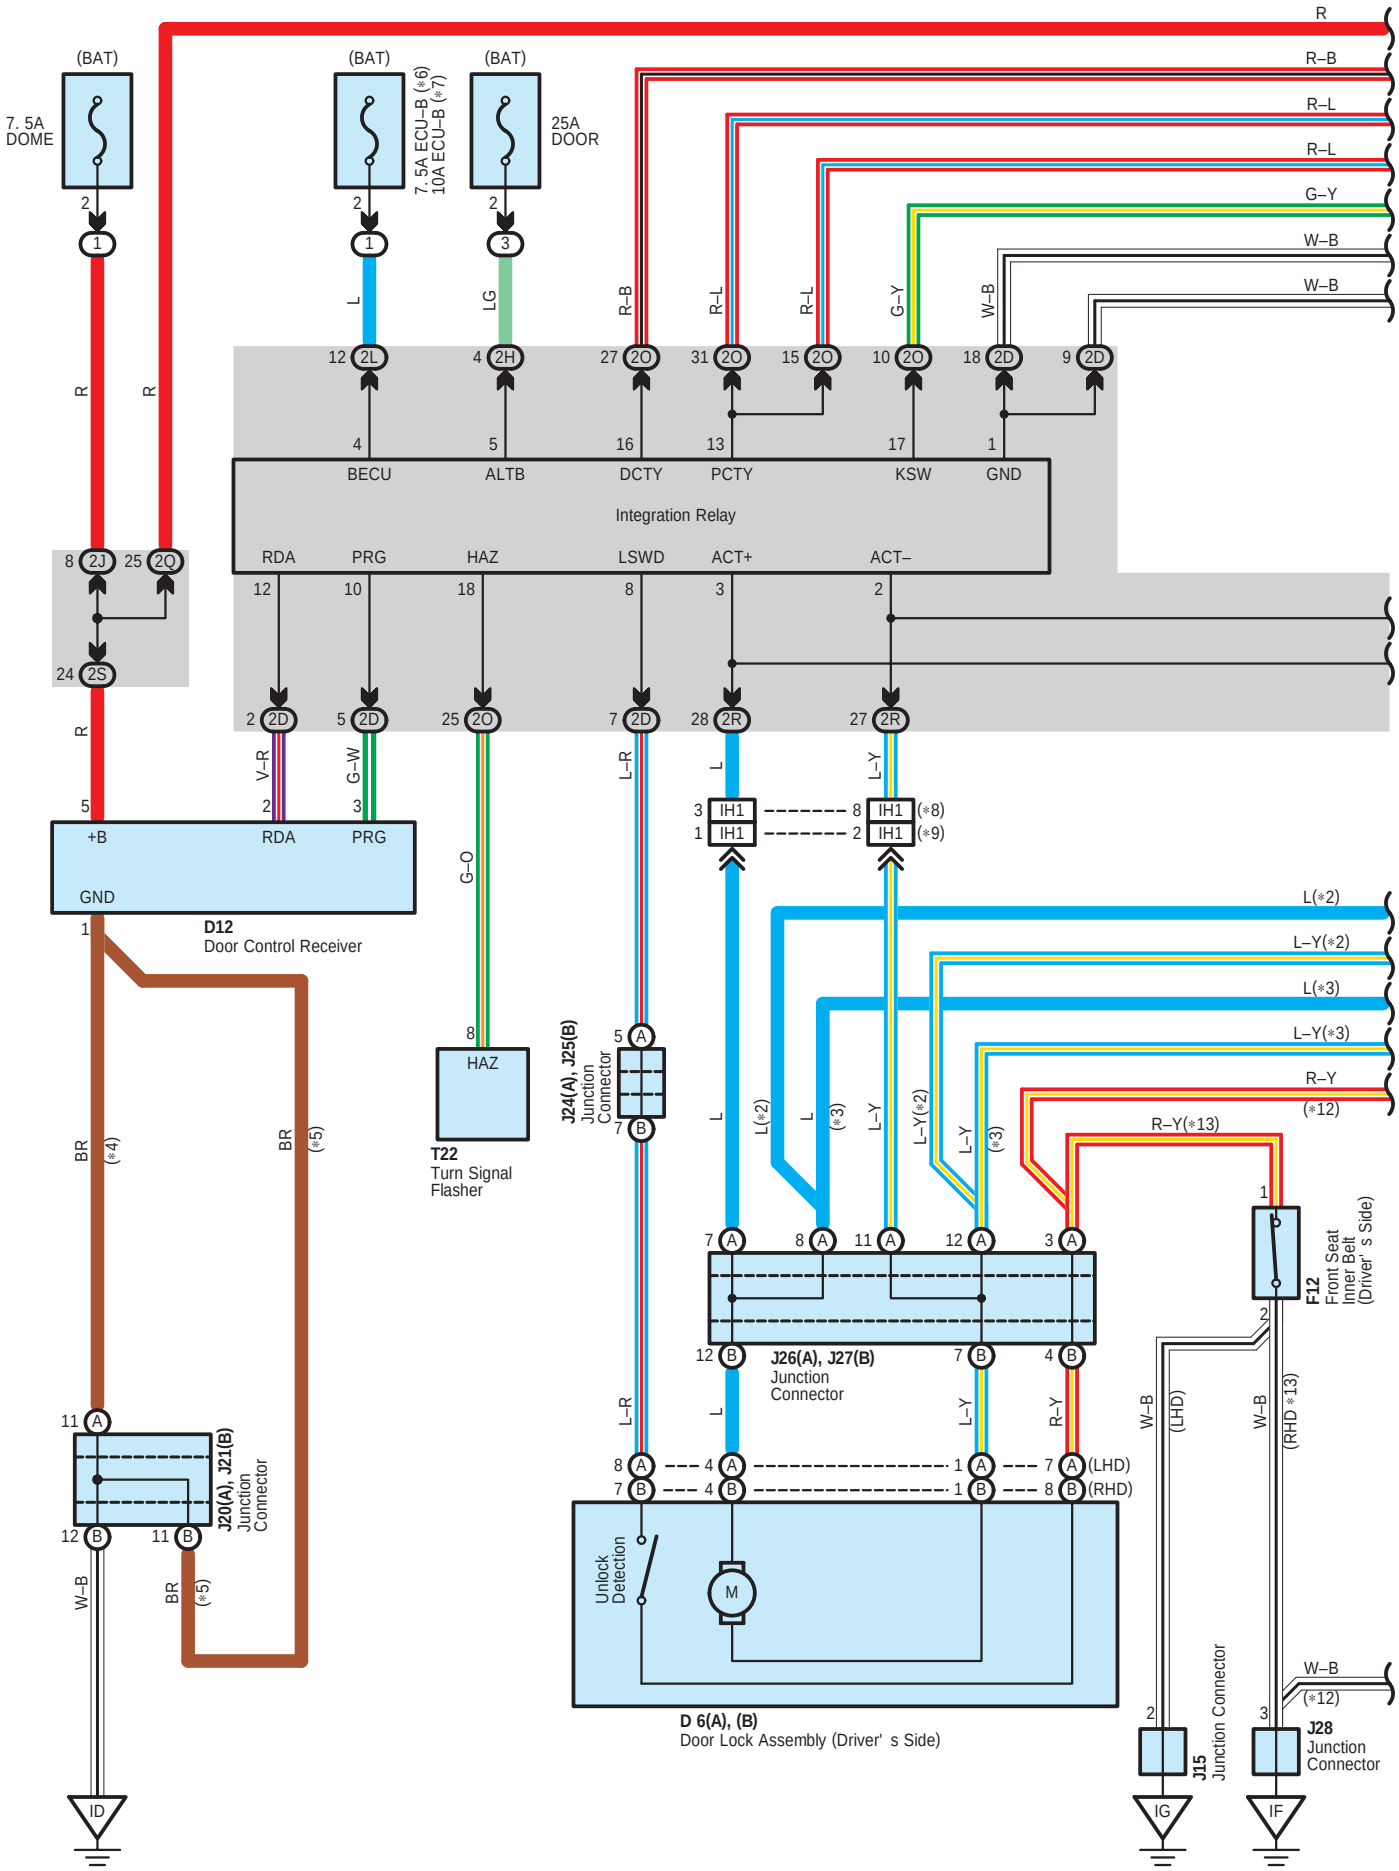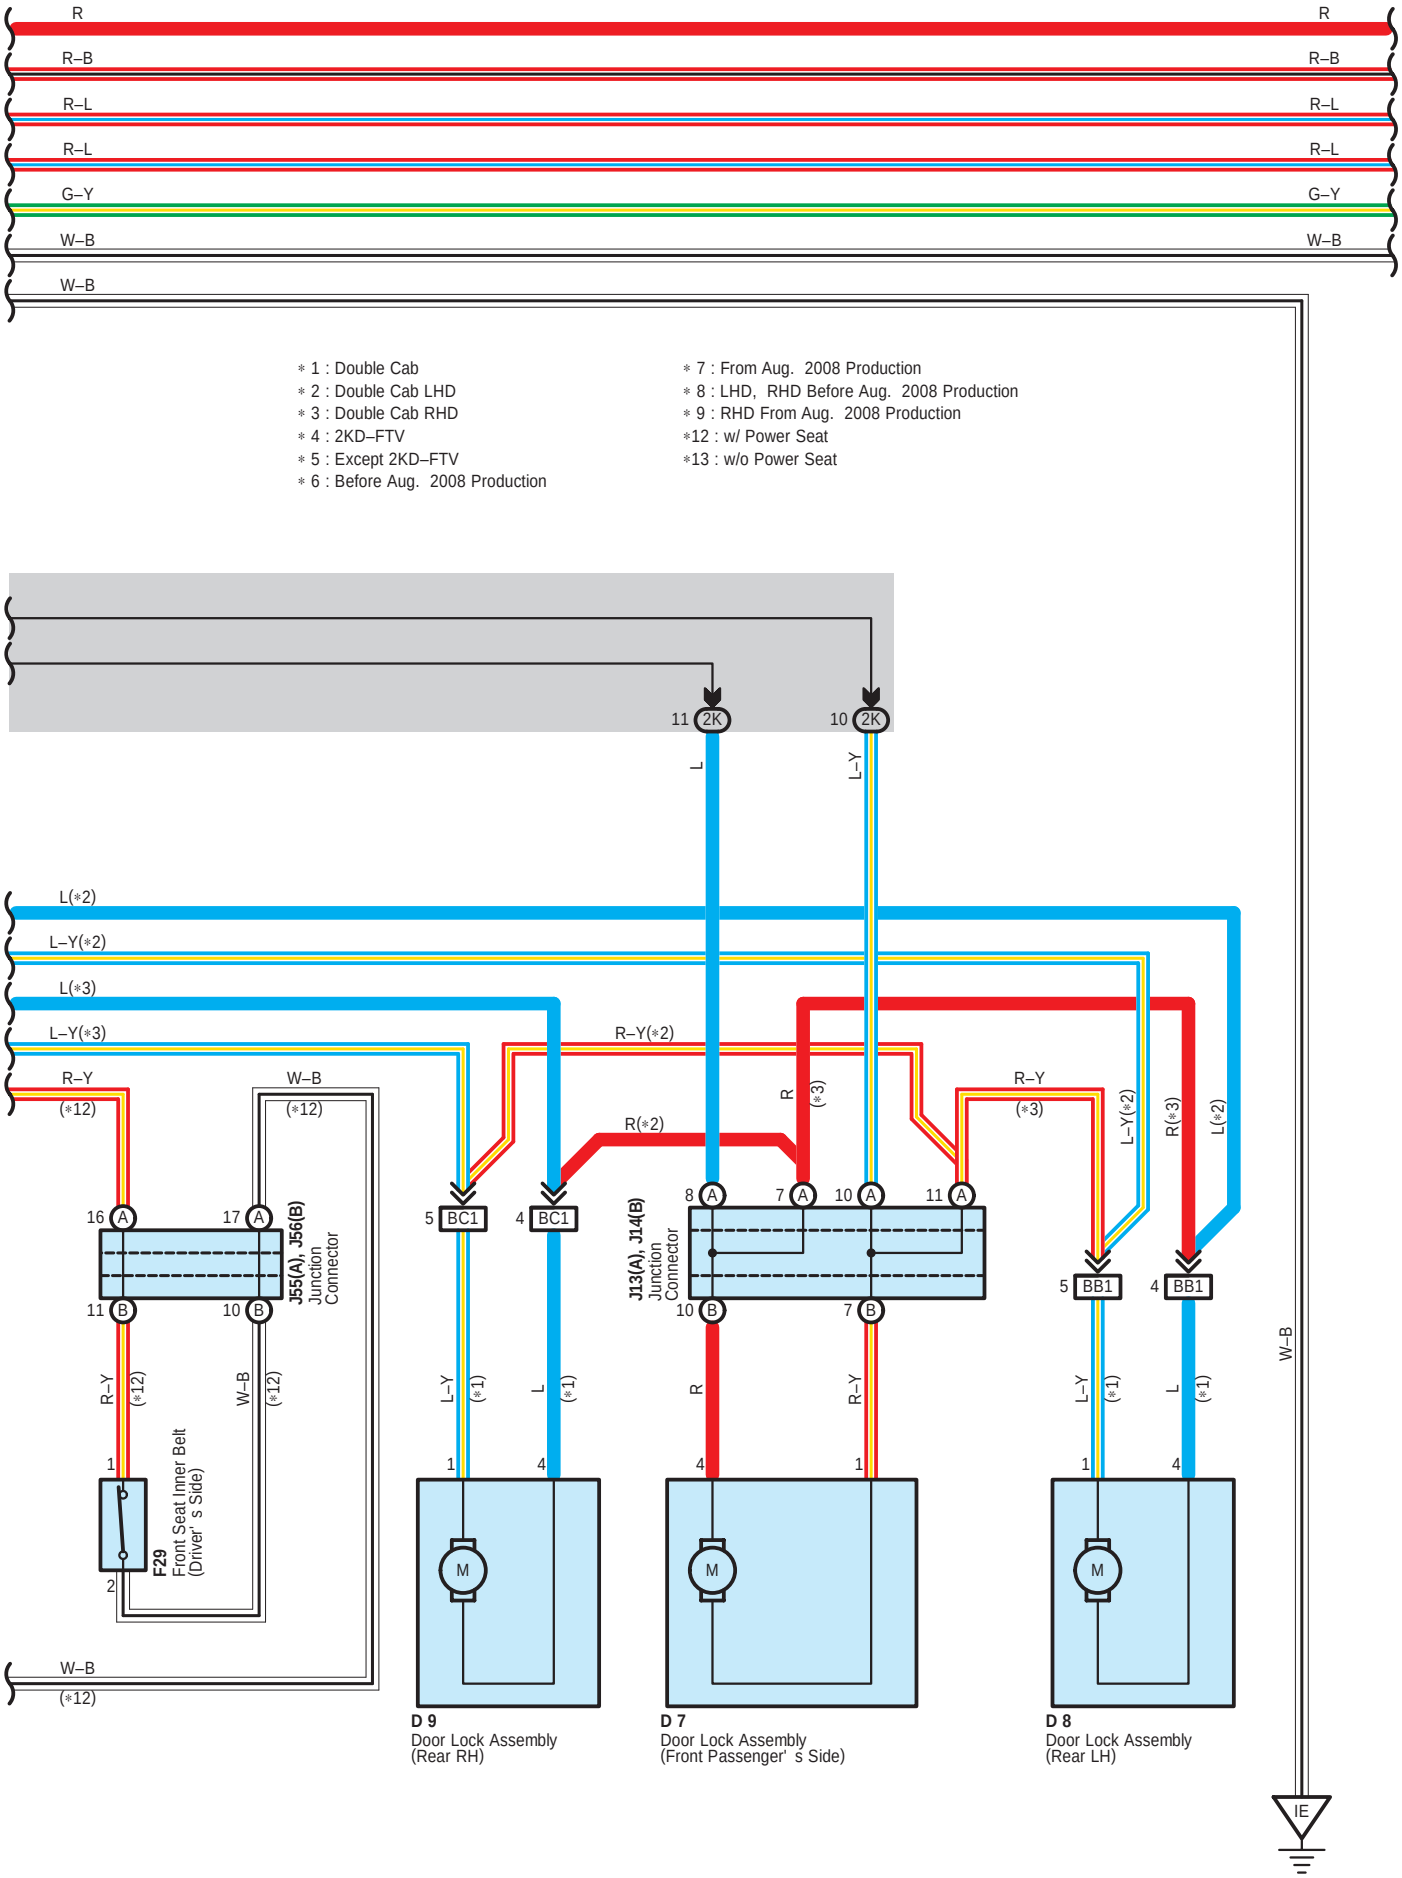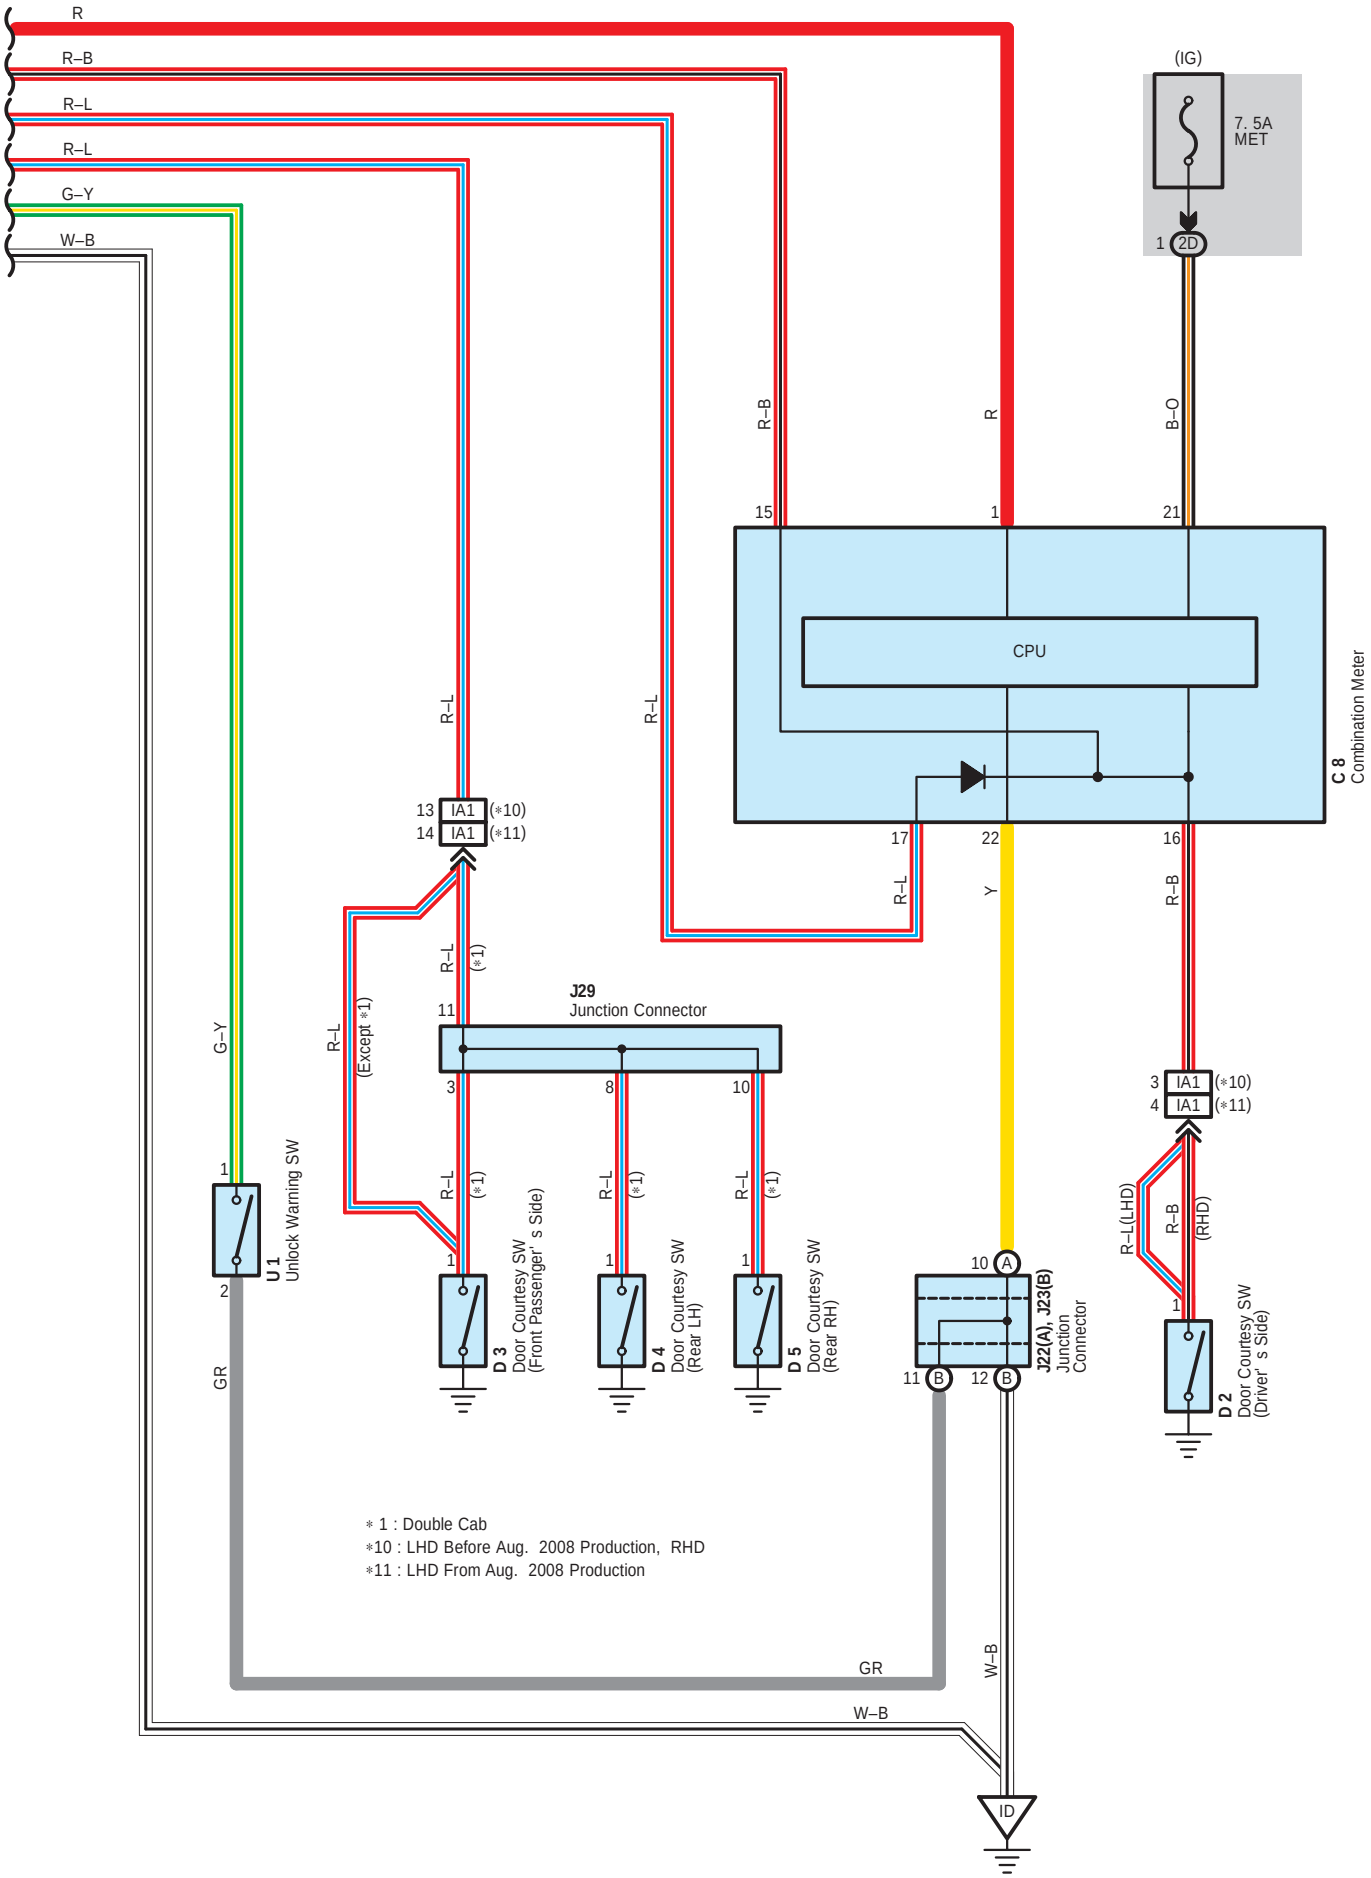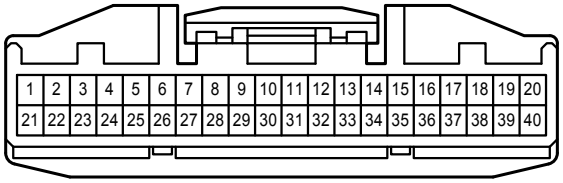

D 2
White



D 3
White



D 4
White




D 5
White




D 6
White




D 7
White

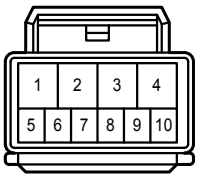


D 8
White

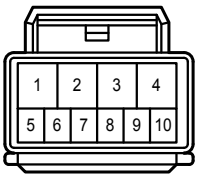


D 9
White

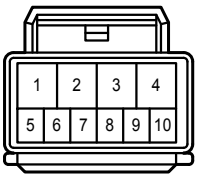


D 12
White

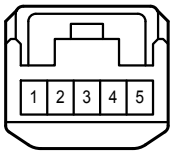


F 12
White




F 29
White

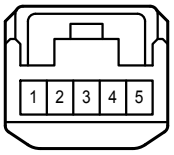


J 13
Black

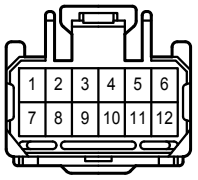


J 14
Black

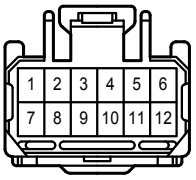


J 15
White

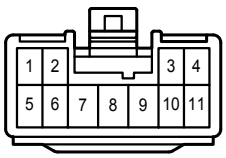


J 20
White

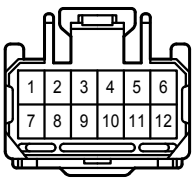


J 21
White

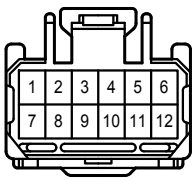


J 22
White

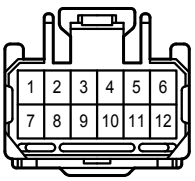


J 23
White

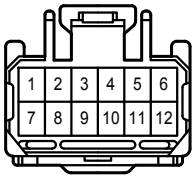


J 24
Blue

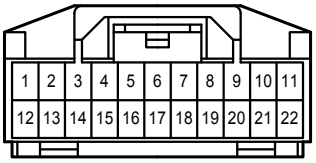


J 25
Blue

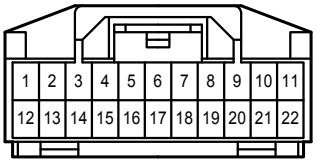


J 26
Black

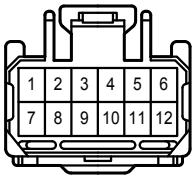


J 27
Black

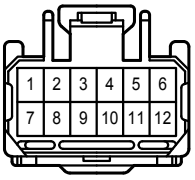


J 28
White

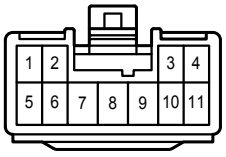


J 29
White

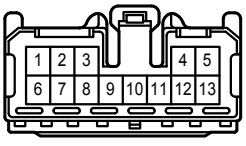


J 55
White

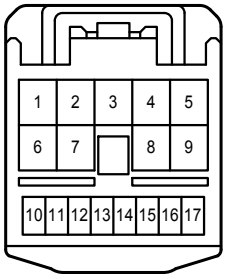


J 56
White

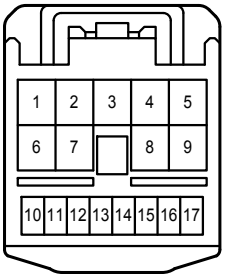


T 22
Black




U 1
White




2D
White

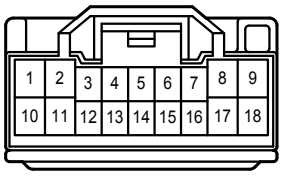


2H
White

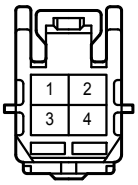


2J
White

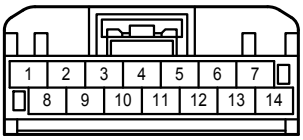


2K
Black

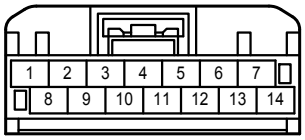


2L
Black

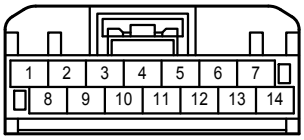


2O
White

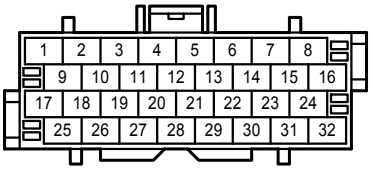


2Q
Gray

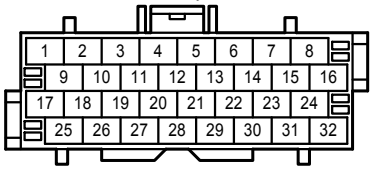


2R
Gray

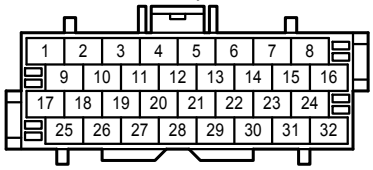


2S
White

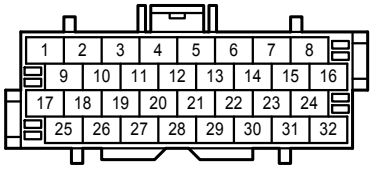


BB1
White

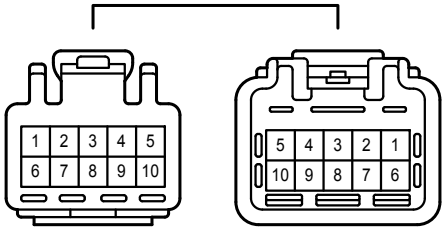


BC1
White

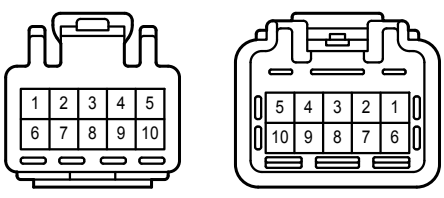

IA1
White

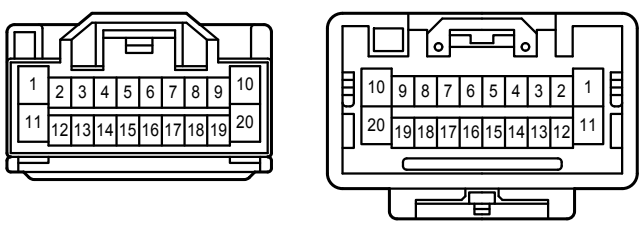

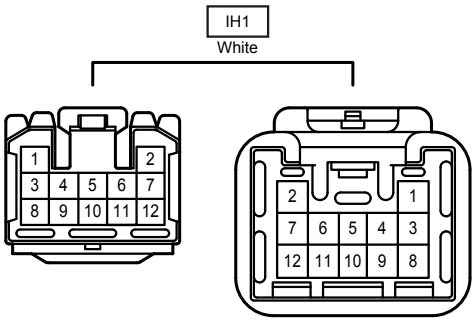
IH1
White
1
2
3
4
5
6
7
8
9
10
11
12
2
1
7
6
5
4
3
12
11
10
9
8