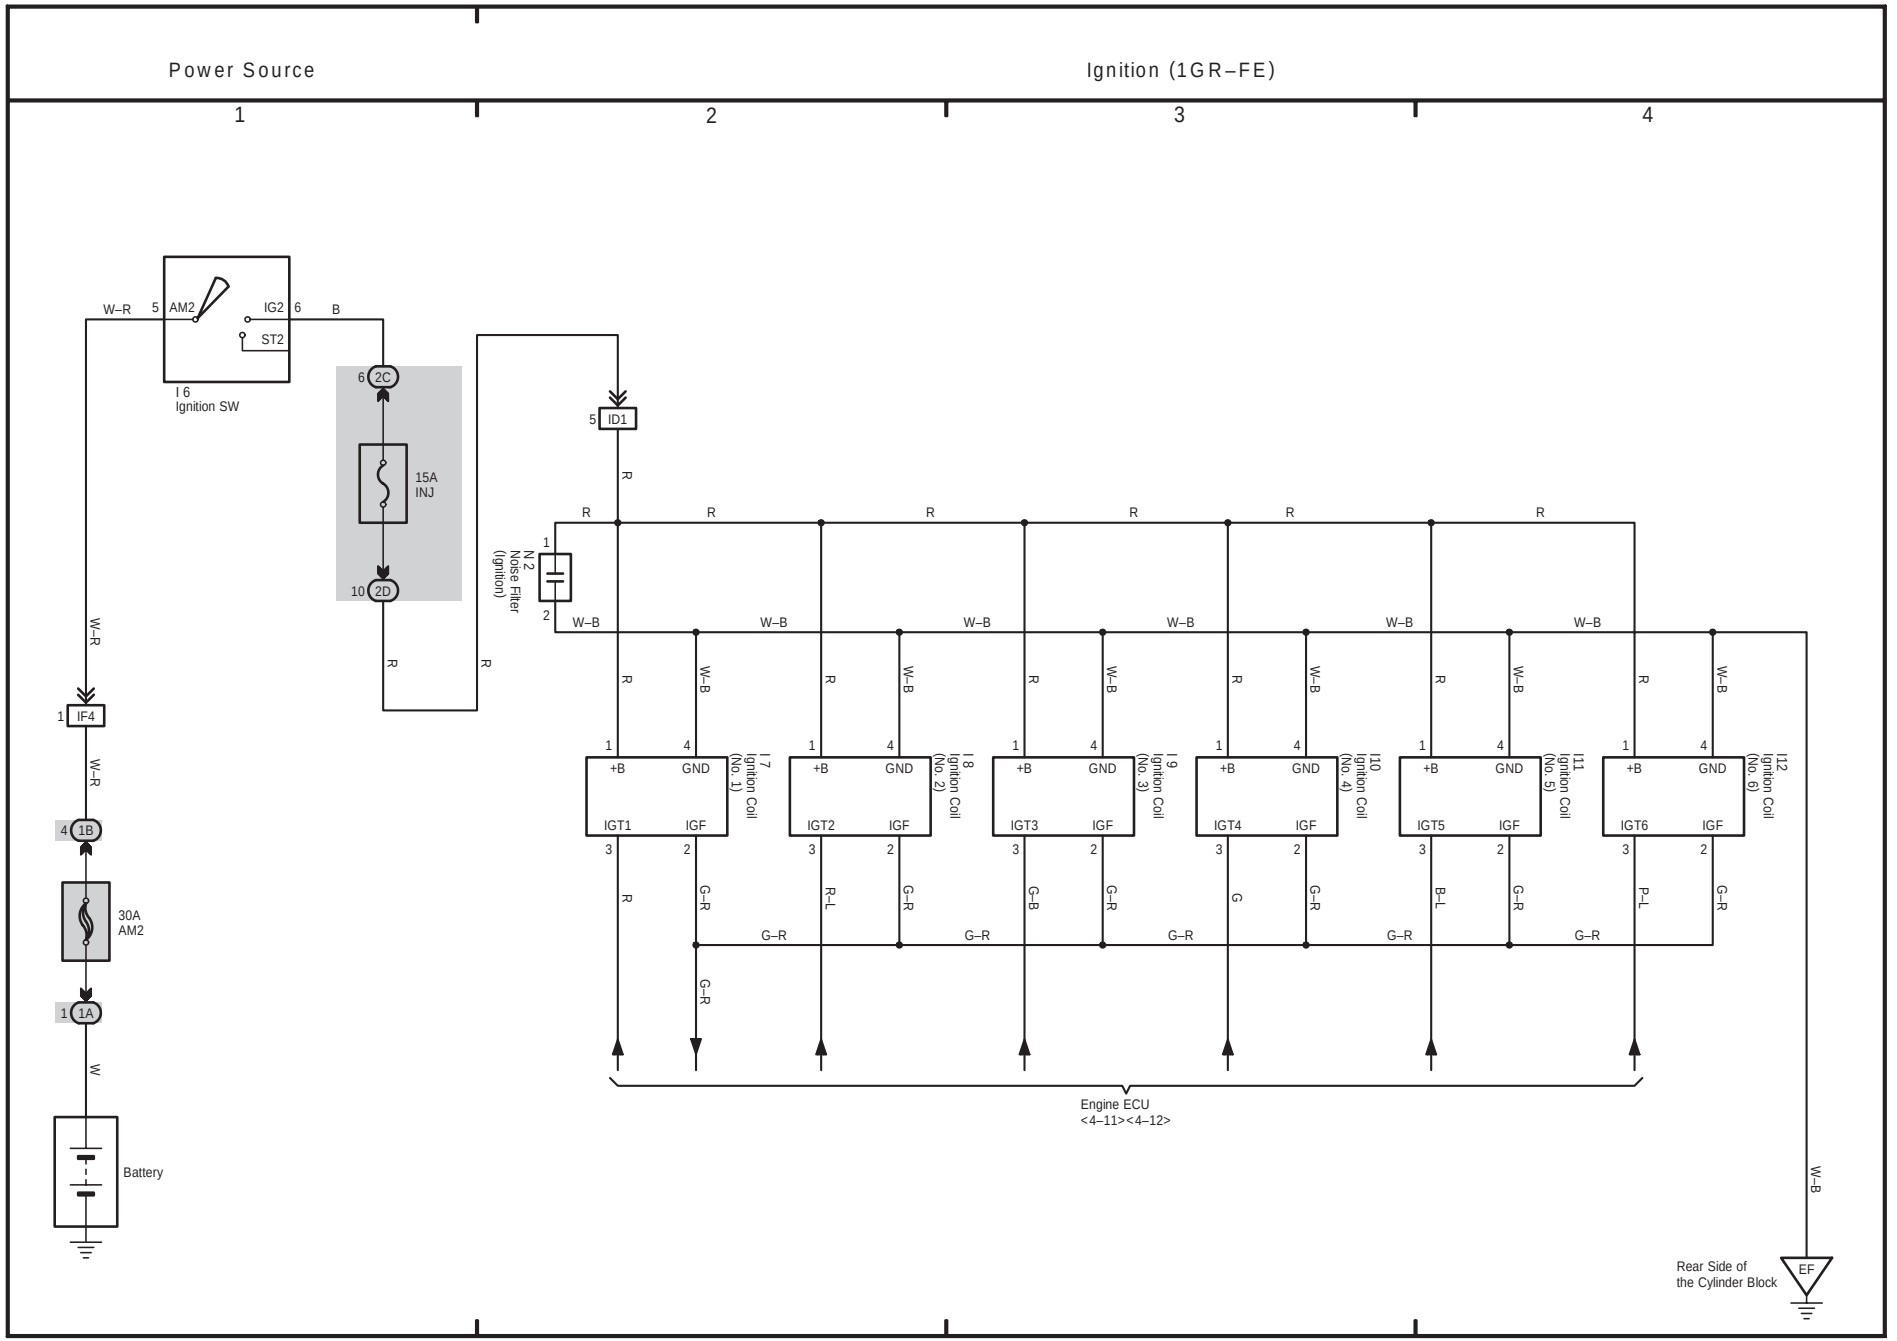

Power Source
Ignition (1GR–FE)
1
2
3
4
W–R
5 AM2
IG2 6 B
ST2
I 6
Ignition SW
6 2C
10 2D
15A
INJ
5 ID1
R
1
2
N.2
Noise Filter
(Ignition)
W–B
1 IF4
4 1B
30A
AM2
1 1A
W
Battery
+B
GND
IGT1
IGF
I 7
Ignition Coil
(No. 1)
IGT2
I 8
Ignition Coil
(No. 2)
IGT3
I 9
Ignition Coil
(No. 3)
IGT4
I10
Ignition Coil
(No. 4)
IGT5
I11
Ignition Coil
(No. 5)
IGT6
I12
Ignition Coil
(No. 6)
G–R
R–L
G–B
G
B–L
P–L
Engine ECU
<4–11><4–12>
Rear Side of
the Cylinder Block
EF