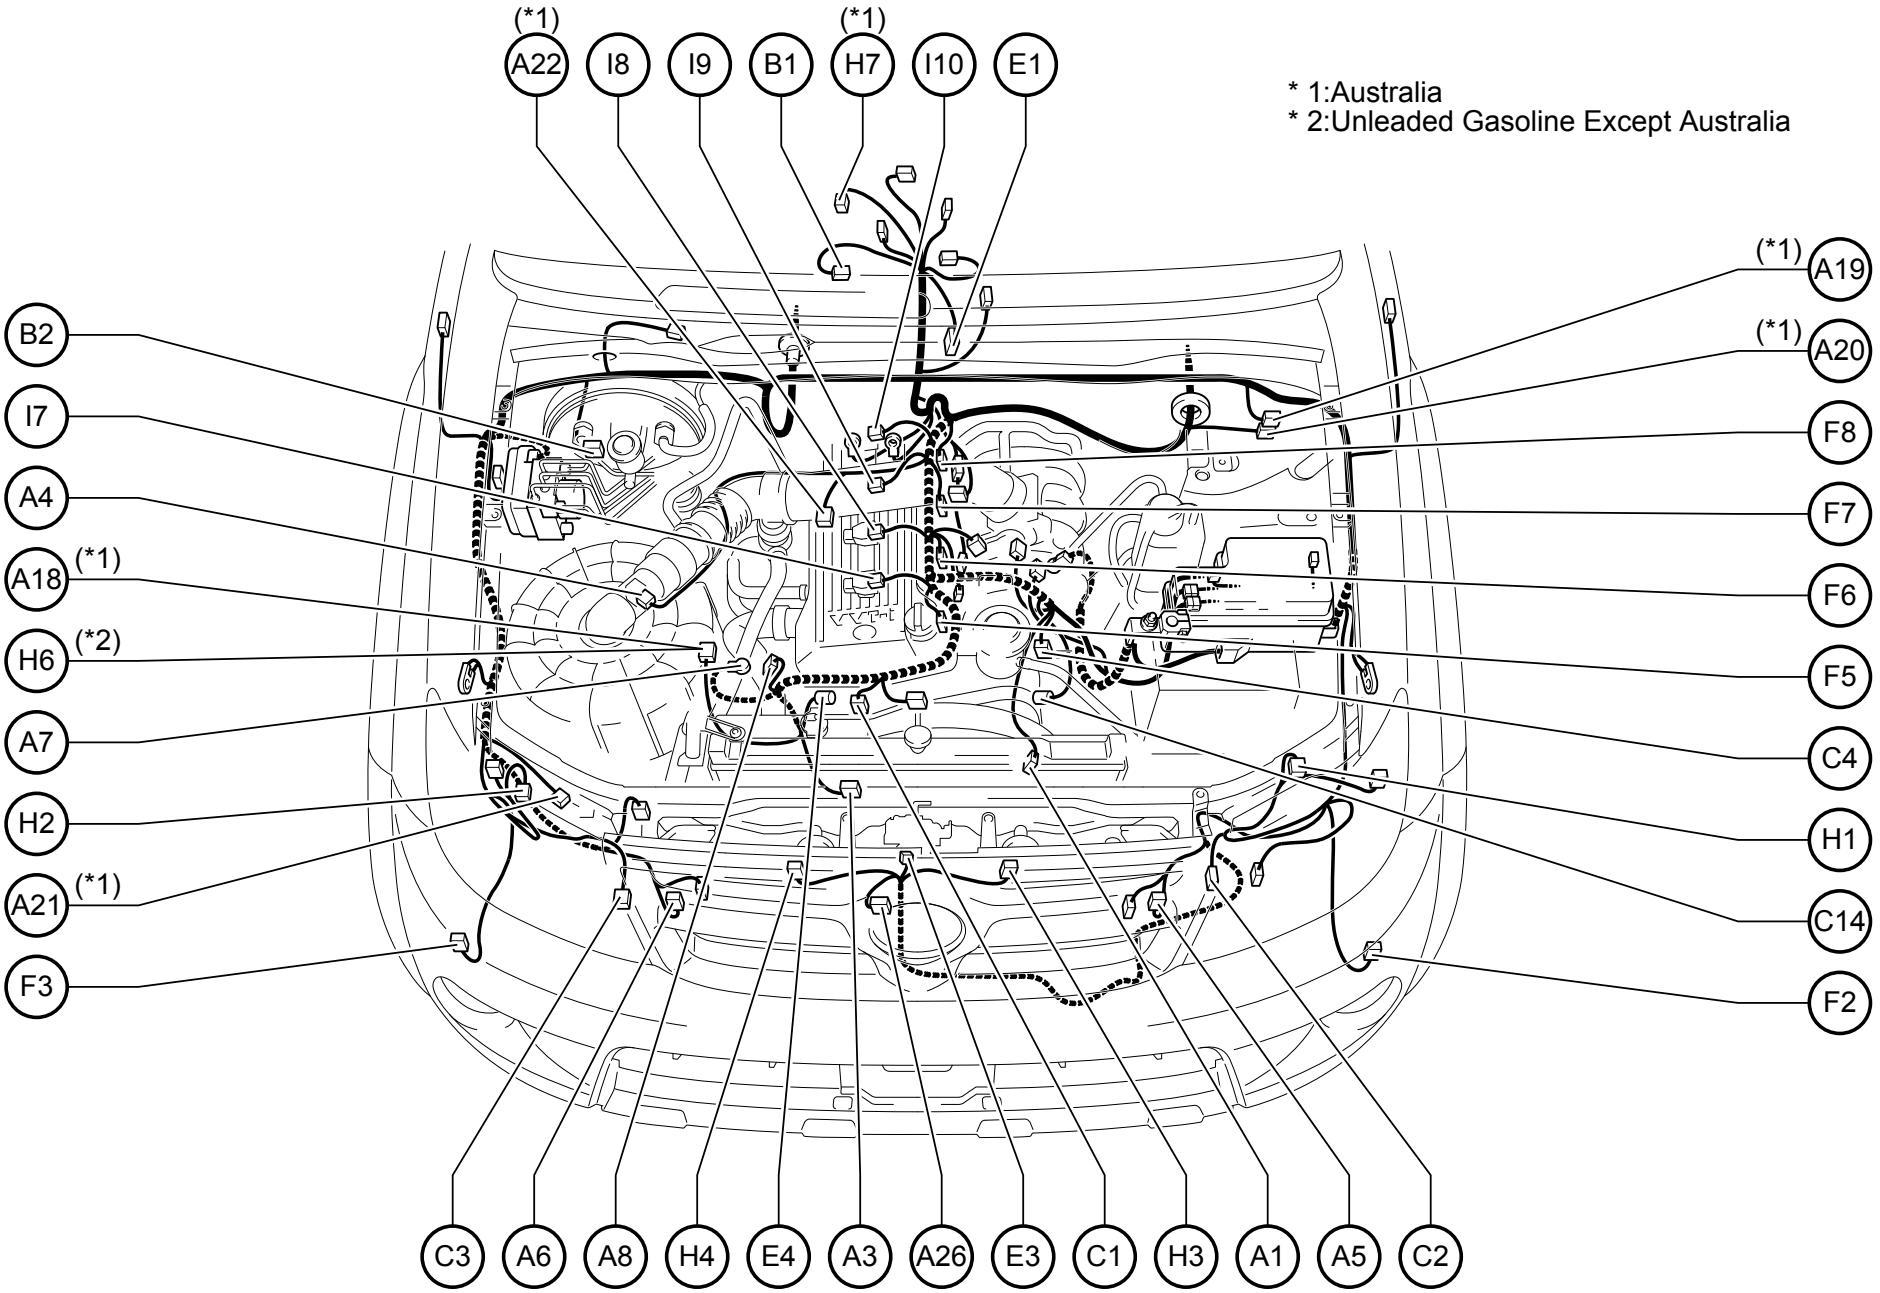

(*1)
A22
I8
I9
B1
(*1)
H7
I10
E1
* 1:Australia
* 2:Unleaded Gasoline Except Australia
(*1)
A19
(*1)
A20
B2
I7
A4
A18
(*1)
H6
(*2)
A7
H2
A21
(*1)
F3
F8
F7
F6
F5
C4
H1
C14
F2
C3
A6
A8
H4
E4
A3
A26
E3
C1
H3
A1
A5
C2

A 1 A/C Compressor
A 3 ADD Actuator
A 4 Air Flow Meter
A 5 Airbag Sensor (Front LH)
A 6 Airbag Sensor (Front RH)
A 7 Alternator
A 8 Alternator
A 18 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
A 19 Air Injection Control Driver
A 20 Air Injection Control Driver
A 21 Air Pump
A 22 Air Switching Valve
A 26 Ambient Temp. Sensor

B 1 Back-Up Lamp SW
B 1 Back-Up Lamp SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Clearance Lamp (Front LH)
C 3 Clearance Lamp (Front RH)
C 4 Crankshaft Position Sensor
C 14 Camshaft Timing Oil Control Valve

E 3 Engine Hood Courtesy SW
E 4 Engine Oil Pressure Sensor

F 2 Fog Lamp (Front LH)
F 3 Fog Lamp (Front RH)
F 5 Fuel Injector (No.1)
F 6 Fuel Injector (No.2)
F 7 Fuel Injector (No.3)
F 8 Fuel Injector (No.4)


H 1 Headlamp (LH)
H 2 Headlamp (RH)
H 3 Horn (High)
H 4 Horn (Low)
H 6 Heated Oxygen Sensor (Bank 1 Sensor 1)
H 7 Heated Oxygen Sensor (Bank 1 Sensor 2)

I 7 Ignition Coil (No.1)
I 8 Ignition Coil (No.2)
I 9 Ignition Coil (No.3)
I 10 Ignition Coil (No.4)


A 1
Gray



A 3
Black

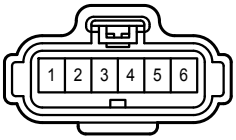

A 4
Black

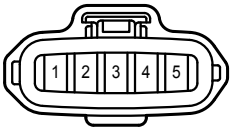


A 5
Yellow



A 6
Yellow



A 7



(1TR-FE, 2TR-FE, 1KD-FTV, 2KD-FTV)

A 8
Black




(Except 5L-E)

A 18
Dark Gray




(Australia 2TR-FE)


A 19
Gray

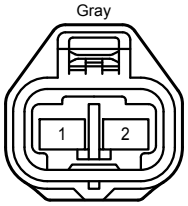


A 20
Black

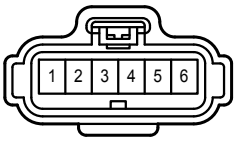

A 21
Gray

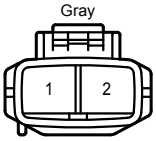


A 22
Black

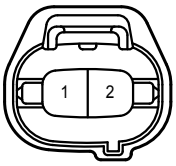

A 26
Black




B 1
Gray

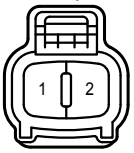

(2TR-FE)

B 1
Gray

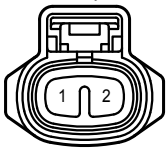

(Except 2TR-FE)

B 2
Gray



C 1
Black



C 2
Gray



C 3
Gray



C 4
Gray



(1TR-FE, 2TR-FE, 1KD-FTV, 2KD-FTV)

C 14
Gray



E 3
Black




E 4
White




(5L-E)


F 2
Brown

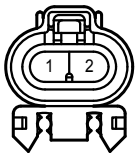

F 3
Brown

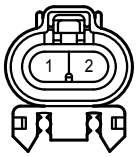


F 5
Brown




(1TR-FE, 2TR-FE)

F 6
Gray

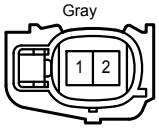


F 7
Brown




(1TR-FE, 2TR-FE)


F 8
Gray

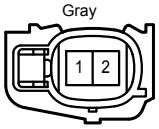


H 1
Black

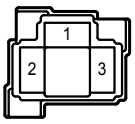

H 2
Black

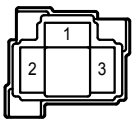

H 3
Black



H 4
Black




H 6
Black




H 7
Dark Gray




I 7
Black



I 8
Black



I 9
Black



I 10
Black

