
■ DIAGNOSIS

1. General

If the airbag sensor assembly detects a malfunction in the SRS airbag system, the airbag sensor assembly stores the malfunction data in memory, in addition to illuminating the SRS warning light.

- The airbag sensor assembly outputs malfunction data in the from of 5-digit DTCs (Diagnostic Trouble Codes) to the intelligent tester II or the SRS warning light.

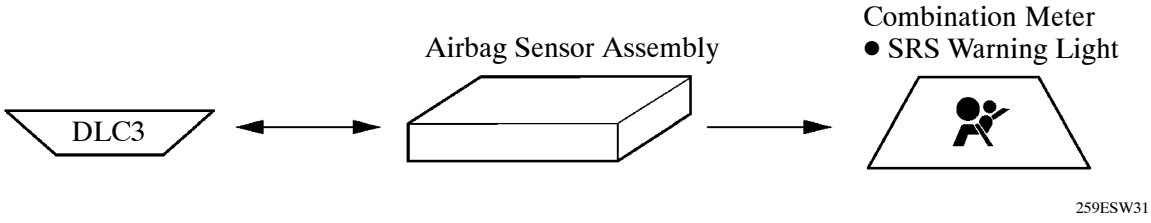

2. DTC of SRS Airbag System

- The 5-digit DTC can be read by connecting an Intelligent Tester II to the DLC3 terminal.
- If the SRS airbag deploys, the airbag sensor assembly will turn on the SRS warning light. However, unlike the ordinary diagnosis function, a DTC will not be memorized. The SRS warning light can be turned off only by replacing the airbag sensor assembly with a new one.