

(Cont. next page)

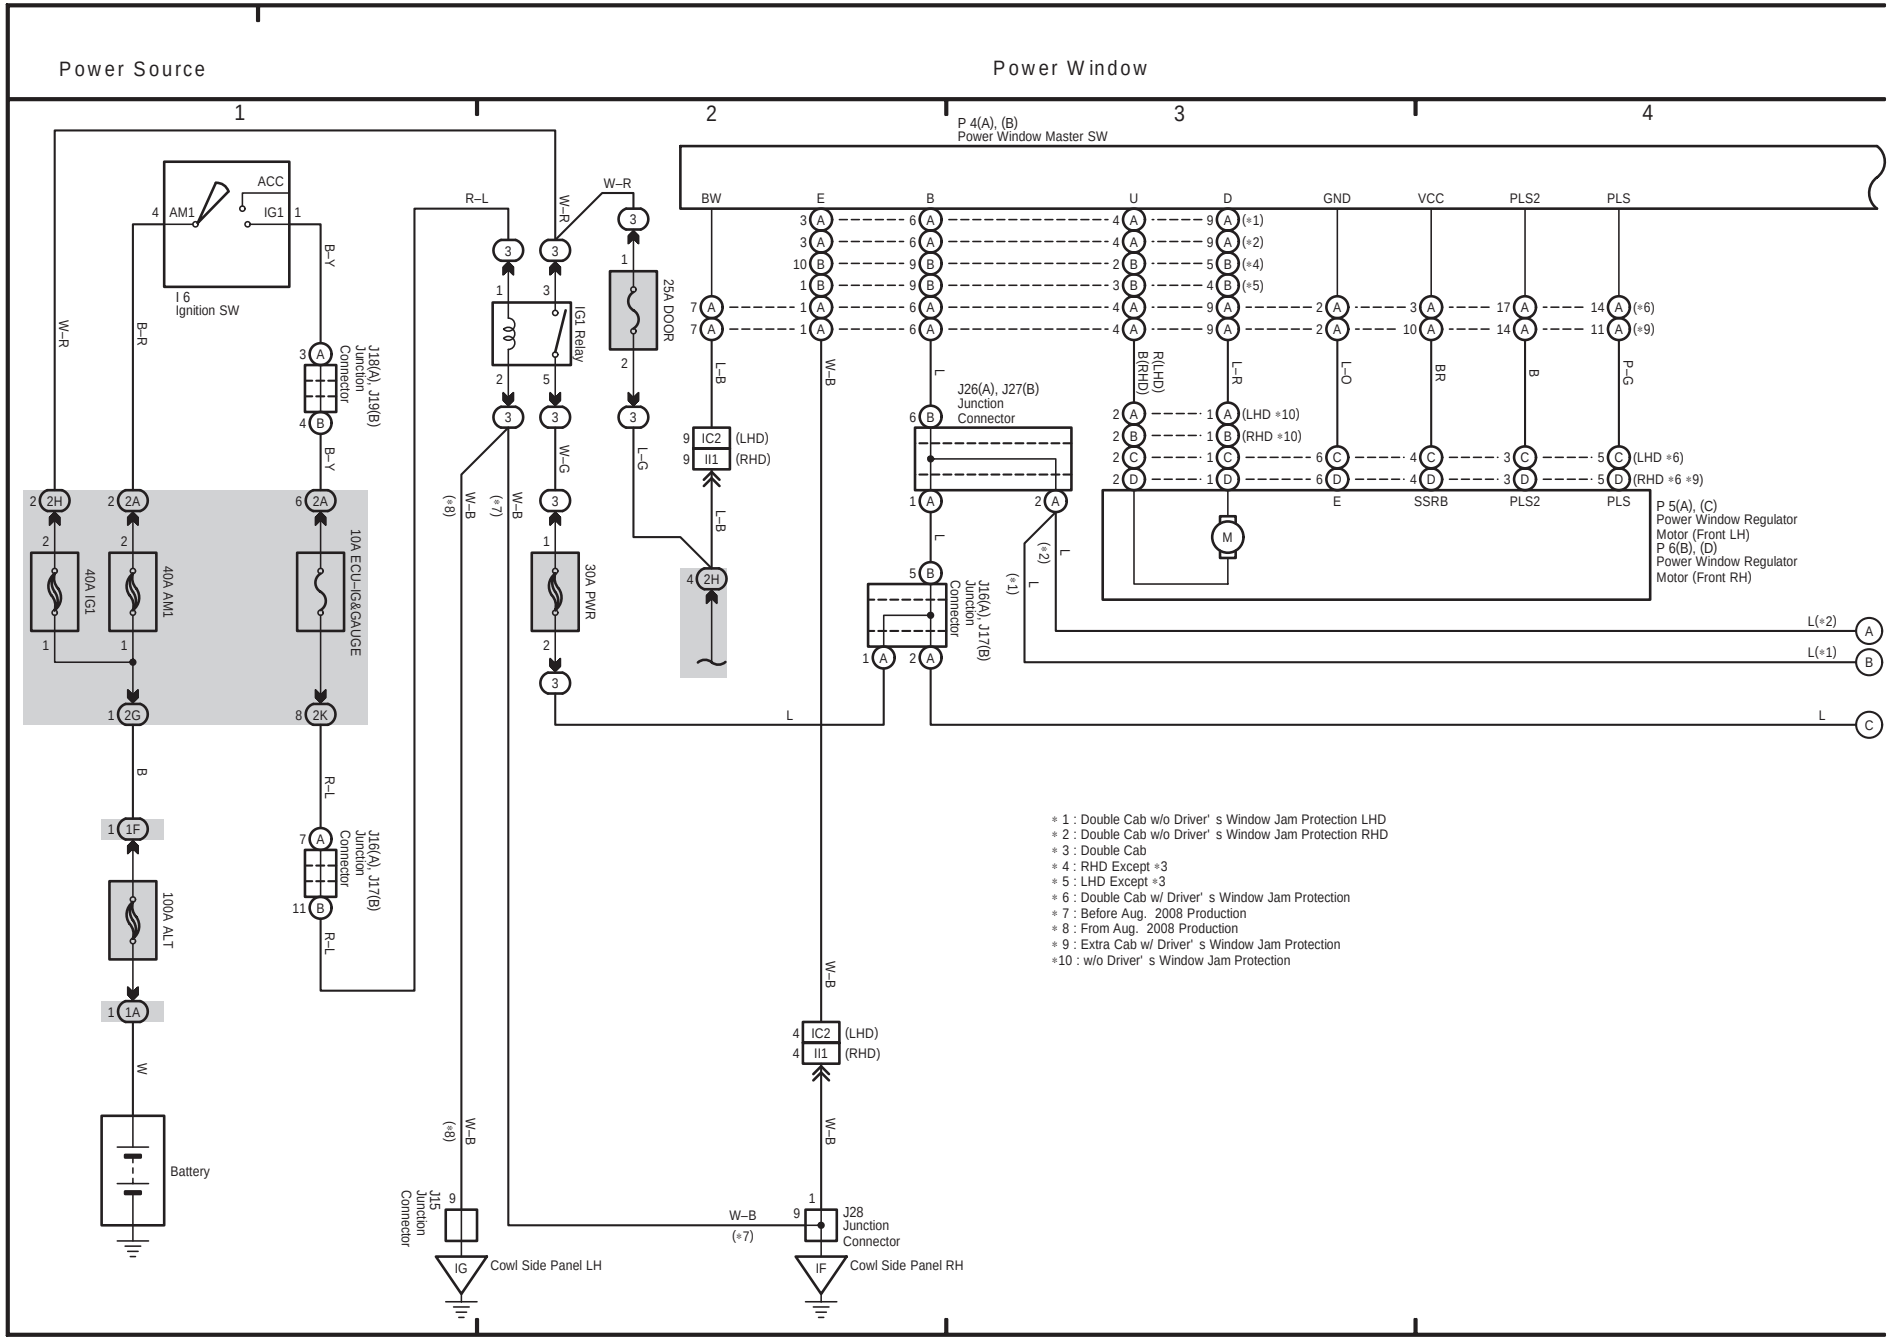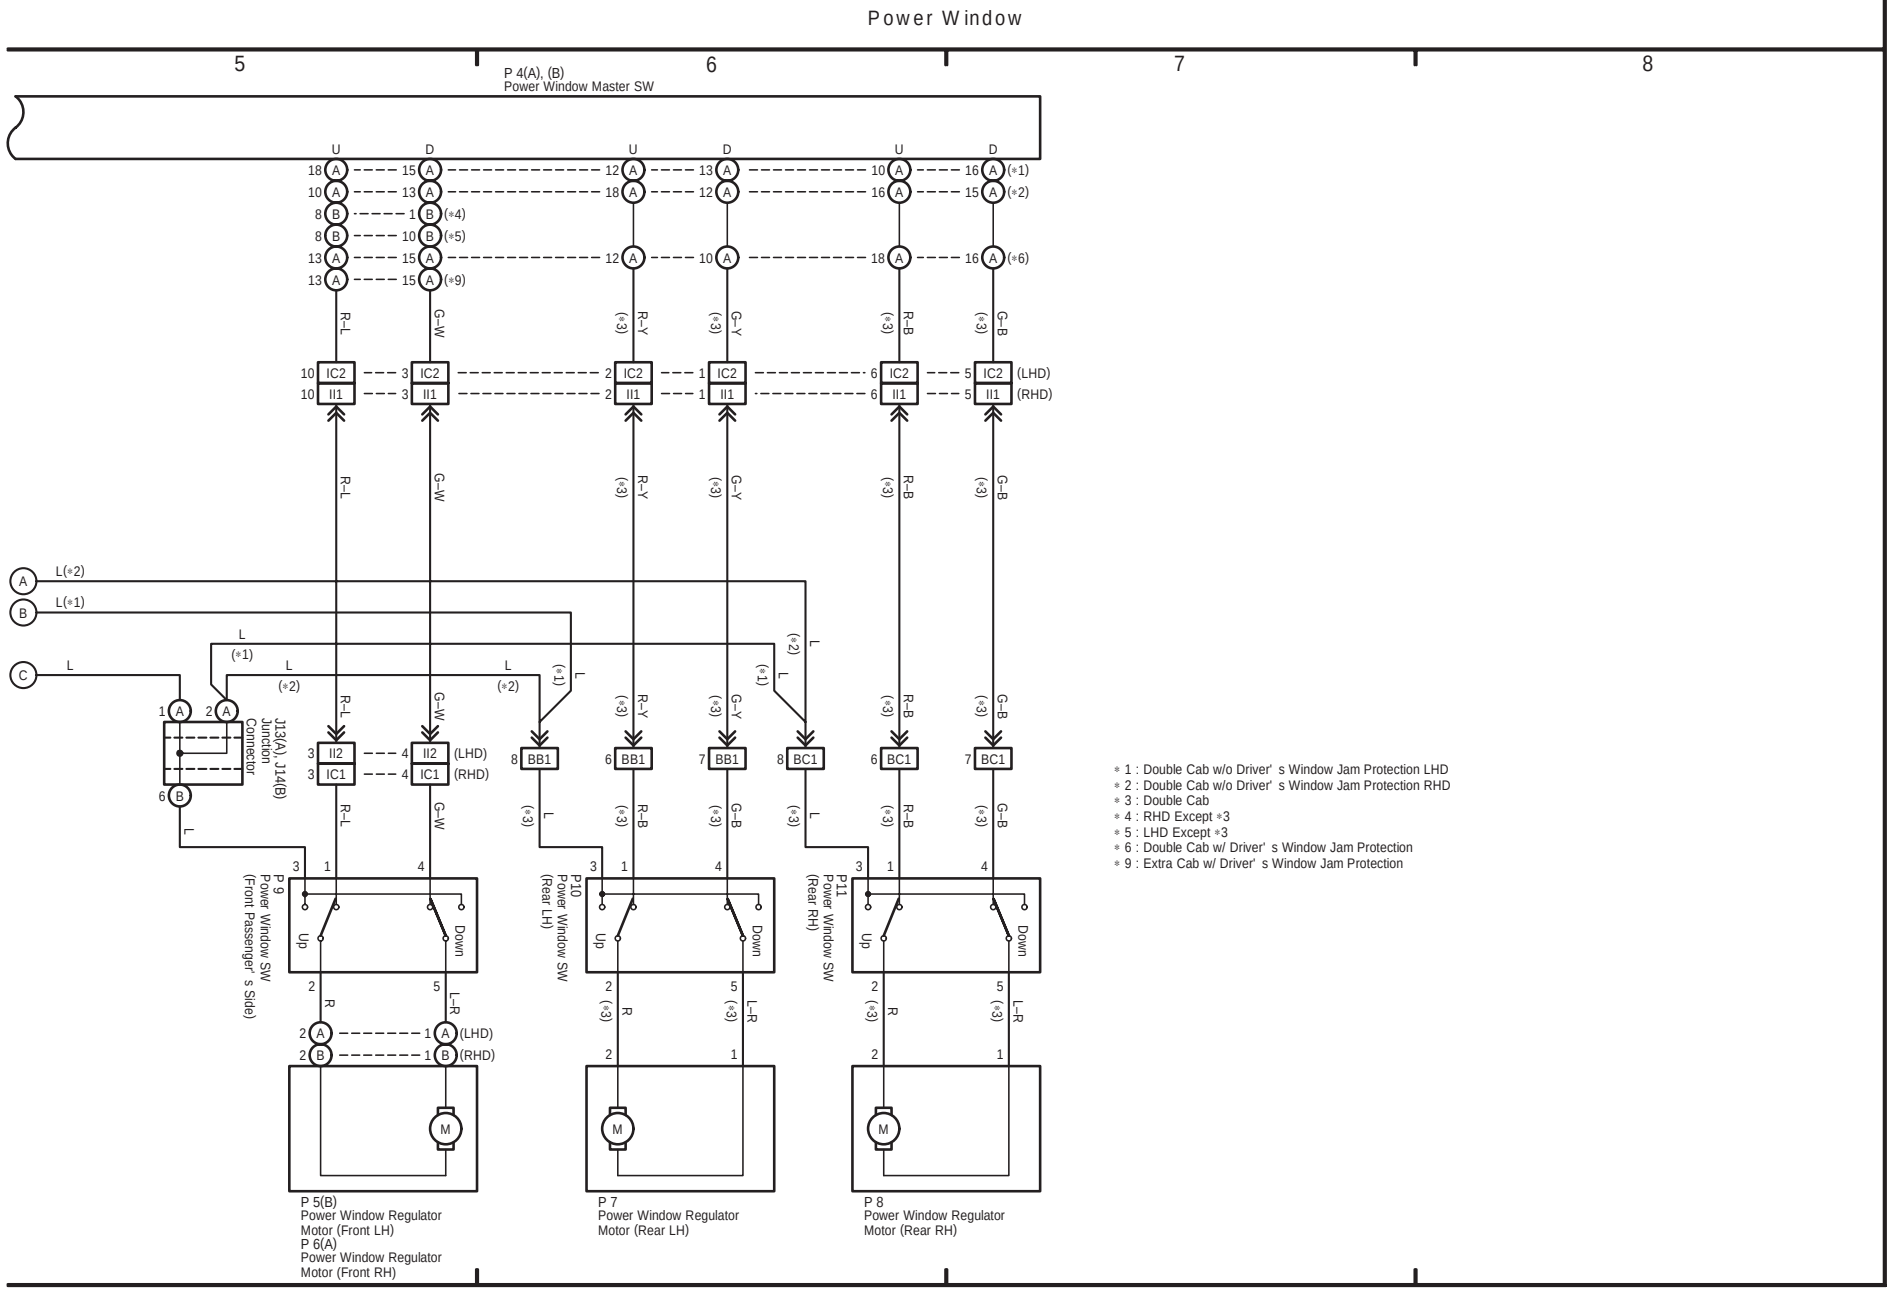


Power Window
5
6
7
8
P 4(A), (B)
Power Window Master SW
U
D
R–L
G–W
R–Y
G–Y
R–B
G–B
IC2
II1
(LHD)
(RHD)
L(*2)
L(*1)
J13(A), J14(B)
Junction Connector
II2
IC1
BB1
BC1
P 9
Power Window SW
(Front Passenger' s Side)
P10
Power Window SW
(Rear LH)
P11
Power Window SW
(Rear RH)
Up
Down
R
L–R
M
P 5(B)
Power Window Regulator
Motor (Front LH)
P 6(A)
Power Window Regulator
Motor (Front RH)
P 7
Power Window Regulator
Motor (Rear LH)
P 8
Power Window Regulator
Motor (Rear RH)
* 1 : Double Cab w/o Driver' s Window Jam Protection LHD
* 2 : Double Cab w/o Driver' s Window Jam Protection RHD
* 3 : Double Cab
* 4 : RHD Except *3
* 5 : LHD Except *3
* 6 : Double Cab w/ Driver' s Window Jam Protection
* 9 : Extra Cab w/ Driver' s Window Jam Protection