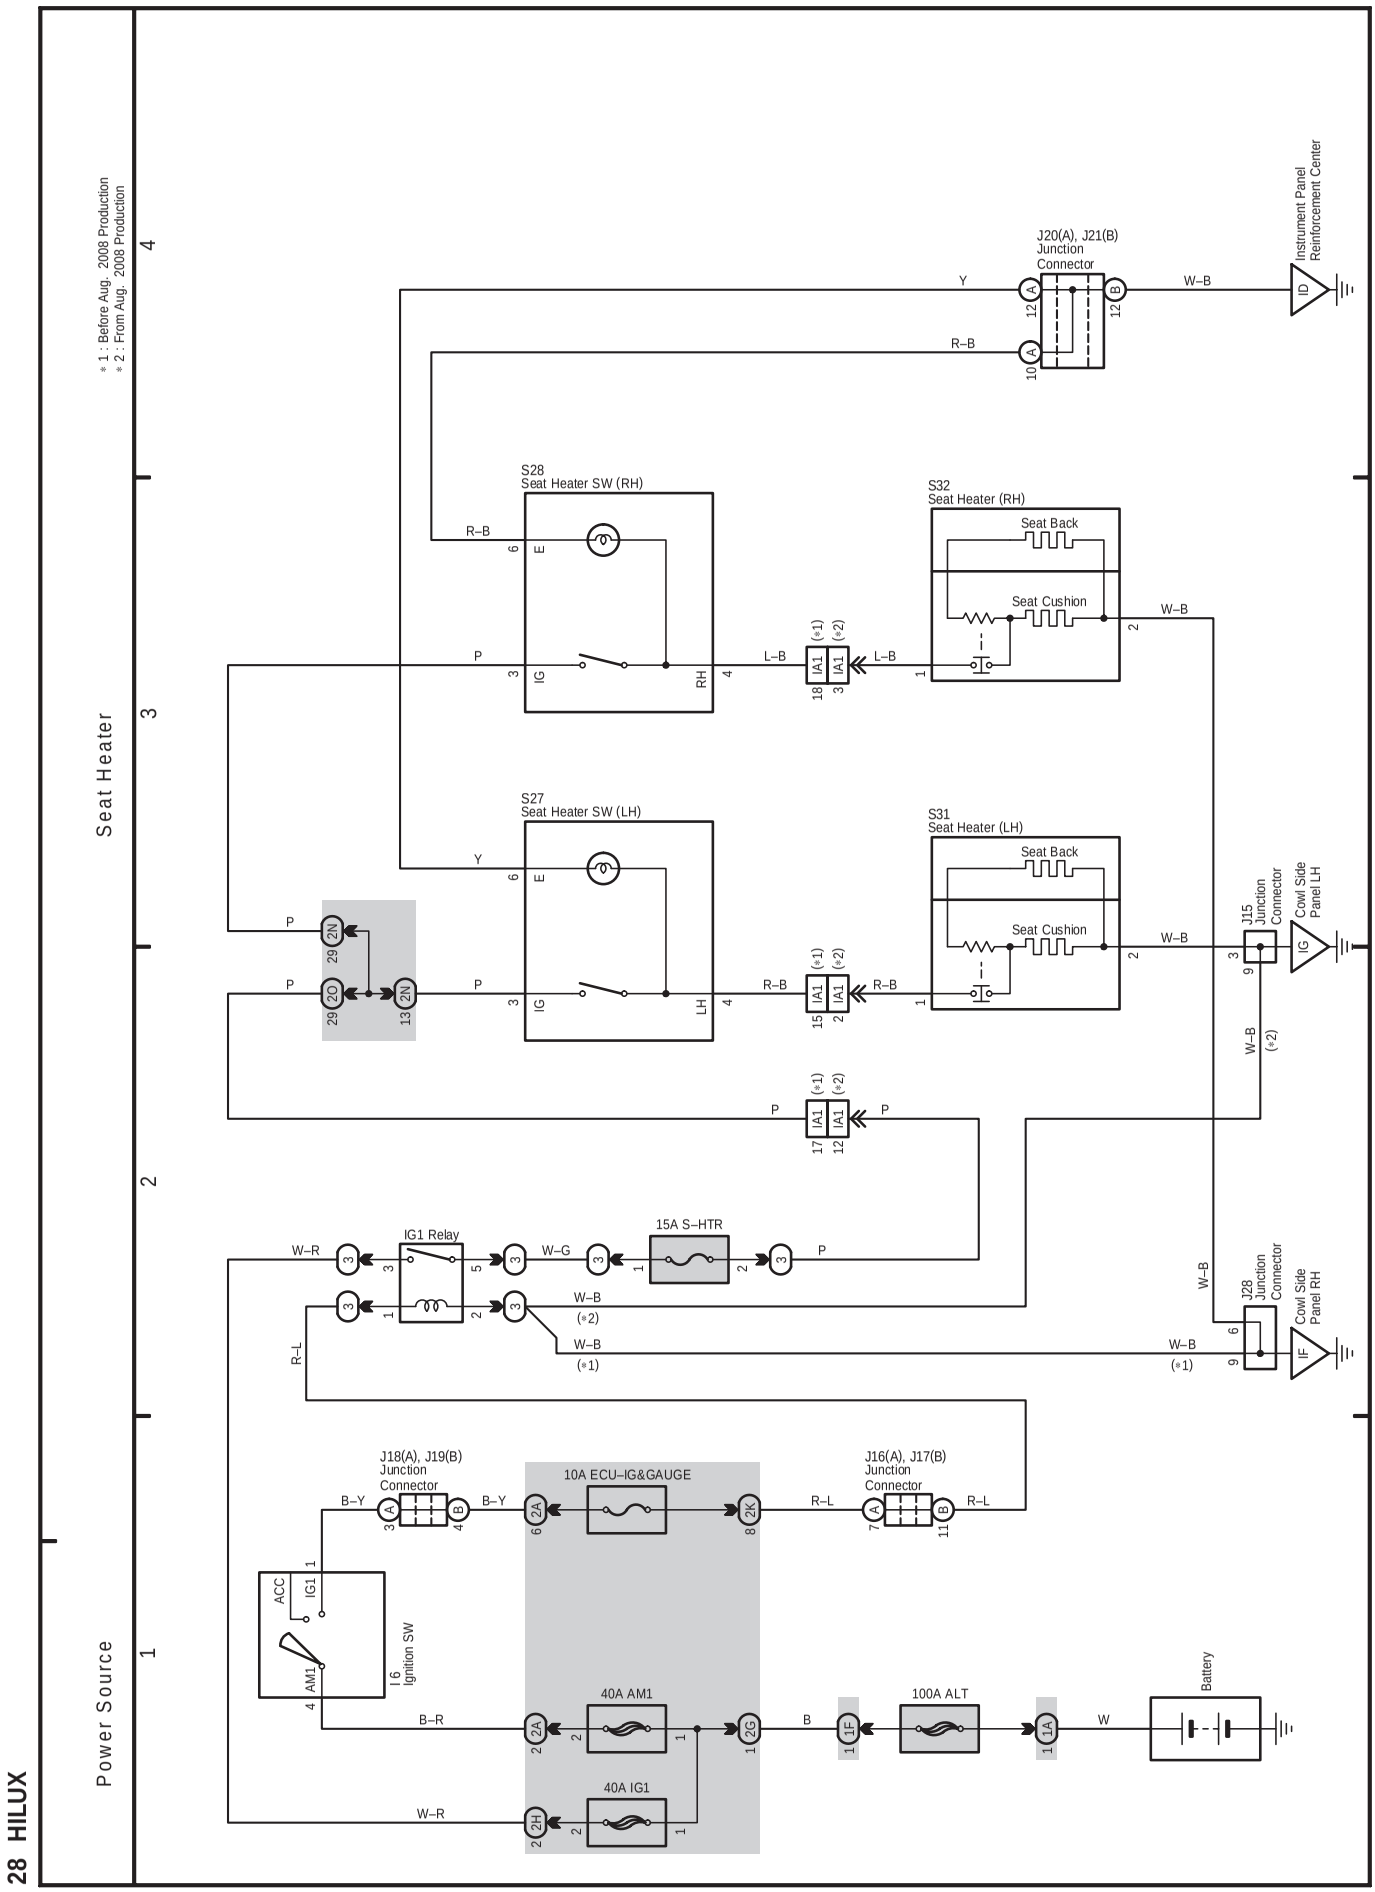

* 1 : Before Aug. 2008 Production
* 2 : From Aug. 2008 Production
Seat Heater
Power Source
J20(A), J21(B) Junction Connector
Instrument Panel Reinforcement Center
S28 Seat Heater SW (RH)
S32 Seat Heater (RH)
Seat Back
Seat Cushion
S27 Seat Heater SW (LH)
S31 Seat Heater (LH)
J15 Junction Connector
Cowl Side Panel LH
J28 Junction Connector
Cowl Side Panel RH
IG1 Relay
15A S–HTR
J18(A), J19(B) Junction Connector
10A ECU–IG&GAUGE
J16(A), J17(B) Junction Connector
I6 Ignition SW
40A AM1
40A IG1
100A ALT
Battery