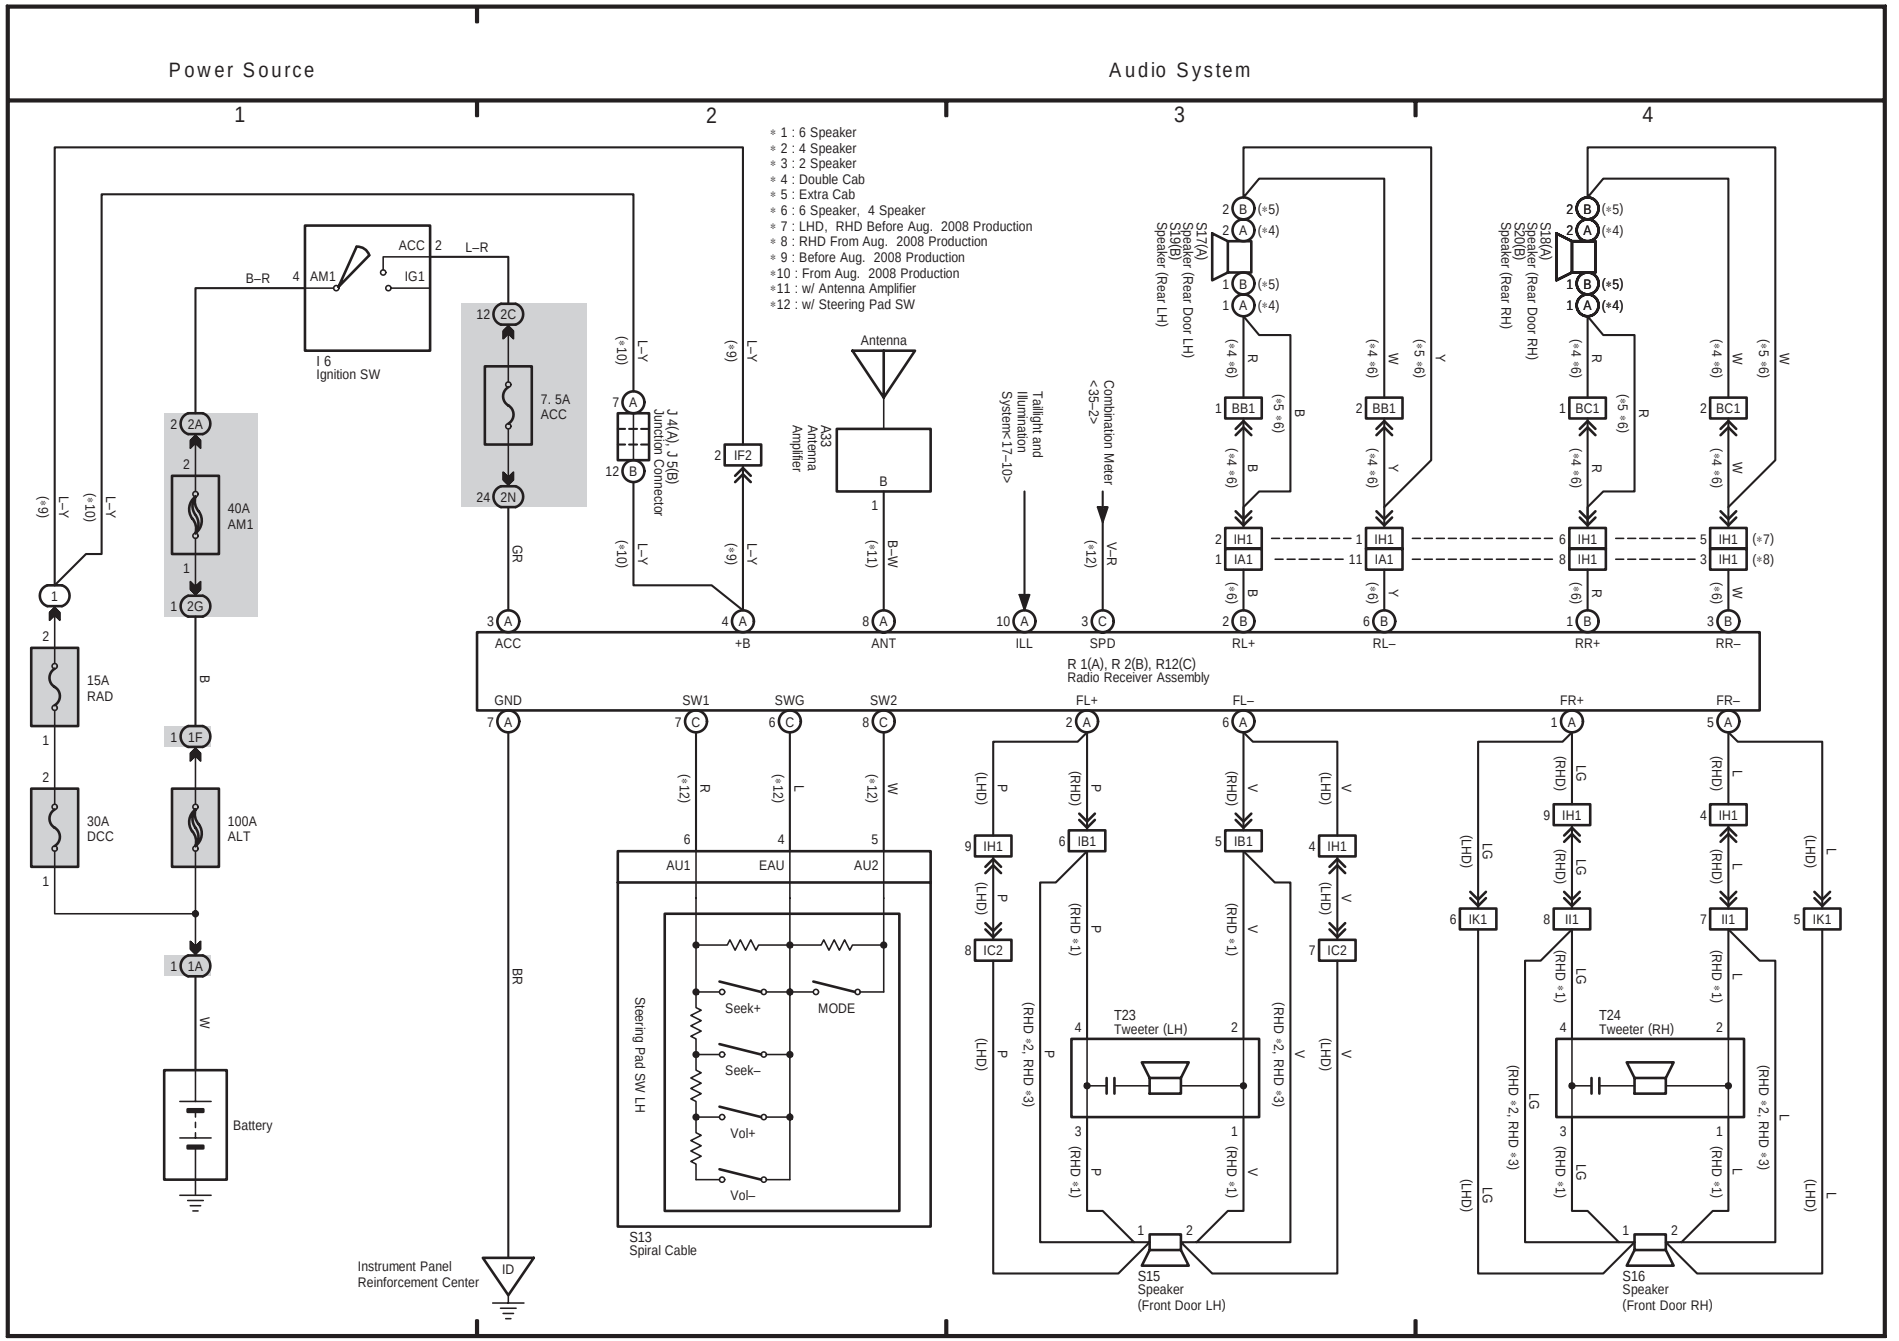

Power Source
Audio System
1
2
3
4
∗1 : 6 Speaker
∗2 : 4 Speaker
∗3 : 2 Speaker
∗4 : Double Cab
∗5 : Extra Cab
∗6 : 6 Speaker, 4 Speaker
∗7 : LHD, RHD Before Aug. 2008 Production
∗8 : RHD From Aug. 2008 Production
∗9 : Before Aug. 2008 Production
∗10 : From Aug. 2008 Production
∗11 : w/ Antenna Amplifier
∗12 : w/ Steering Pad SW
I 6
Ignition SW
ACC
IG1
AM1
B–R
L–R
7. 5A
ACC
40A
AM1
15A
RAD
30A
DCC
100A
ALT
Battery
J4(A), J5(B)
Junction Connector
Antenna
A33
Antenna
Amplifier
Taillight and
Illumination
System<17–10>
Combination Meter
<35–2>
S17(A)
Speaker (Rear Door LH)
S19(B)
Speaker (Rear LH)
S18(A)
Speaker (Rear Door RH)
S20(B)
Speaker (Rear RH)
R 1(A), R 2(B), R12(C)
Radio Receiver Assembly
ACC
+B
ANT
ILL
SPD
RL+
RL–
RR+
RR–
GND
SW1
SWG
SW2
FL+
FL–
FR+
FR–
AU1
EAU
AU2
Steering Pad SW LH
Seek+
MODE
Seek–
Vol+
Vol–
S13
Spiral Cable
T23
Tweeter (LH)
T24
Tweeter (RH)
S15
Speaker
(Front Door LH)
S16
Speaker
(Front Door RH)
Instrument Panel
Reinforcement Center
ID