



(Cont. next page)

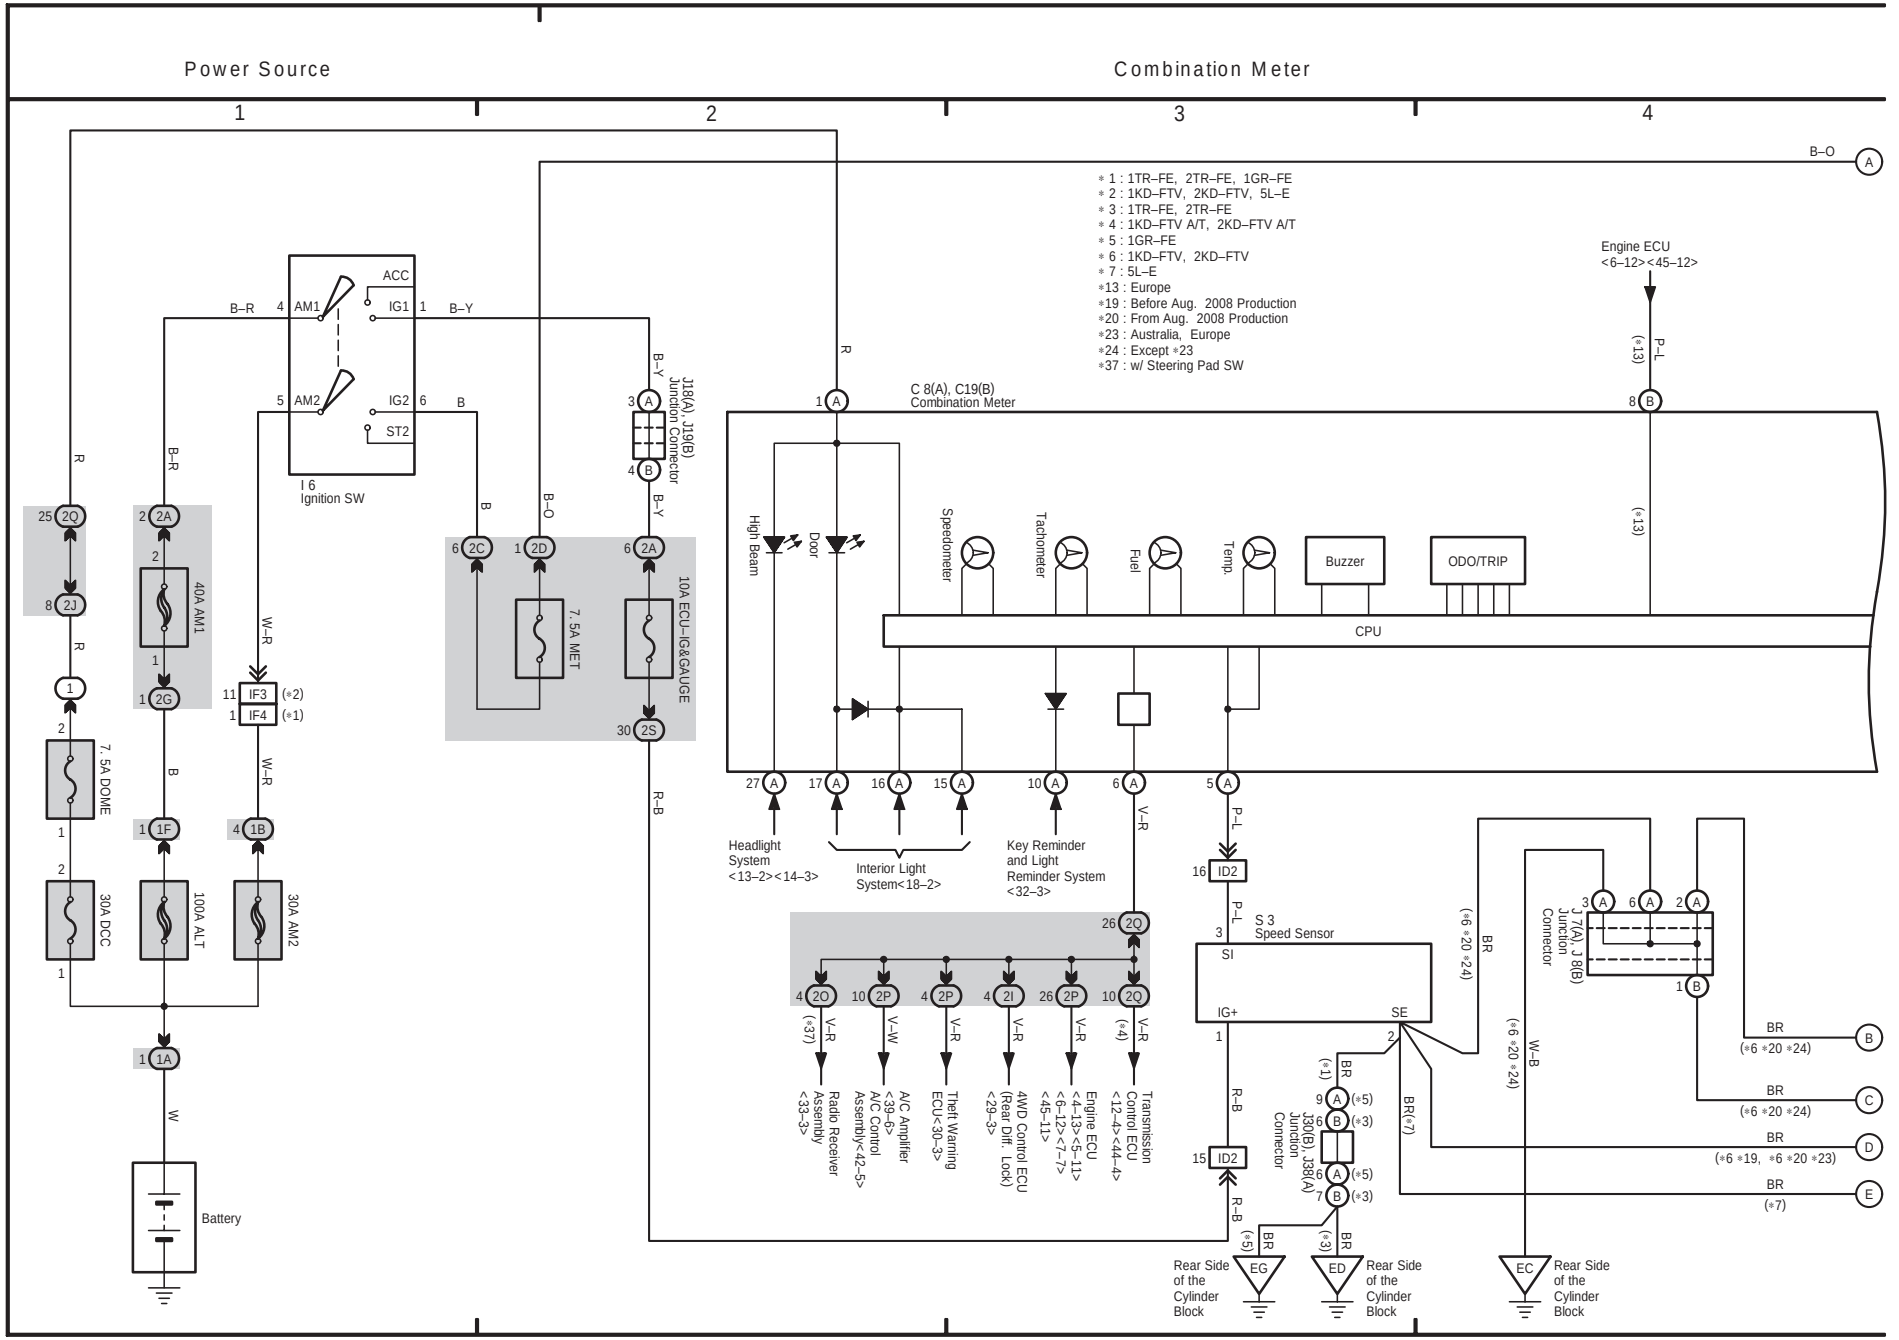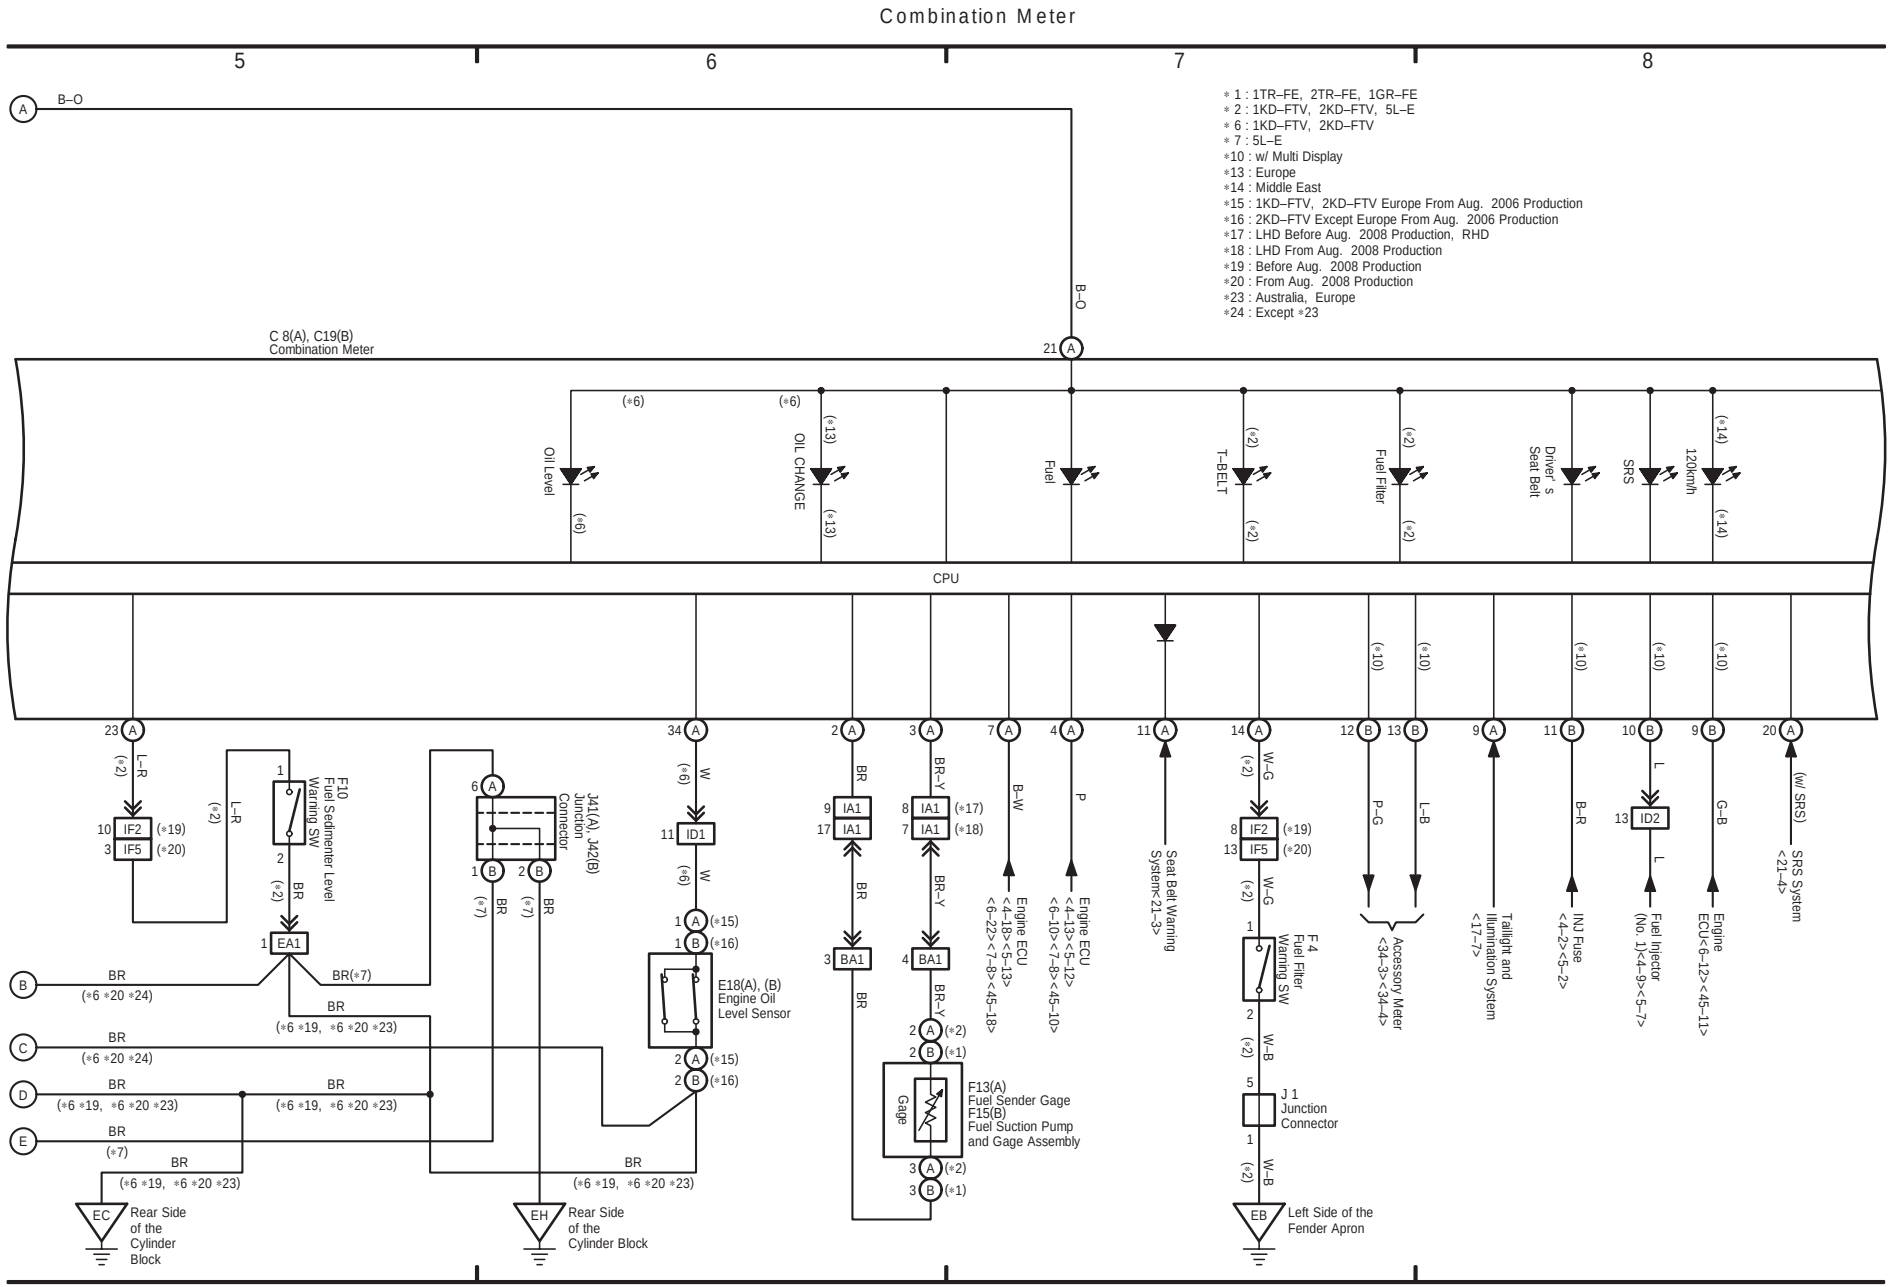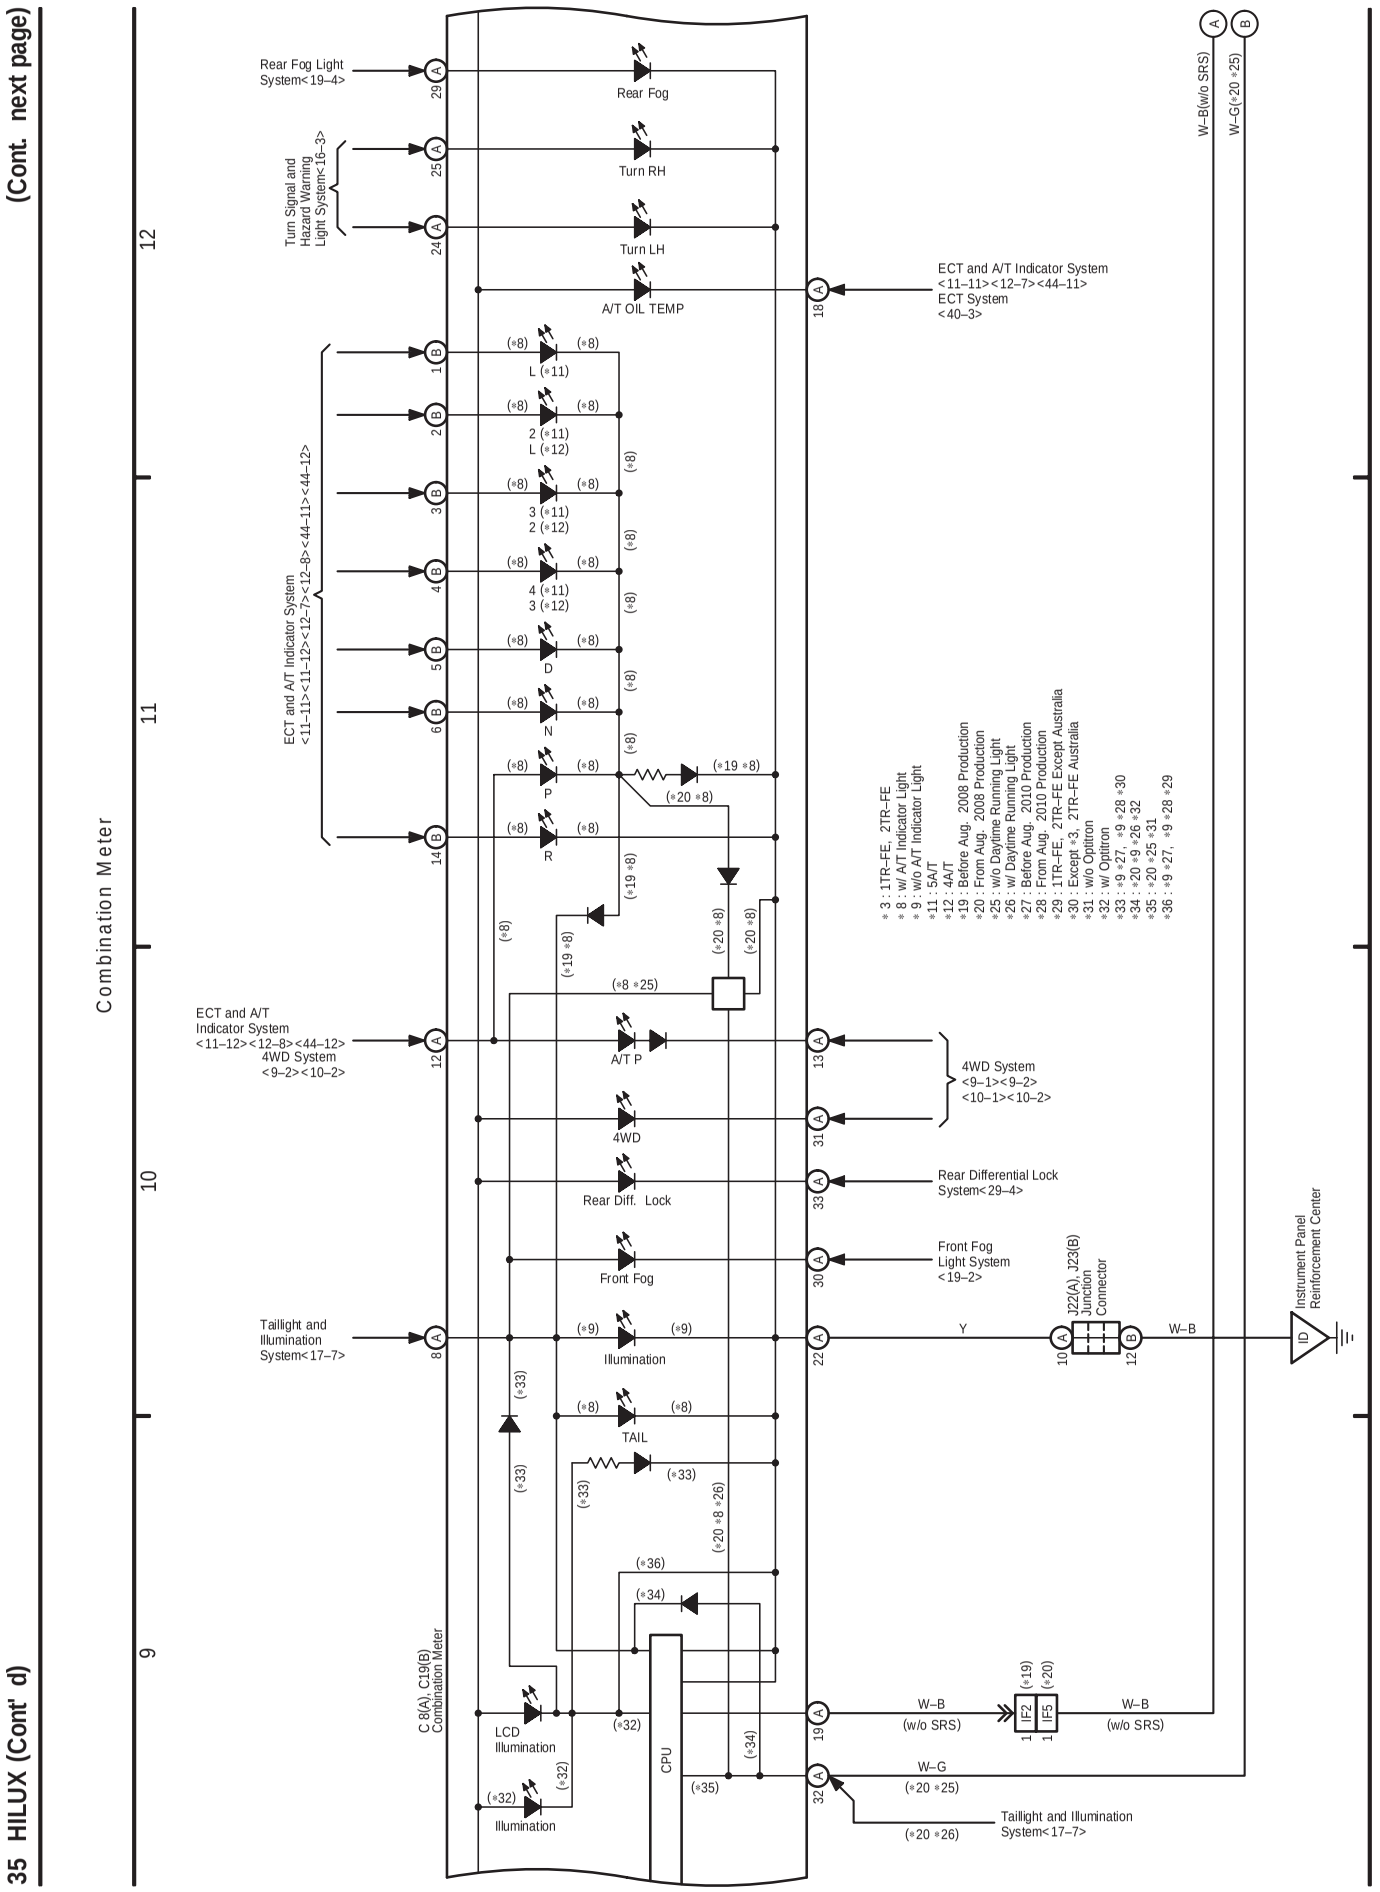

(Cont. next page)

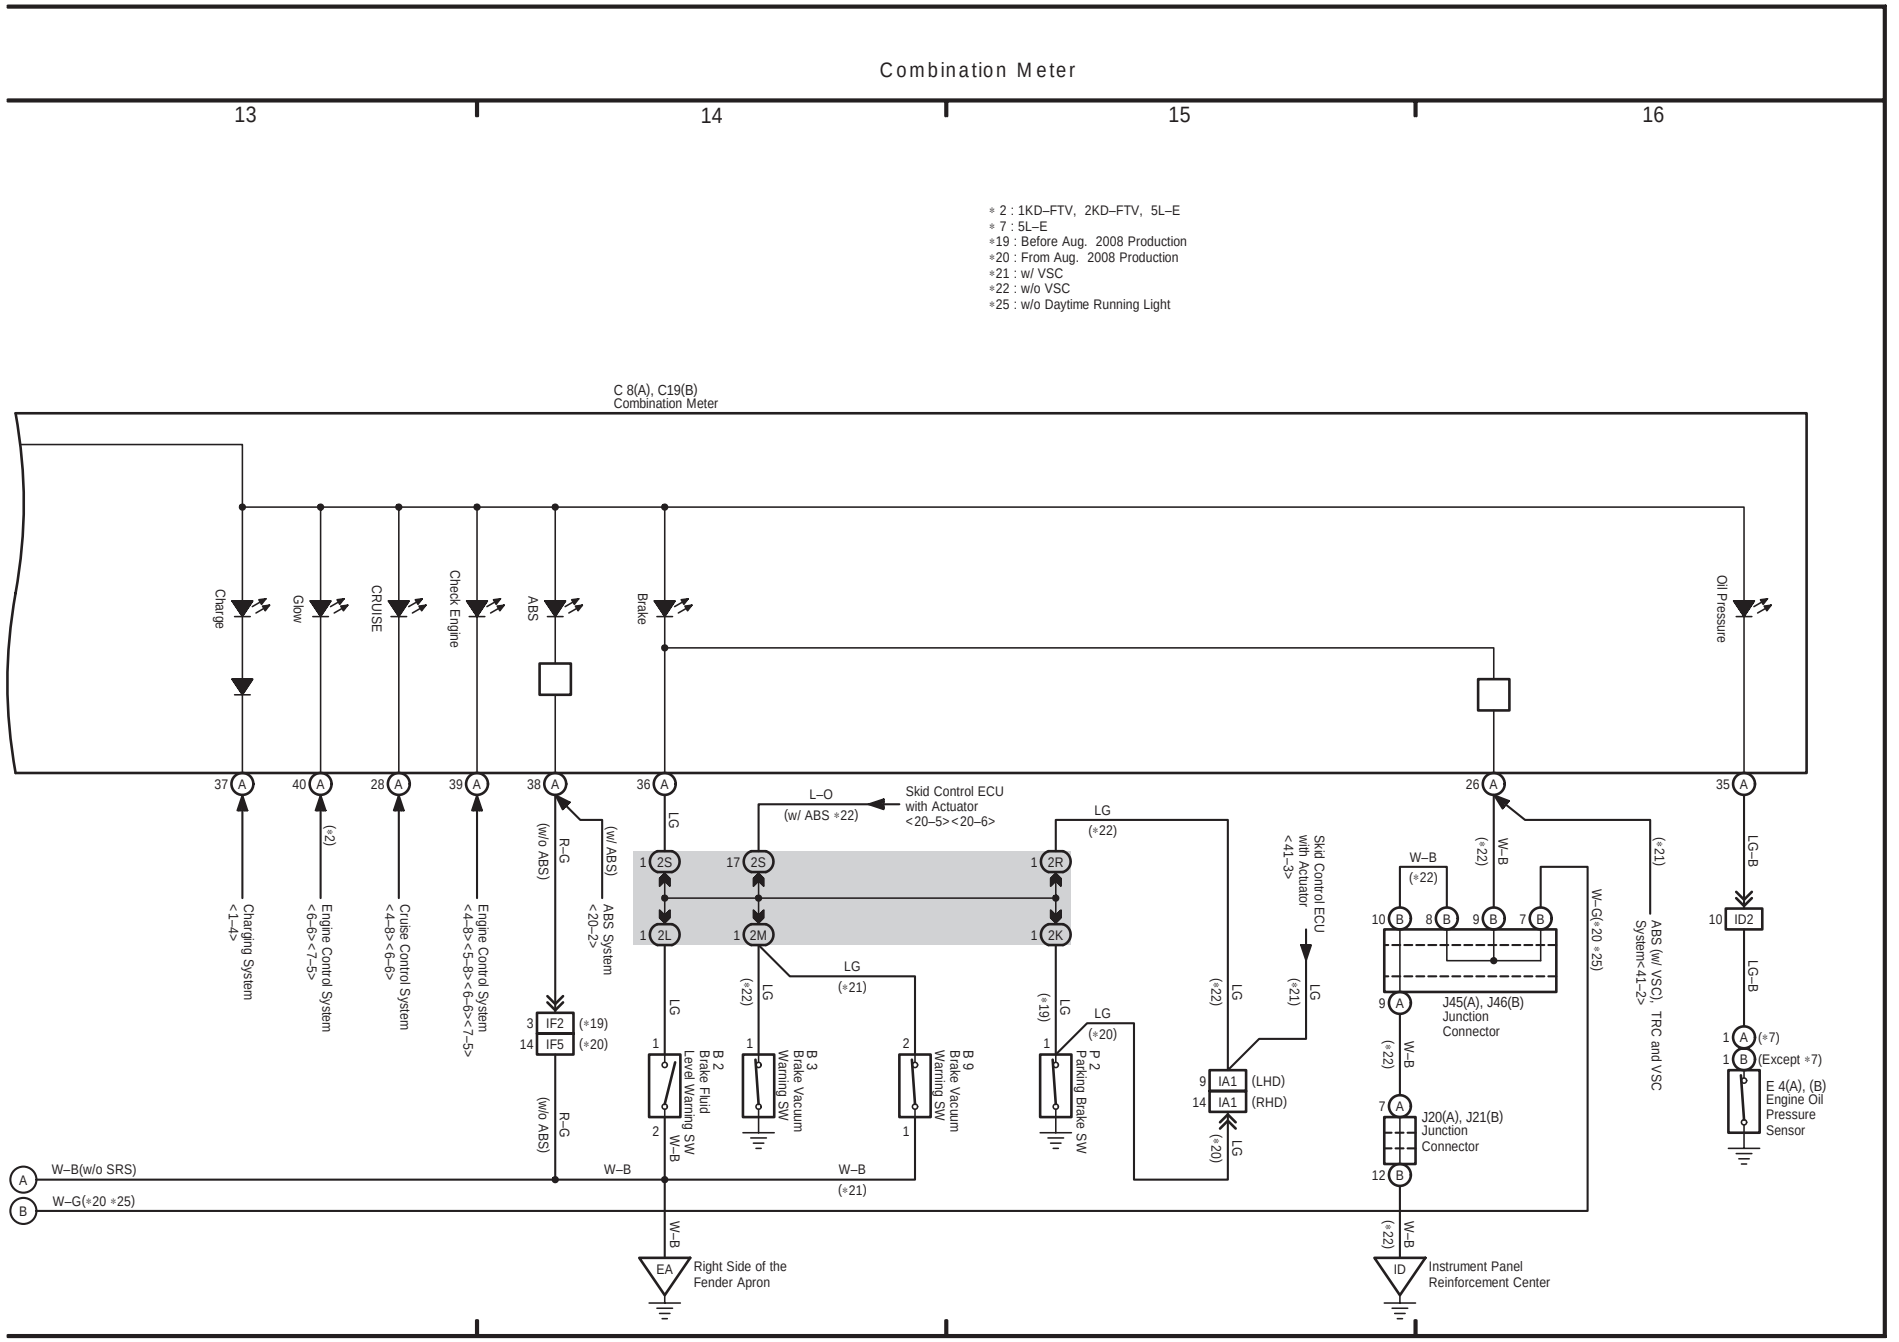


(Cont. next page)
35 HILUX (Cont' d)
9
10
11
12
Combination Meter
Rear Fog Light System<19–4>
Turn Signal and Hazard Warning Light System<16–3>
ECT and A/T Indicator System <11–11><11–12><12–7><12–8><44–11><44–12>
ECT and A/T Indicator System <11–12><12–8><44–12> 4WD System <9–2><10–2>
Taillight and Illumination System<17–7>
LCD Illumination
Illumination
C 8(A), C19(B) Combination Meter
Rear Fog
Turn RH
Turn LH
A/T OIL TEMP
ECT and A/T Indicator System <11–11><12–7><44–11> ECT System <40–3>
L (*11)
2 (*11) L (*12)
3 (*11) 2 (*12)
4 (*11) 3 (*12)
D
N
P
R
A/T P
4WD
Rear Diff. Lock
Front Fog
Illumination
TAIL
CPU
4WD System <9–1><9–2> <10–1><10–2>
Rear Differential Lock System<29–4>
Front Fog Light System <19–2>
J22(A), J23(B) Junction Connector
Instrument Panel Reinforcement Center
W–B
W–G
W–B(w/o SRS)
W–G(*20 *25)
Taillight and Illumination System<17–7>
* 3 : 1TR–FE, 2TR–FE
* 8 : w/ A/T Indicator Light
* 9 : w/o A/T Indicator Light
*11 : 5A/T
*12 : 4A/T
*19 : Before Aug. 2008 Production
*20 : From Aug. 2008 Production
*25 : w/o Daytime Running Light
*26 : w/ Daytime Running Light
*27 : Before Aug. 2010 Production
*28 : From Aug. 2010 Production
*29 : 1TR–FE, 2TR–FE Except Australia
*30 : Except *3, 2TR–FE Australia
*31 : w/o Optitron
*32 : w/ Optitron
*33 : *9 *27, *9 *28 *30
*34 : *20 *9 *26 *32
*35 : *20 *25 *31
*36 : *9 *27, *9 *28 *29


Combination Meter
13
14
15
16
* 2 : 1KD–FTV, 2KD–FTV, 5L–E
* 7 : 5L–E
*19 : Before Aug. 2008 Production
*20 : From Aug. 2008 Production
*21 : w/ VSC
*22 : w/o VSC
*25 : w/o Daytime Running Light
C 8(A), C19(B)
Combination Meter
Charge
Glow
CRUISE
Check Engine
ABS
Brake
Oil Pressure
Charging System <1–4>
Engine Control System <6–8><7–5>
Cruise Control System <4–8><6–6>
Engine Control System <4–8><5–8><6–6><7–5>
ABS System <20–2>
Skid Control ECU with Actuator <20–5><20–6>
Skid Control ECU with Actuator <41–3>
ABS (w/ VSC), TRC and VSC System<41–2>
J45(A), J46(B) Junction Connector
J20(A), J21(B) Junction Connector
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW
B 9 Brake Vacuum Warning SW
P 2 Parking Brake SW
E 4(A), (B) Engine Oil Pressure Sensor
Right Side of the Fender Apron
Instrument Panel Reinforcement Center
W–B(w/o SRS)
W–G(*20 *25)