

(Cont. next page)

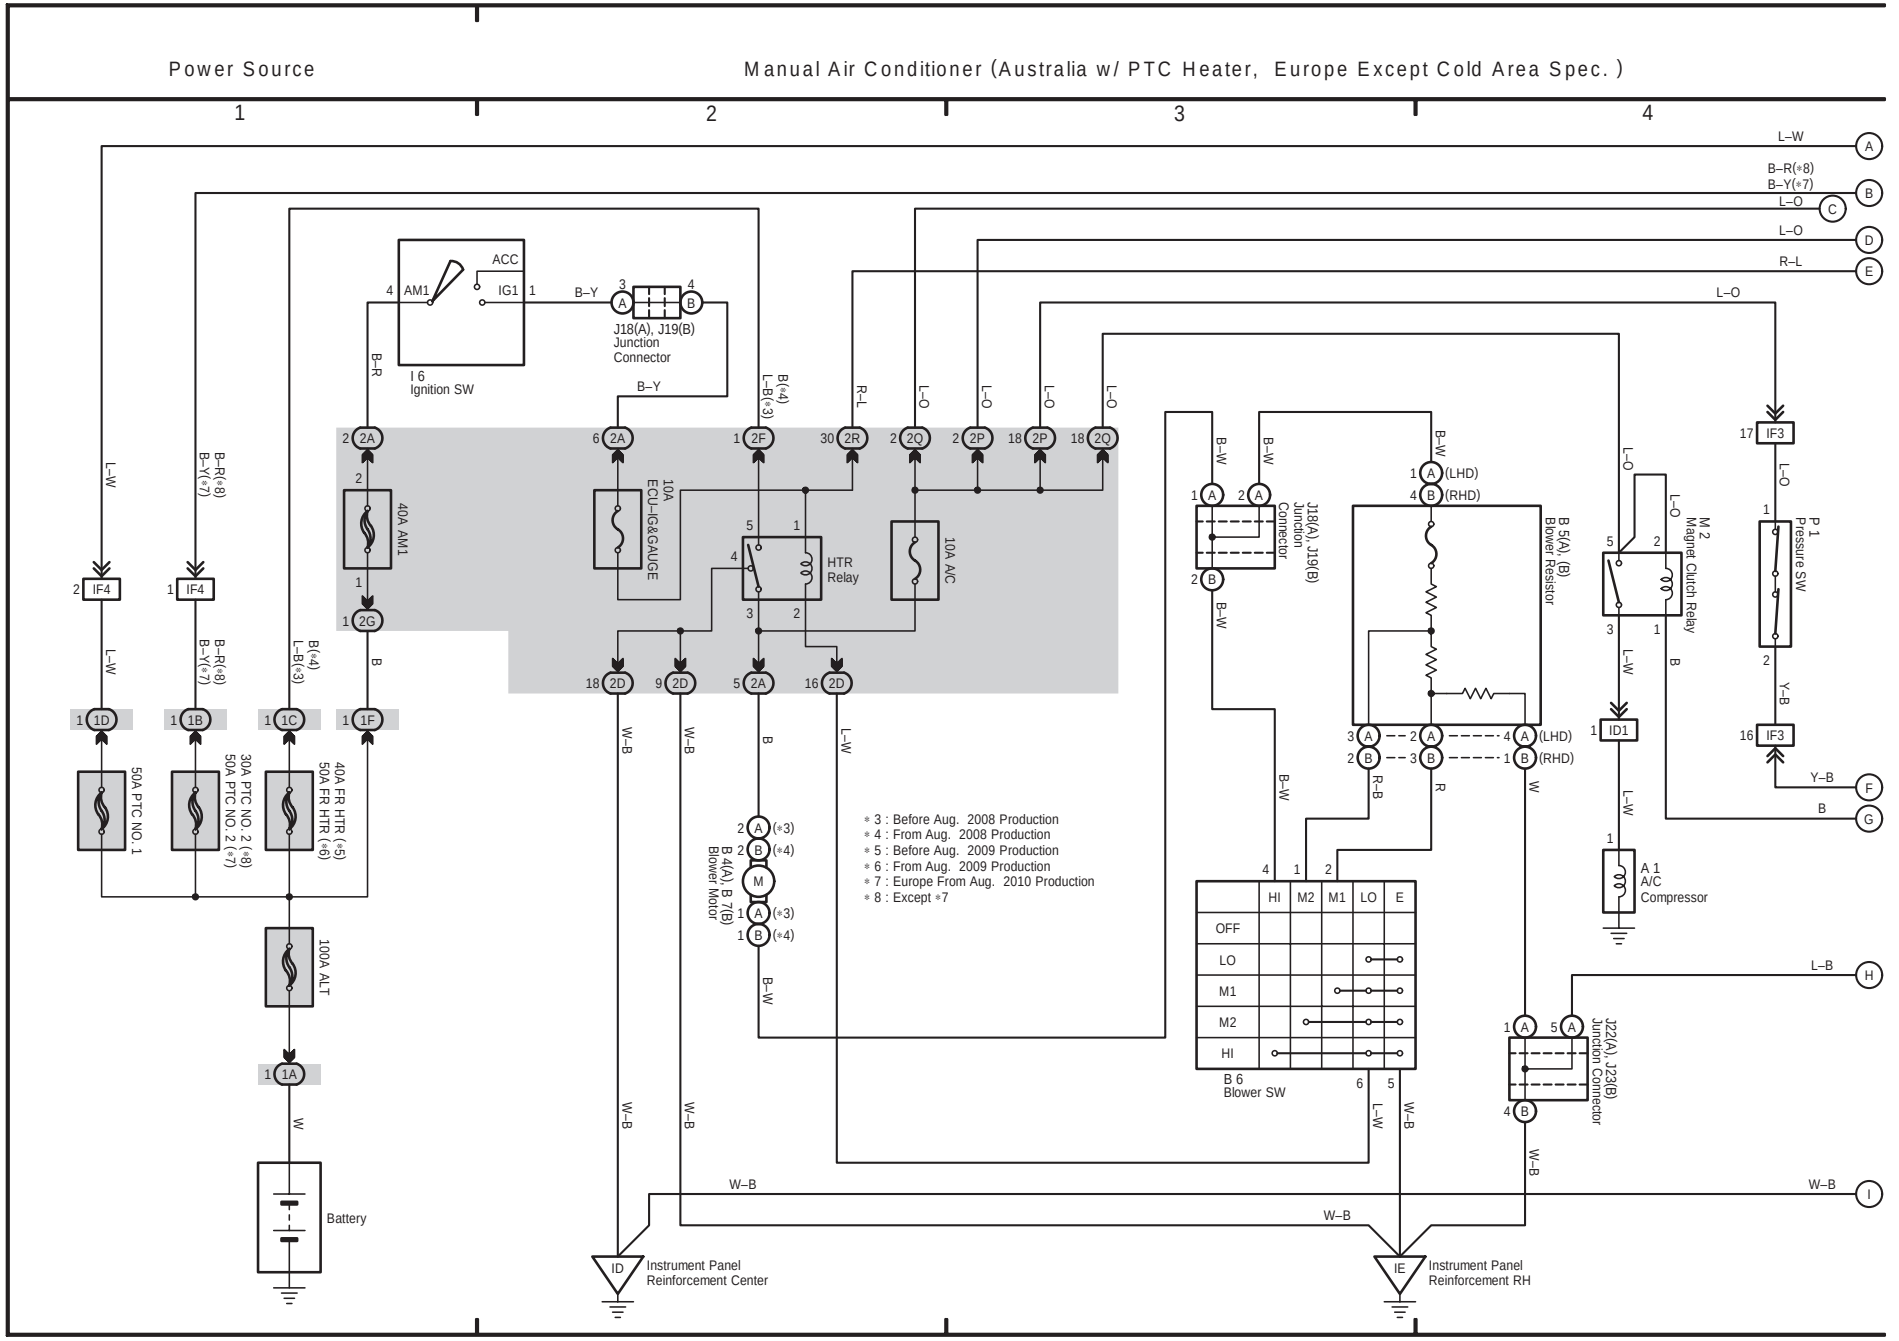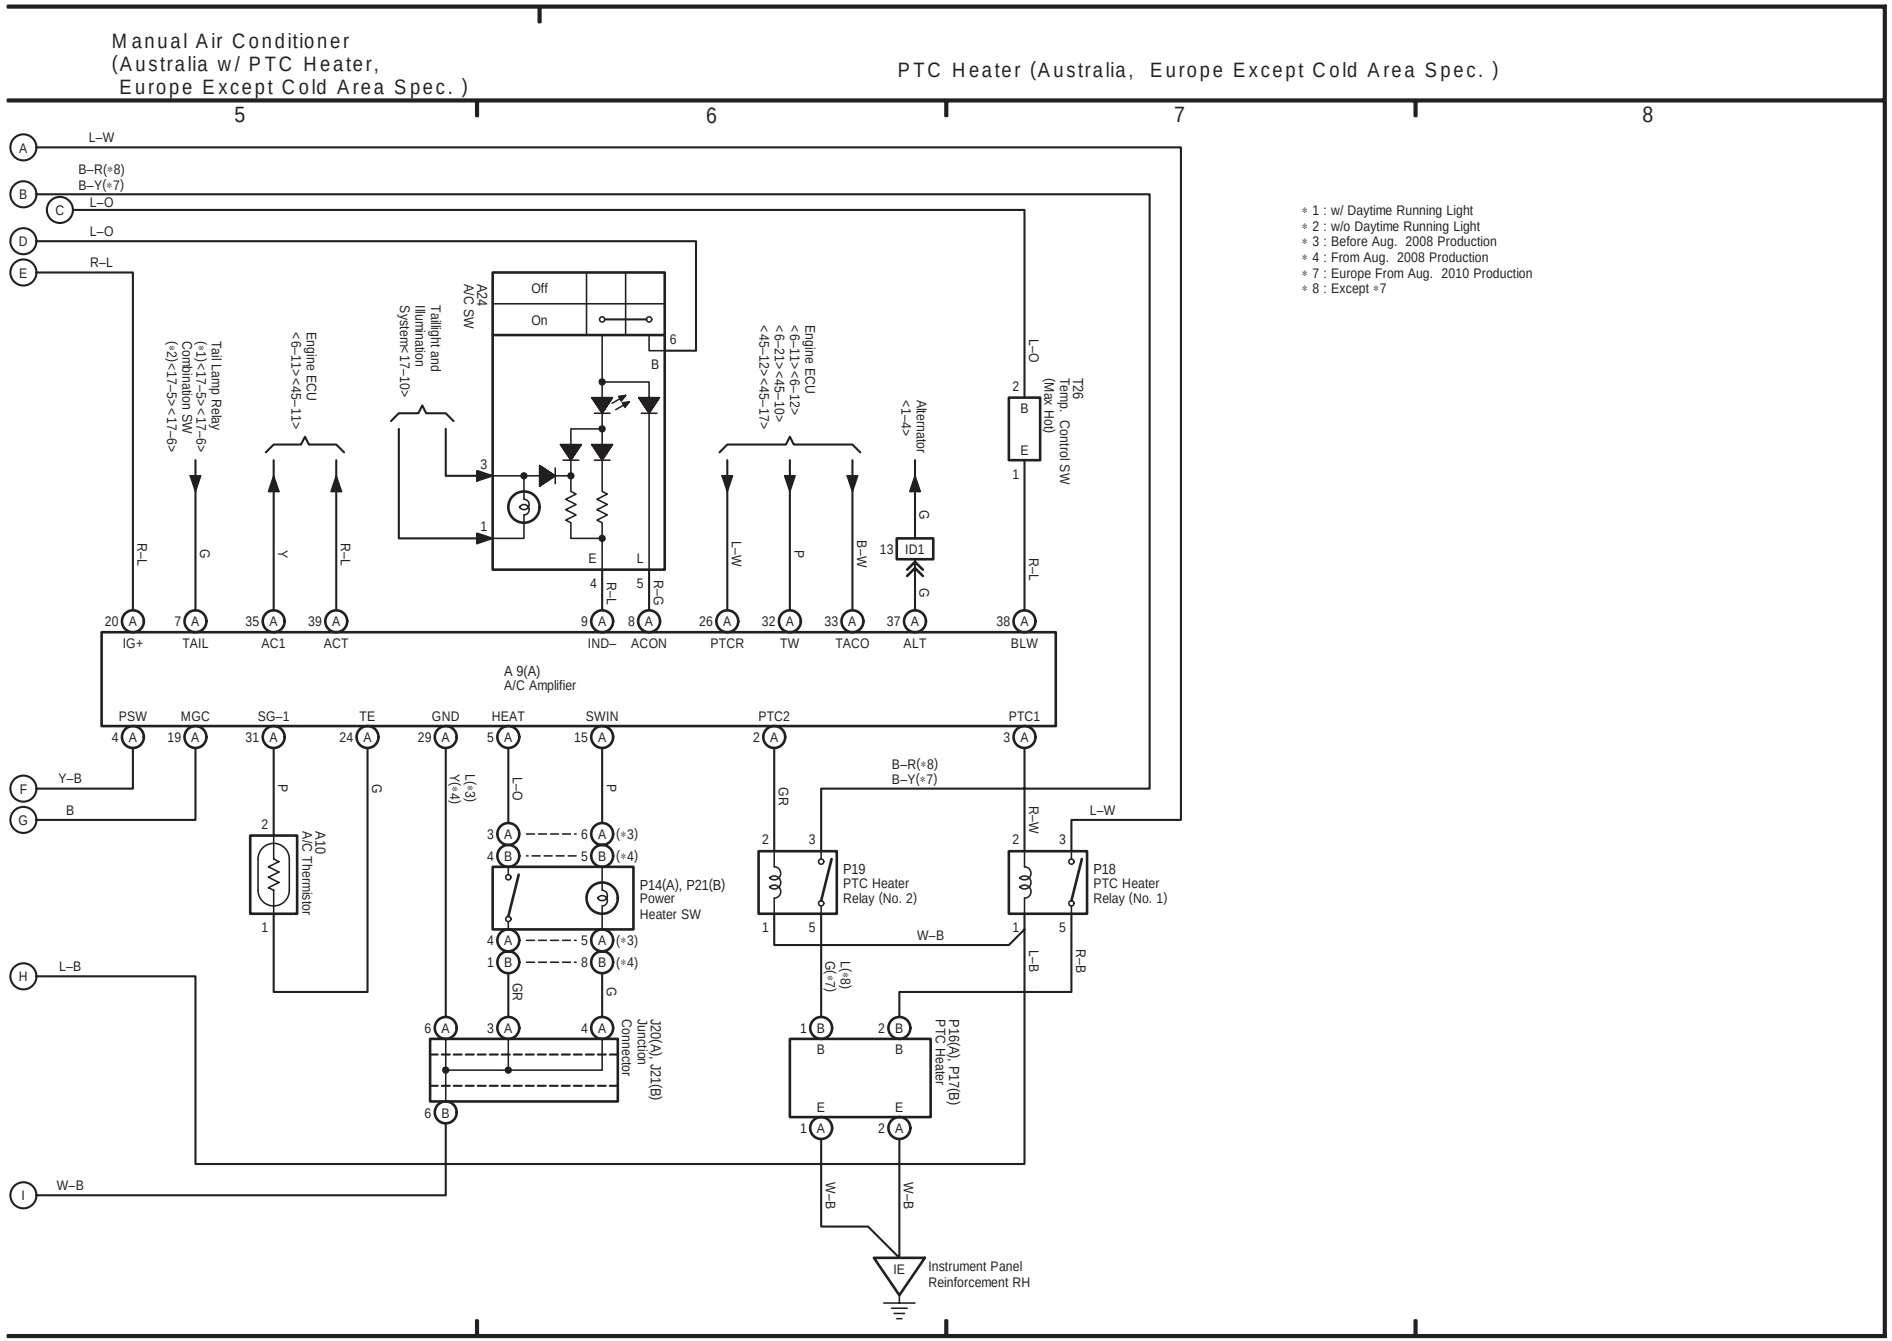


Manual Air Conditioner
(Australia w/ PTC Heater,
Europe Except Cold Area Spec.)
PTC Heater (Australia, Europe Except Cold Area Spec.)
5
6
7
8
A
B
C
D
E
F
G
H
I
L–W
B–R(*8)
B–Y(*7)
L–O
L–O
R–L
Y–B
B
L–B
W–B
Tail Lamp Relay
(*1)<17–5><17–6>
Combination SW
(*2)<17–5><17–6>
Engine ECU
<6–11><45–11>
Taillight and
Illumination
System<17–10>
A24
A/C SW
Off
On
Engine ECU
<6–11><6–12>
<6–21><45–10>
<45–12><45–17>
Alternator
<1–4>
T26
Temp. Control SW
(Max Hot)
ID1
IG+
TAIL
AC1
ACT
IND–
ACON
PTCR
TW
TACO
ALT
BLW
A 9(A)
A/C Amplifier
PSW
MGC
SG–1
TE
GND
HEAT
SWIN
PTC2
PTC1
A10
A/C Thermistor
P14(A), P21(B)
Power
Heater SW
P19
PTC Heater
Relay (No. 2)
P18
PTC Heater
Relay (No. 1)
J20(A), J21(B)
Junction
Connector
P16(A), P17(B)
PTC Heater
IE
Instrument Panel
Reinforcement RH
L(*3)
Y(*4)
L(*8)
G(*7)
GR
W–B
L–B
R–B
R–W
L–W
R–L
L–O
G
Y
P
B–W
L–W
R–G
B
E
L
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : Before Aug. 2008 Production
* 4 : From Aug. 2008 Production
* 7 : Europe From Aug. 2010 Production
* 8 : Except *7