




(BAT)
25A
EFI
2
L
(A/T)
L
(A/T)
1 B
2 B
6 A
J 4(A), J 5(B)
Junction
Connector
L
B
12 EA1 (*13)
8 EA1 (*14)
B
B
W–G
1 1J
5 1J
4 1J
2 1J
MAIN
Relay
3 1J
W–B
7
J 1
Junction
Connector
1
W–B
EB
W–B
(*6)
EC
W–G
B
14 IF3
1 IF3
W–G
B
8 J
1 J
2 K
4 L
MREL
+B
BATT
LUSL
E 5(J), E 6(K), E 7(L), E 8(M)
Engine ECU
E1
E01
E02
7 L
7 M
6 M
BR
W–B
W
W–B
(*7)
2 B (*8)
5 A (*2)
J 7(A), J44(B)
Junction
Connector
1 B (*8)
3 A (*2)
W–B
(*7)
W–B
3 A
2 A
GND
+B
LUSL
1 A
T 1(A), T 2(B)
Throttle Body
Assembly
GR
W–B
(*7)
B
J10
Junction
Connector
1
2
6
BR
BR
(*5)
W–B
9 ID1
BR
(*4)
W–B
BR
(*4)
EC

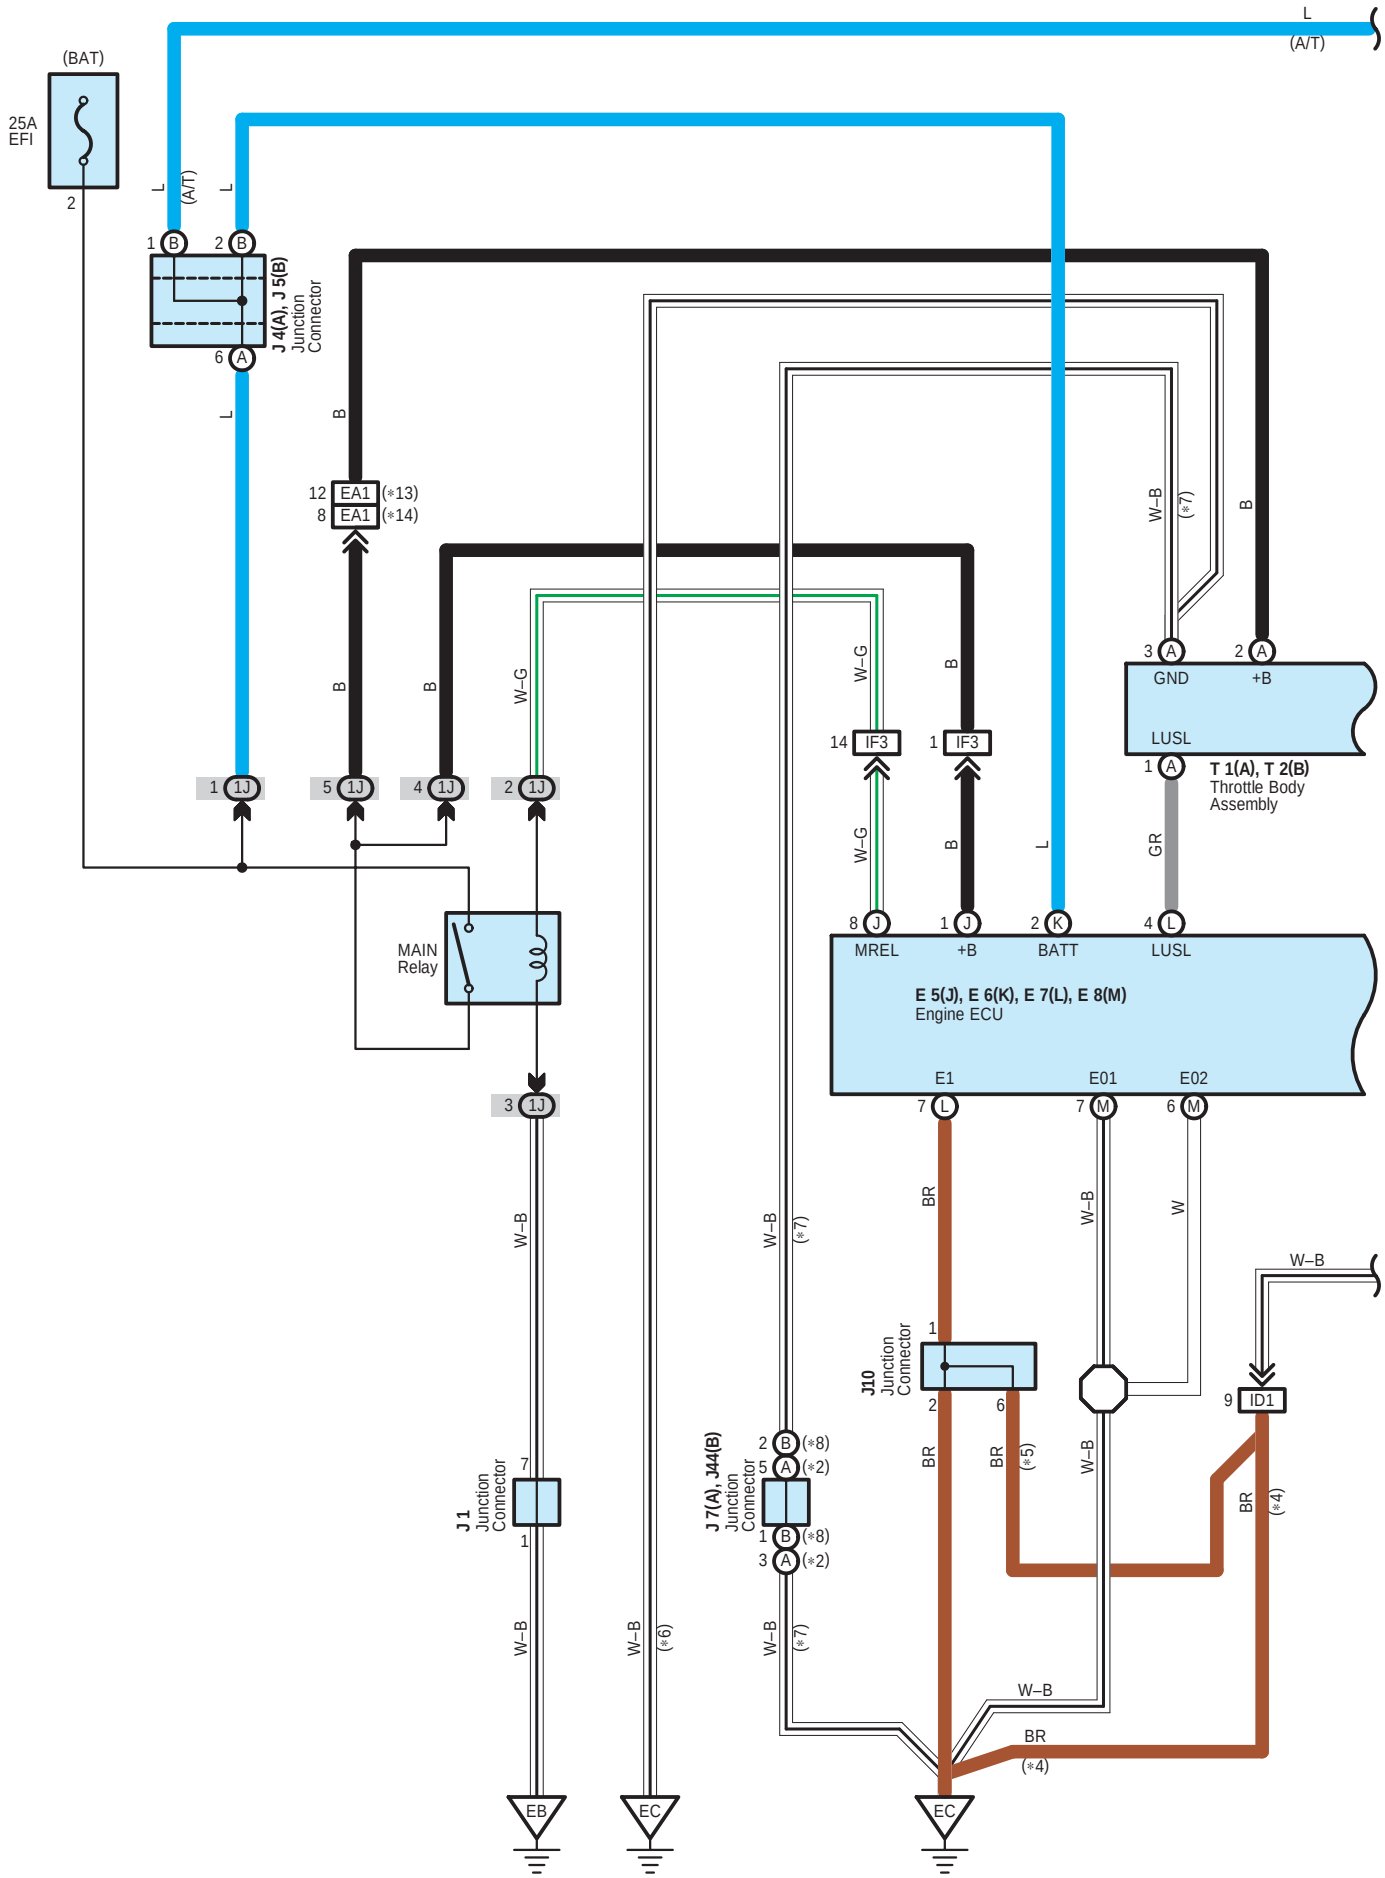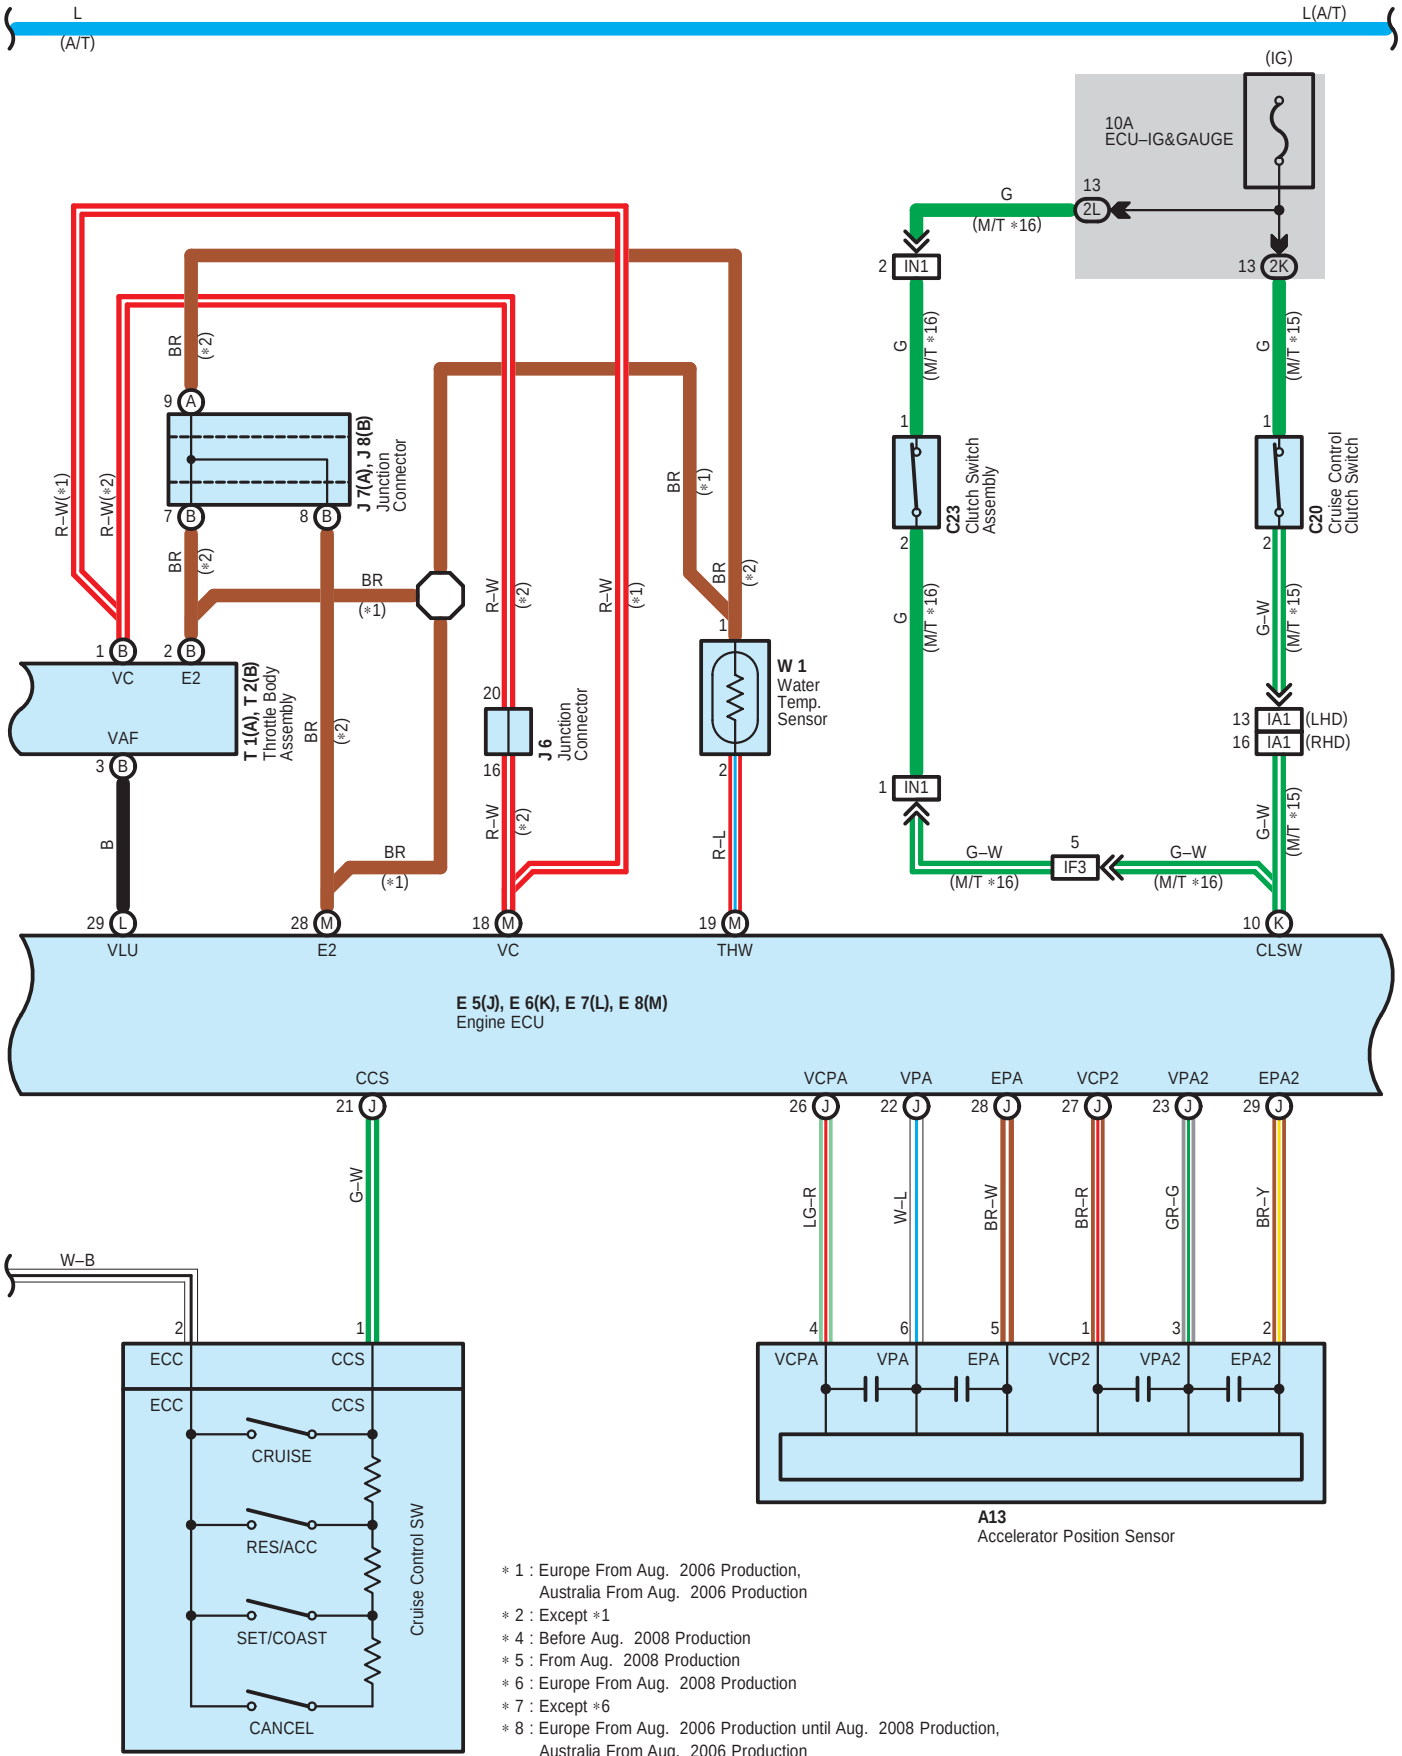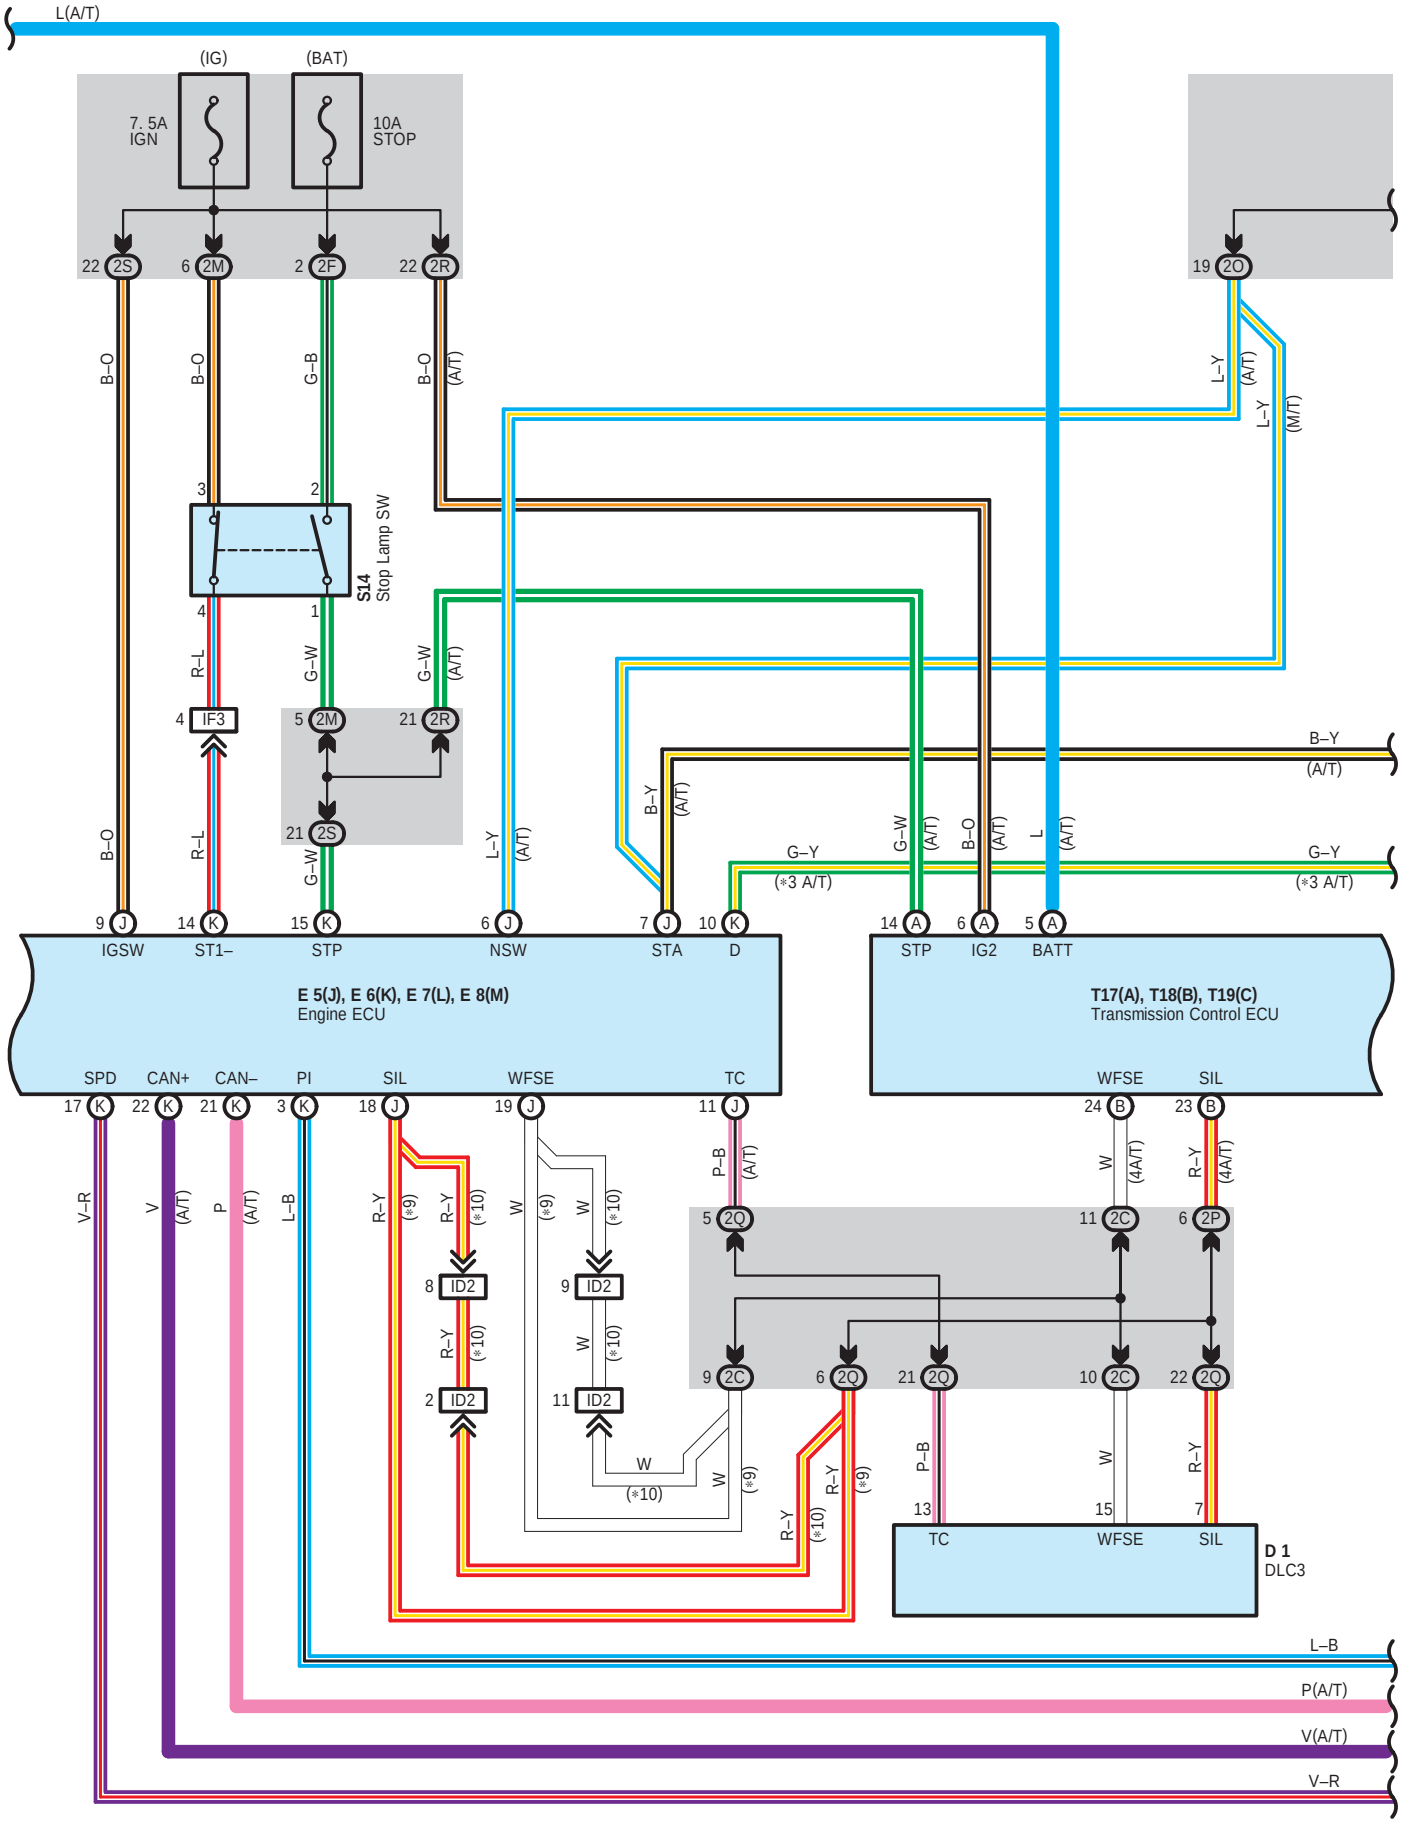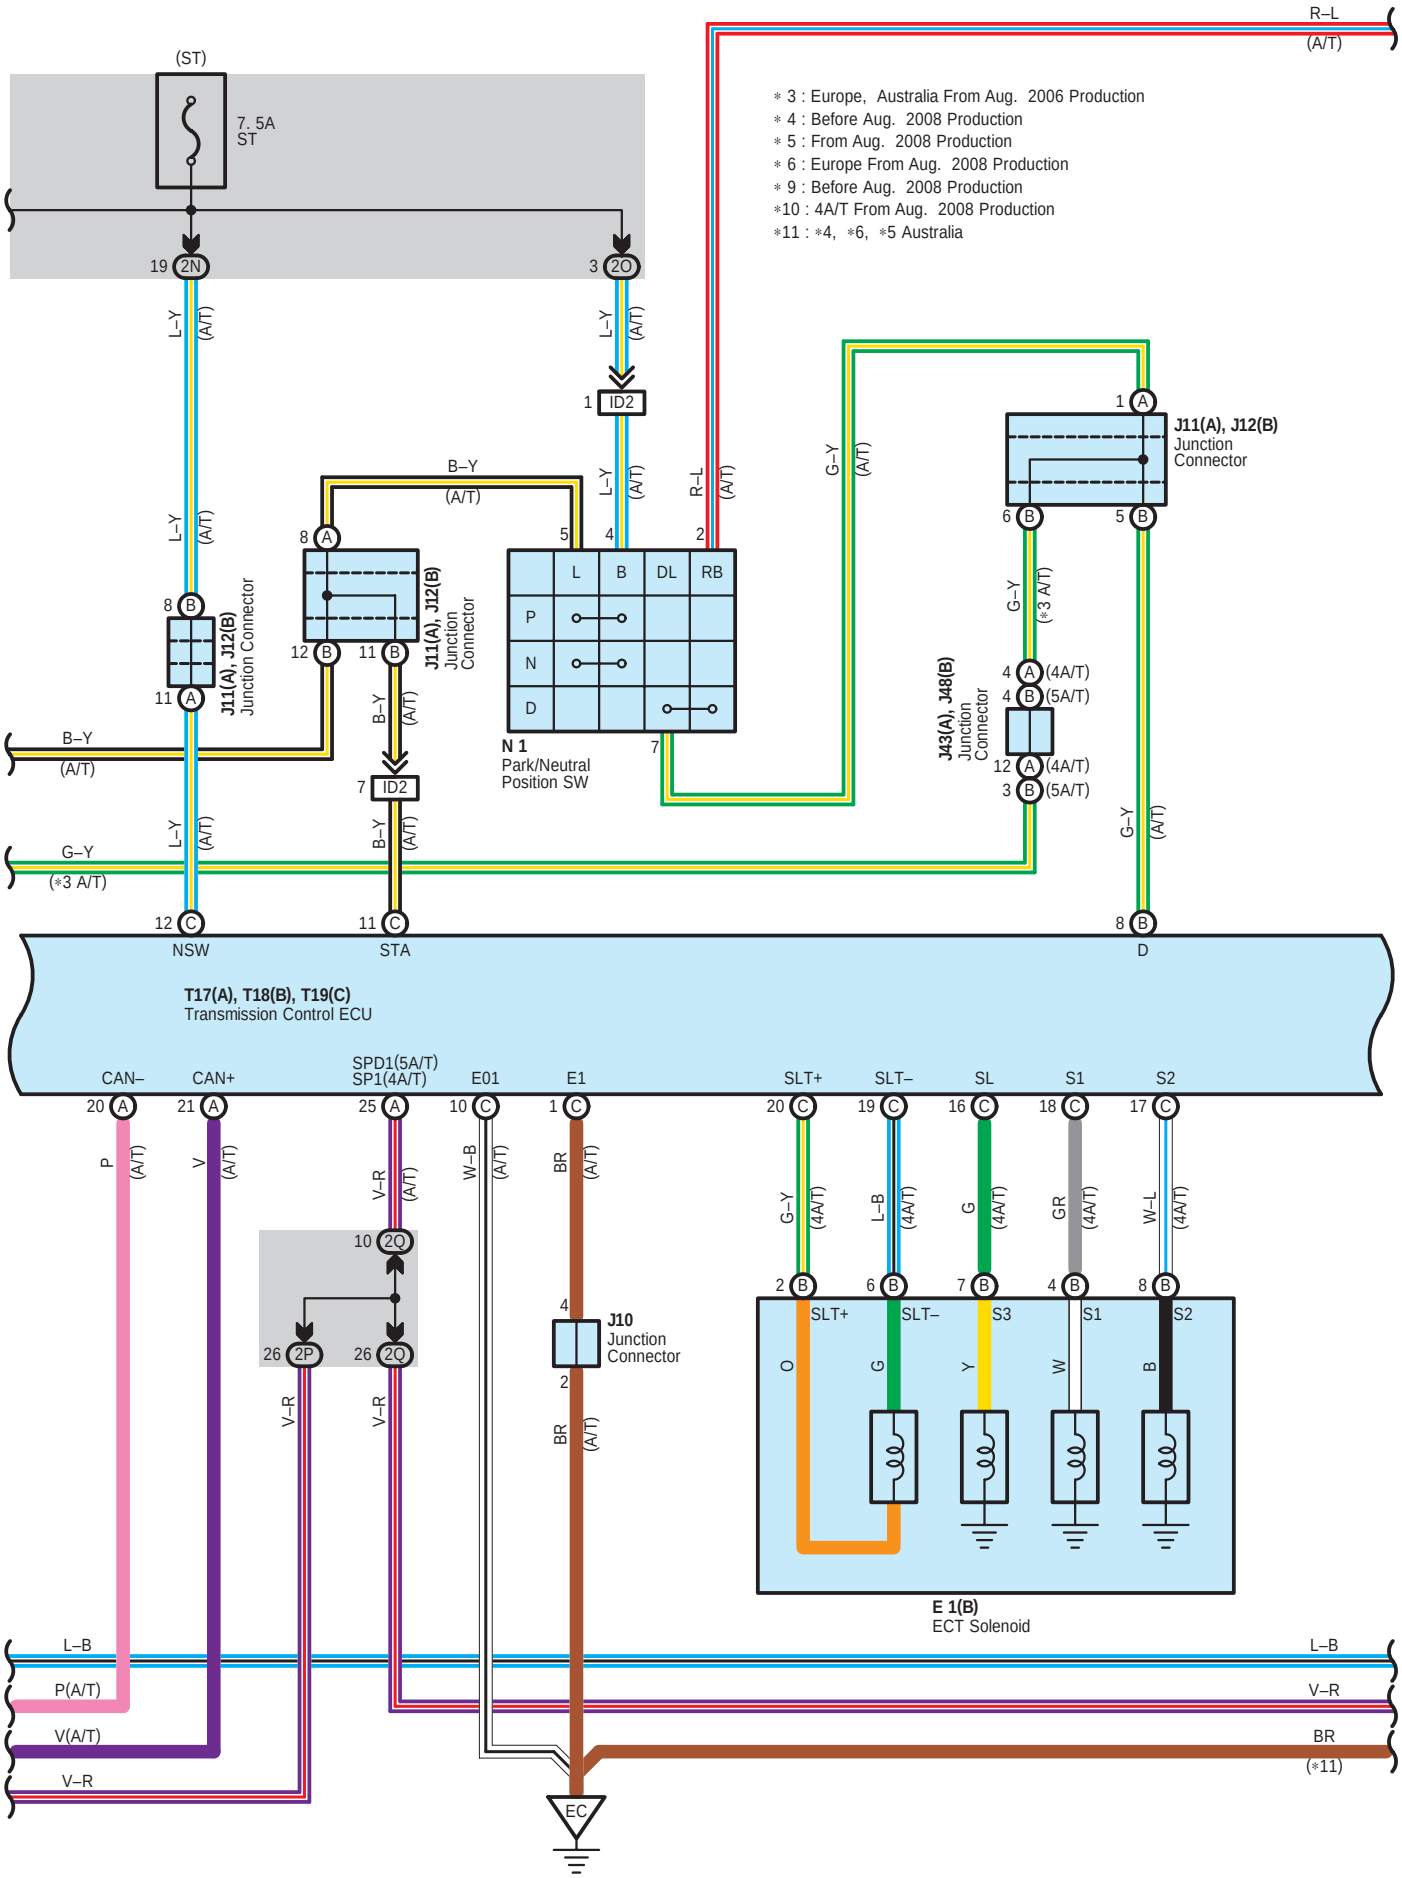


∗ 1 : Europe From Aug. 2006 Production,
Australia From Aug. 2006 Production
∗ 2 : Except ∗1
∗ 4 : Before Aug. 2008 Production
∗ 5 : From Aug. 2008 Production
∗ 6 : Europe From Aug. 2008 Production
∗ 7 : Except ∗6
∗ 8 : Europe From Aug. 2006 Production until Aug. 2008 Production,
Australia From Aug. 2006 Production
∗13 : Before Aug. 2009 Production
∗14 : From Aug. 2009 Production
∗15 : Before Aug. 2010 Production
∗16 : From Aug. 2010 Production


L(A/T)
(IG)
(BAT)
7. 5A
IGN
10A
STOP
22 2S
6 2M
2 2F
22 2R
19 2O
B–O
G–B
L–Y
(A/T)
(M/T)
S14
Stop Lamp SW
R–L
G–W
IF3
5 2M
21 2R
21 2S
B–Y
G–Y
(*3 A/T)
9 J
IGSW
14 K
ST1–
15 K
STP
6 J
NSW
7 J
STA
10 K
D
14 A
STP
6 A
IG2
5 A
BATT
E 5(J), E 6(K), E 7(L), E 8(M)
Engine ECU
T17(A), T18(B), T19(C)
Transmission Control ECU
SPD
CAN+
CAN–
PI
SIL
WFSE
TC
17 K
22 K
21 K
3 K
18 J
19 J
11 J
24 B
23 B
V–R
V
P
L–B
R–Y
W
P–B
(4A/T)
5 2Q
11 2C
6 2P
8 ID2
9 ID2
2 ID2
11 ID2
(*9)
(*10)
9 2C
6 2Q
21 2Q
10 2C
22 2Q
13
15
7
TC
WFSE
SIL
D 1
DLC3
L–B
P(A/T)
V(A/T)
V–R



R–L
(A/T)
(ST)
7. 5A
ST
19 2N
3 2O
∗ 3 : Europe, Australia From Aug. 2006 Production
∗ 4 : Before Aug. 2008 Production
∗ 5 : From Aug. 2008 Production
∗ 6 : Europe From Aug. 2008 Production
∗ 9 : Before Aug. 2008 Production
∗10 : 4A/T From Aug. 2008 Production
∗11 : ∗4, ∗6, ∗5 Australia
L–Y (A/T)
1 ID2
B–Y (A/T)
R–L (A/T)
G–Y (A/T)
8 A
5
4
2
1 A
J11(A), J12(B)
Junction Connector
6 B
5 B
8 B
12 B
11 B
11 A
J11(A), J12(B)
Junction Connector
G–Y (∗3 A/T)
4 A (4A/T)
4 B (5A/T)
J43(A), J48(B)
Junction Connector
12 A (4A/T)
3 B (5A/T)
N 1
Park/Neutral
Position SW
7
B–Y (A/T)
7 ID2
G–Y (∗3 A/T)
12 C
NSW
11 C
STA
8 B
D
T17(A), T18(B), T19(C)
Transmission Control ECU
CAN–
CAN+
SPD1(5A/T)
SP1(4A/T)
E01
E1
SLT+
SLT–
SL
S1
S2
20 A
21 A
25 A
10 C
1 C
20 C
19 C
16 C
18 C
17 C
P (A/T)
V (A/T)
V–R (A/T)
W–B (A/T)
BR (A/T)
G–Y (4A/T)
L–B (4A/T)
G (4A/T)
GR (4A/T)
W–L (4A/T)
10 2Q
26 2P
26 2Q
4
J10
Junction
Connector
2
BR (A/T)
2 B
6 B
7 B
4 B
8 B
SLT+
SLT–
S3
S1
S2
O
G
Y
W
B
E 1(B)
ECT Solenoid
L–B
P(A/T)
V(A/T)
V–R
L–B
V–R
BR
(∗11)
EC

R–L (A/T) — R–L (A/T)


∗ 4 : Before Aug. 2008 Production
∗ 5 : From Aug. 2008 Production
∗ 6 : Europe From Aug. 2008 Production
∗11 : ∗4, ∗6, ∗5 Australia
∗12 : Except ∗11

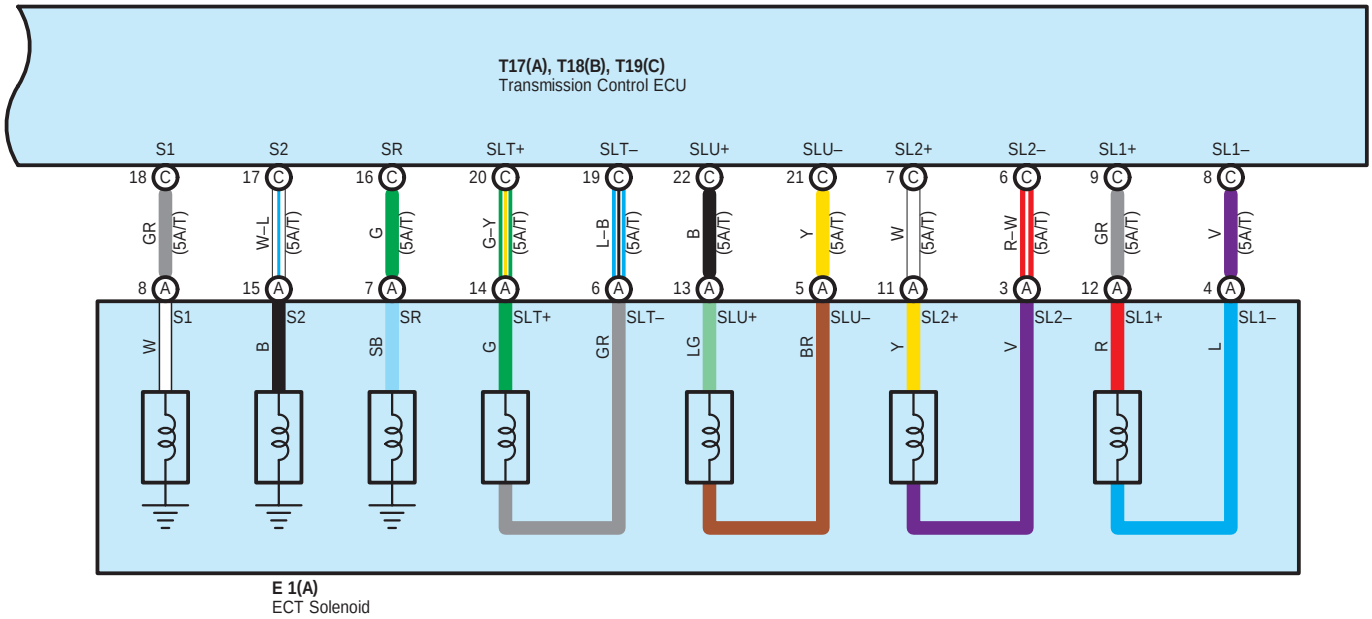


L–B — L–B
V–R — V–R
BR (∗11) — BR (∗11)

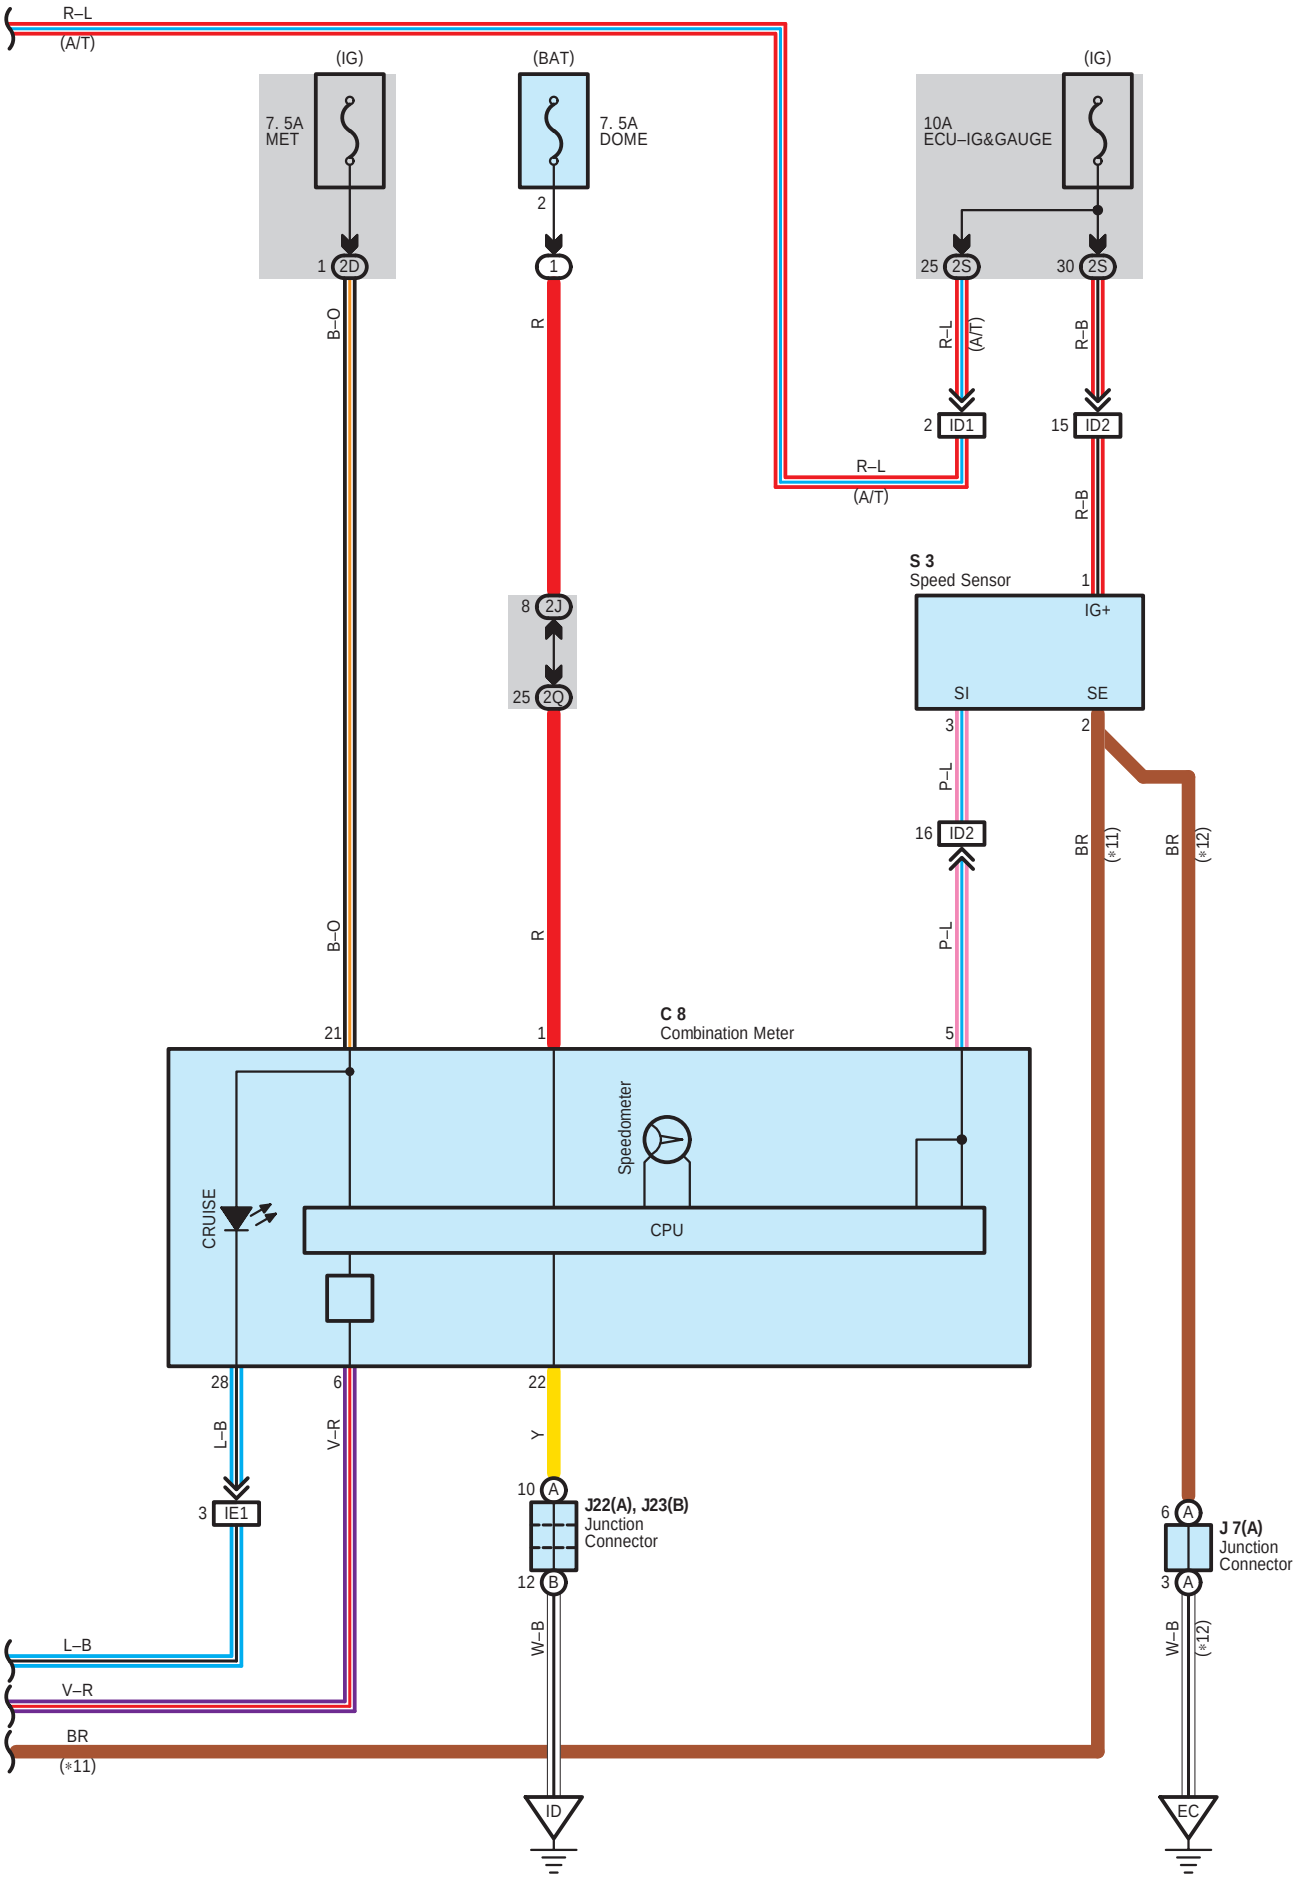
R–L
(A/T)
(IG)
7. 5A
MET
1
2D
B–O
(BAT)
7. 5A
DOME
2
1
R
8
2J
25
2Q
(IG)
10A
ECU–IG&GAUGE
25
2S
30
2S
R–L
(A/T)
2
ID1
R–L
(A/T)
R–B
15
ID2
R–B
S 3
Speed Sensor
1
IG+
SI
SE
3
2
P–L
16
ID2
P–L
BR
(*11)
BR
(*12)
B–O
R
C 8
Combination Meter
21
1
5
Speedometer
CRUISE
CPU
28
6
22
L–B
V–R
Y
3
IE1
10
A
J22(A), J23(B)
Junction
Connector
12
B
W–B
6
A
J 7(A)
Junction
Connector
3
A
W–B
(*12)
L–B
V–R
BR
(*11)
ID
EC


A 13
Black

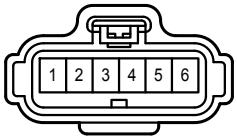


C 8
White

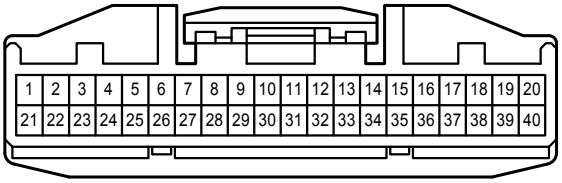


C 20
White



C 23
White



D 1
White

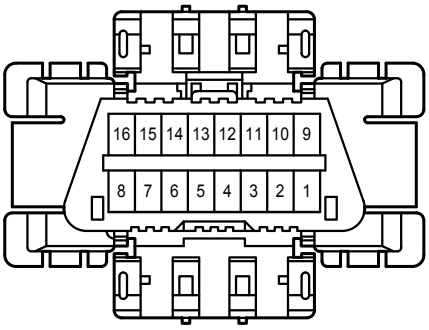


E 1
Gray




(1KD-FTV 4A/T, 2KD-FTV 4A/T)

E 1
Gray

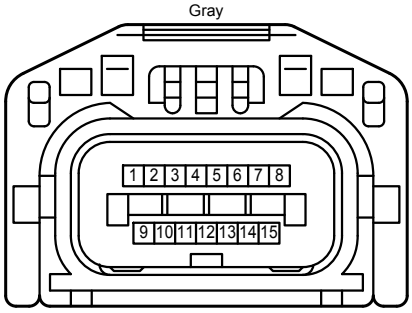


(5A/T)


E 5
Gray

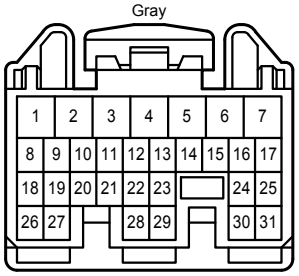


E 6
Gray

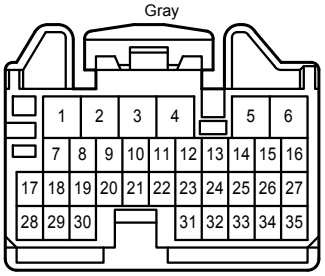


E 7
Gray

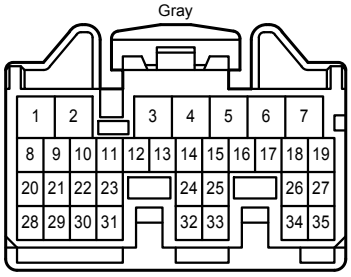


E 8
Gray

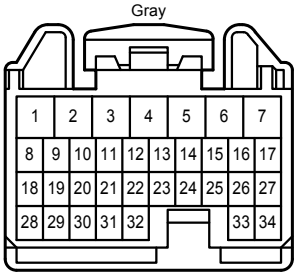


J 1
White




J 4
Black

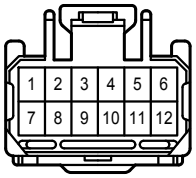


J 5
White

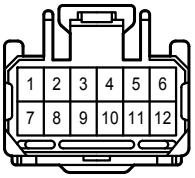


J 6
White

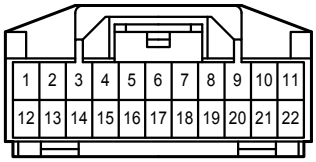


J 7
Blue

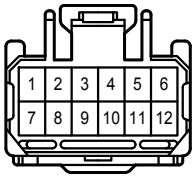


J 8
Blue

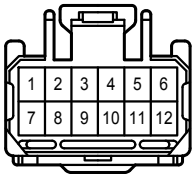


J 10
White

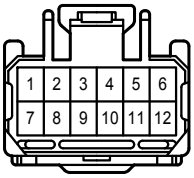


J 11
White

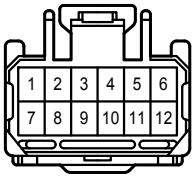


J 12
White

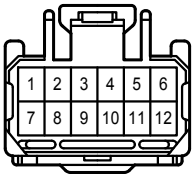


J 22
White

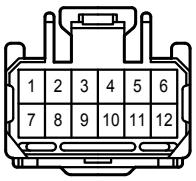


J 23
White

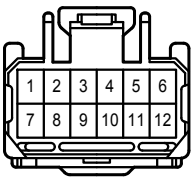


J 43
White




J 44
Black



J 48
White

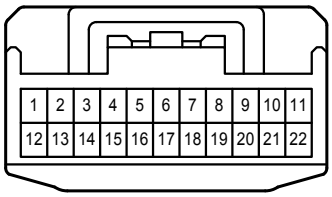

N 1
Gray

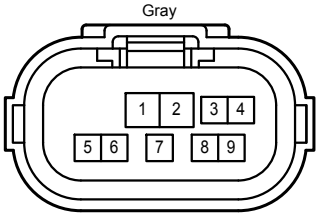


S 3
Black



S 13
Black



S 14
White

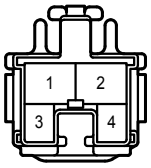


T 1
Black




T 2
Black




T 17
White

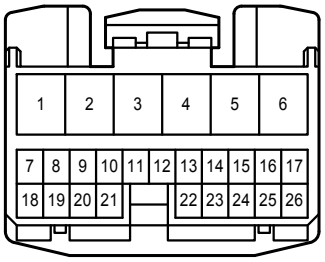

T 18
White

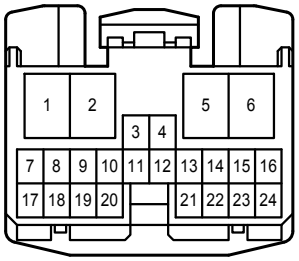


T 19
White

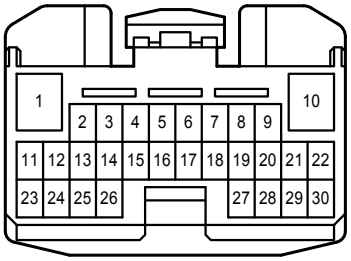


W 1
Black




1J
White

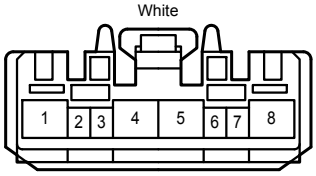


2C
White

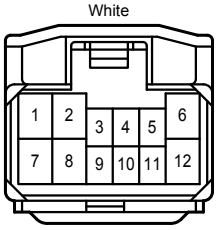


2D
White

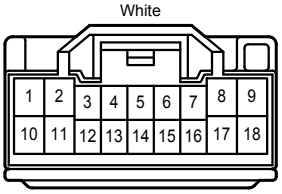


2F
White




2J
White

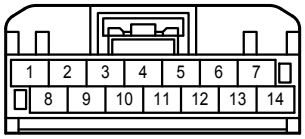


2K
Black

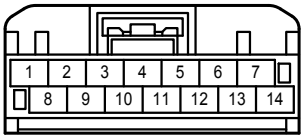


2L
Black

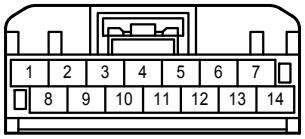


2M
White

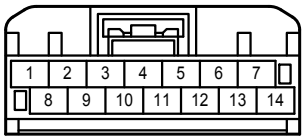


2N
Gray

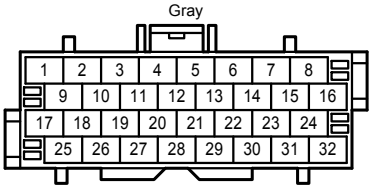


2O
White

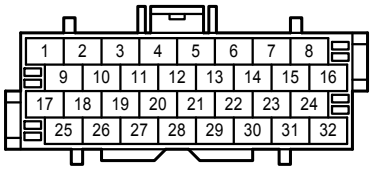


2P
White

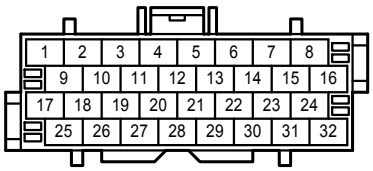


2Q
Gray

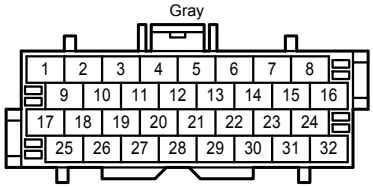


2R
Gray

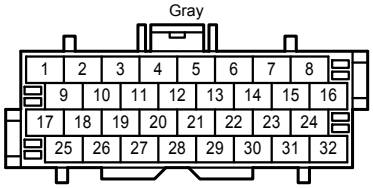


2S
White

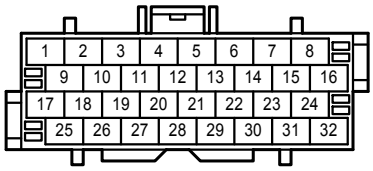


EA1
White

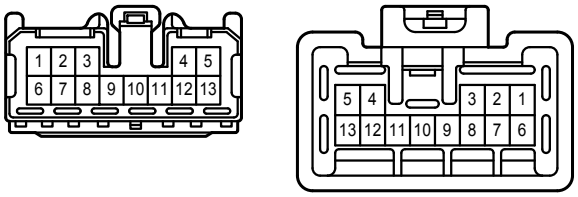


IA1
White

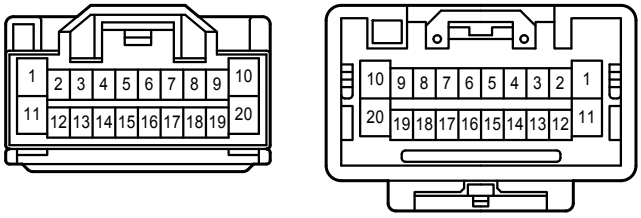


ID1
Gray

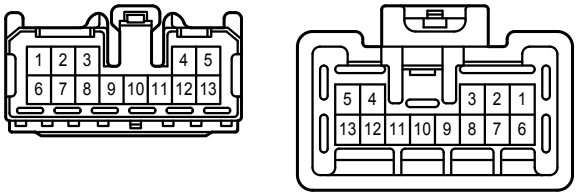


ID2
White

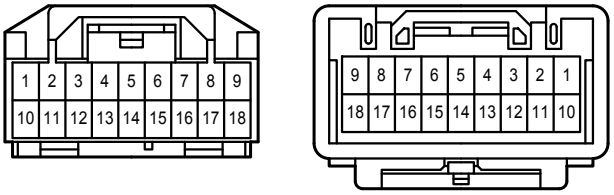

IE1
White

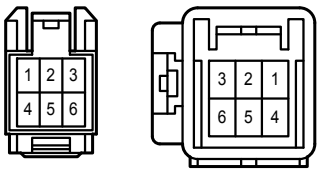

IF3
White

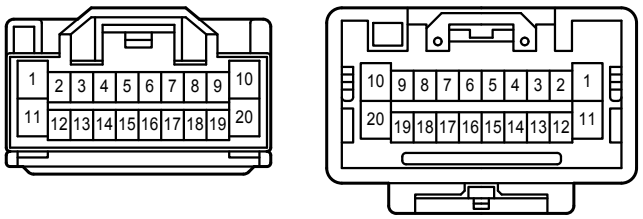

IN1
Gray White

