




Spiral Cable
Fuel Sedimenter Level Warning SW
Speed Sensor
Engine Oil Level Sensor
DLC3 (SG)
ID1
EA1
ID2
J10 Junction Connector
Crankshaft Position Sensor
(Shielded)
(E1) Engine ECU
Transmission Control ECU
(E01)
(A/T)
(E02)
EC
(*2)
J44 Junction Connector
Injector Driver (EDU)
4WD Control ECU
ADD Actuator
Transfer Indicator SW (Neutral Position)
Turbo Motor Driver
Transfer Indicator SW (L4 Position)
Speed Sensor
Transfer Indicator SW (4WD Position)
Throttle Body Assembly
J 7(A), J 8(B) Junction Connector
BR
W–B
(*25)
(*25, *26 *32)
(*25 *33)
(*26)
(*29)
(*30)
(*31)
(*17)
(*17 A/T)
(*18)
(*18 A/T)
(Europe *26)
W–B(*18)
W–B(*29)
W–B(Europe *26)
BR(*25 *33)
BR(*26 *33)

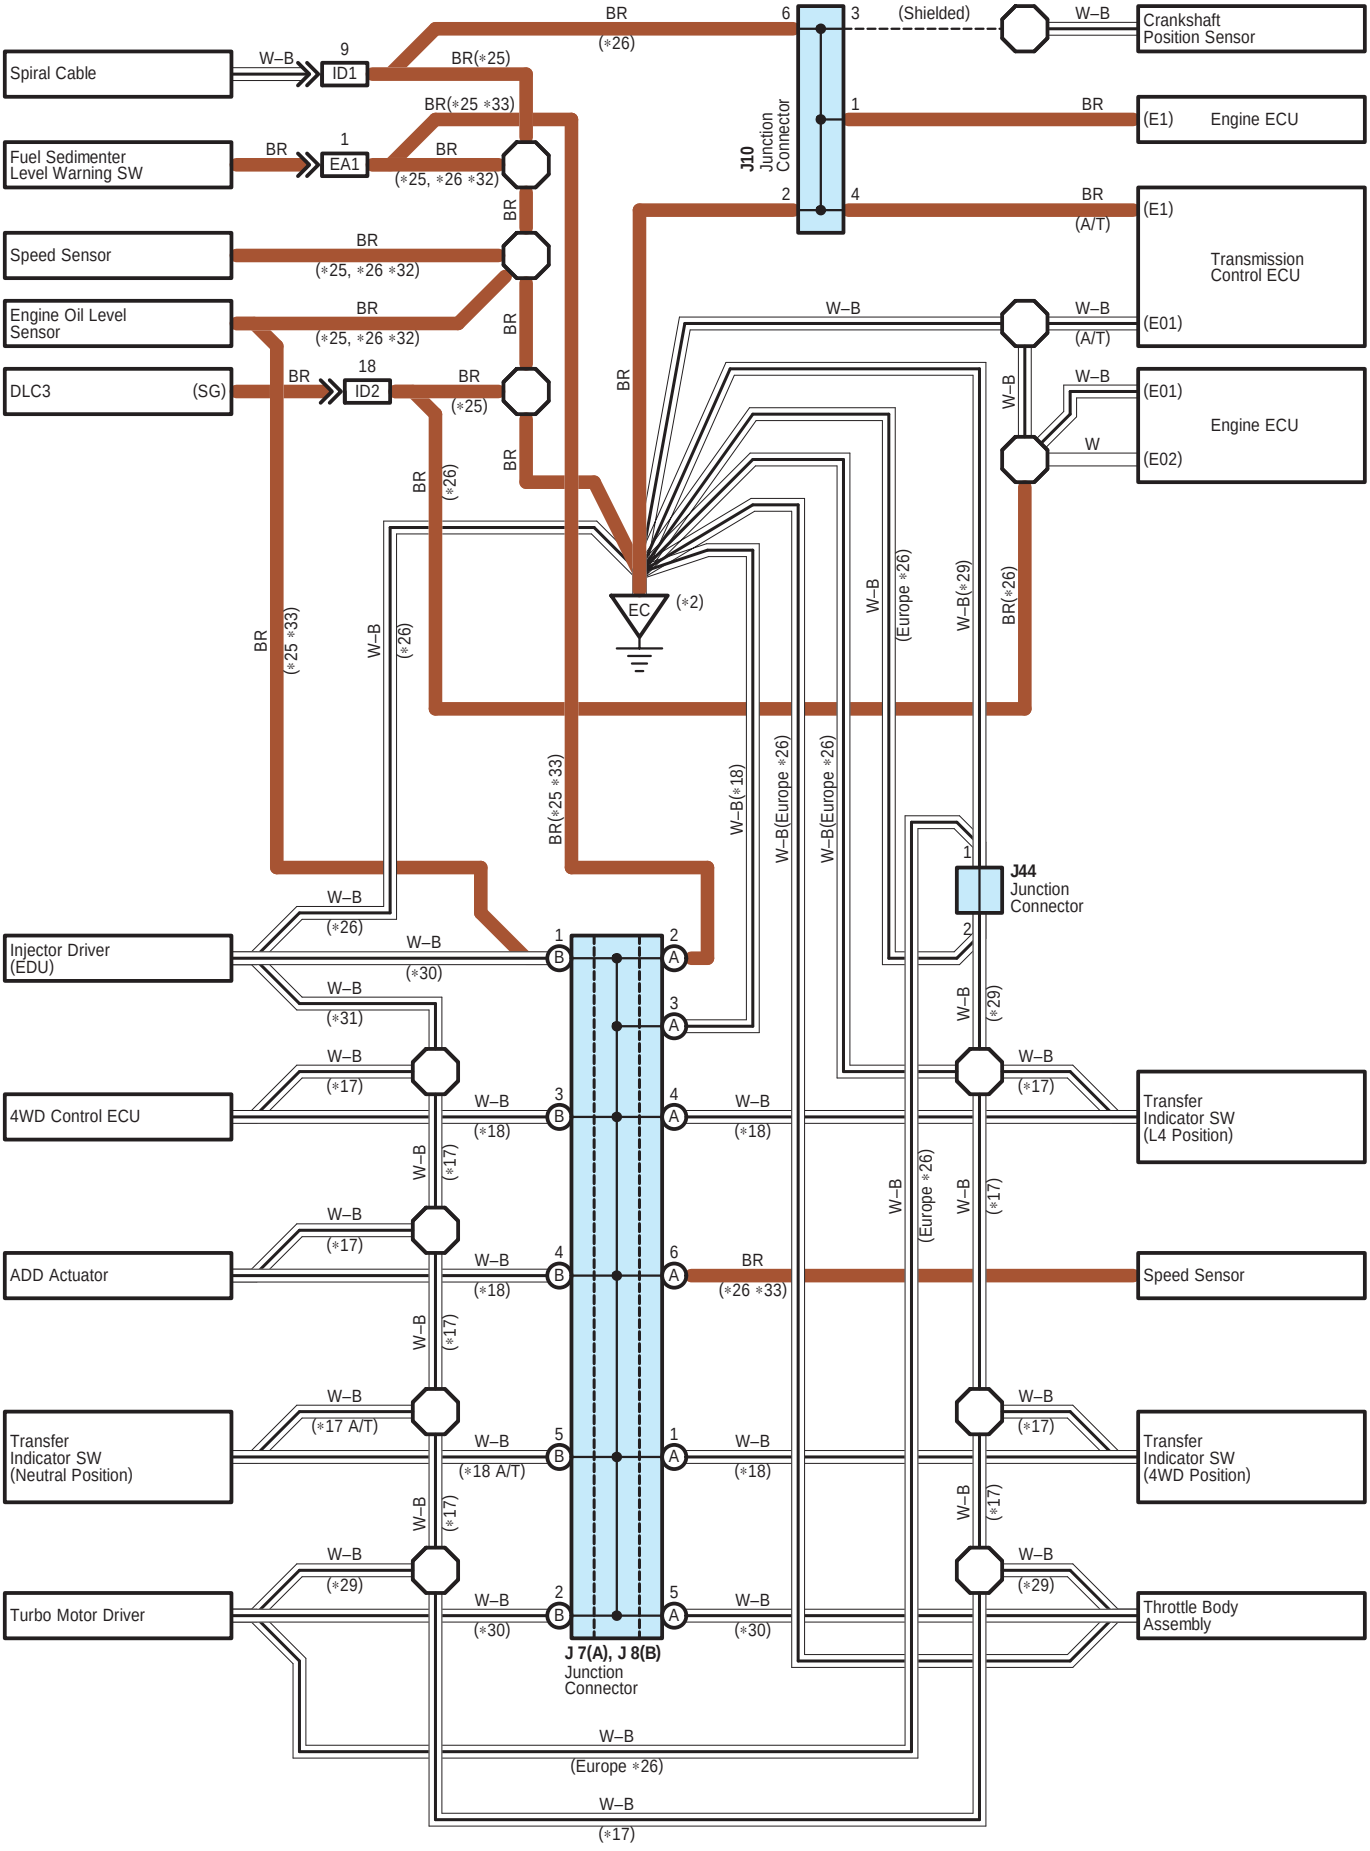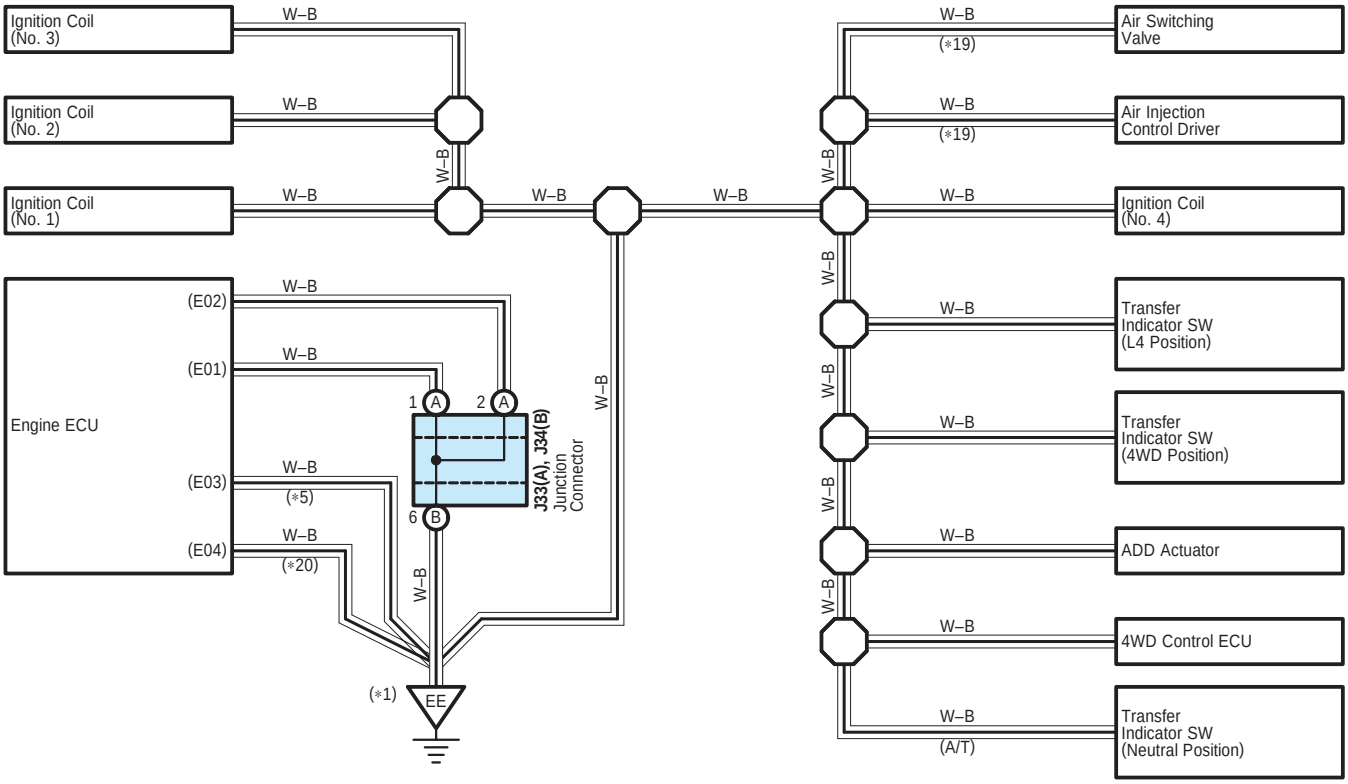



∗ 1 : 1TR–FE, 2TR–FE
∗ 2 : 1KD–FTV, 2KD–FTV
∗ 5 : Australia Except Unleaded Gasoline
∗17 : Europe From Aug. 2006 Production, Australia From Aug. 2006 Production
∗18 : Except ∗17
∗19 : 2TR–FE Australia
∗20 : Australia
∗25 : Before Aug. 2008 Production
∗26 : From Aug. 2008 Production
∗29 : Europe From Aug. 2006 Production until Aug. 2008 Production,
Australia From Aug. 2006 Production
∗30 : Europe Before Aug. 2006 Production, Australia Before Aug. 2006 Production
∗31 : From Aug. 2006 Production until Aug. 2008 Production
∗32 : Australia, Europe
∗33 : Except ∗32

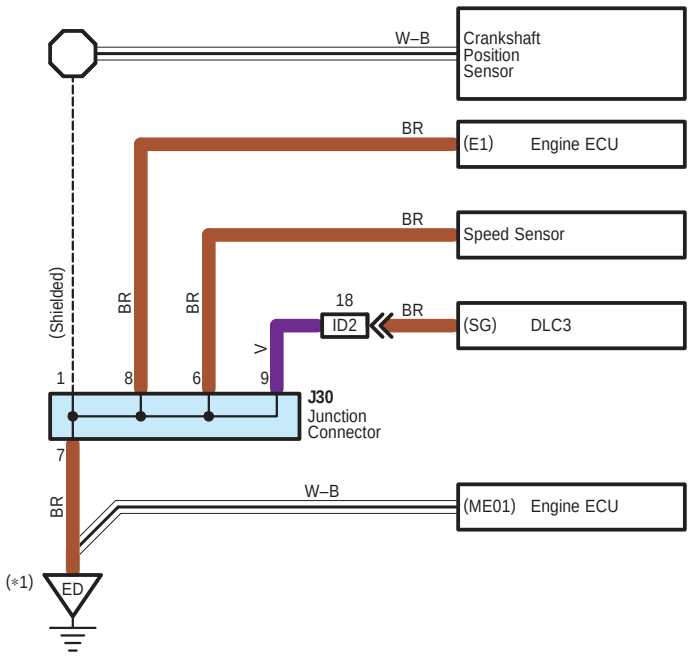


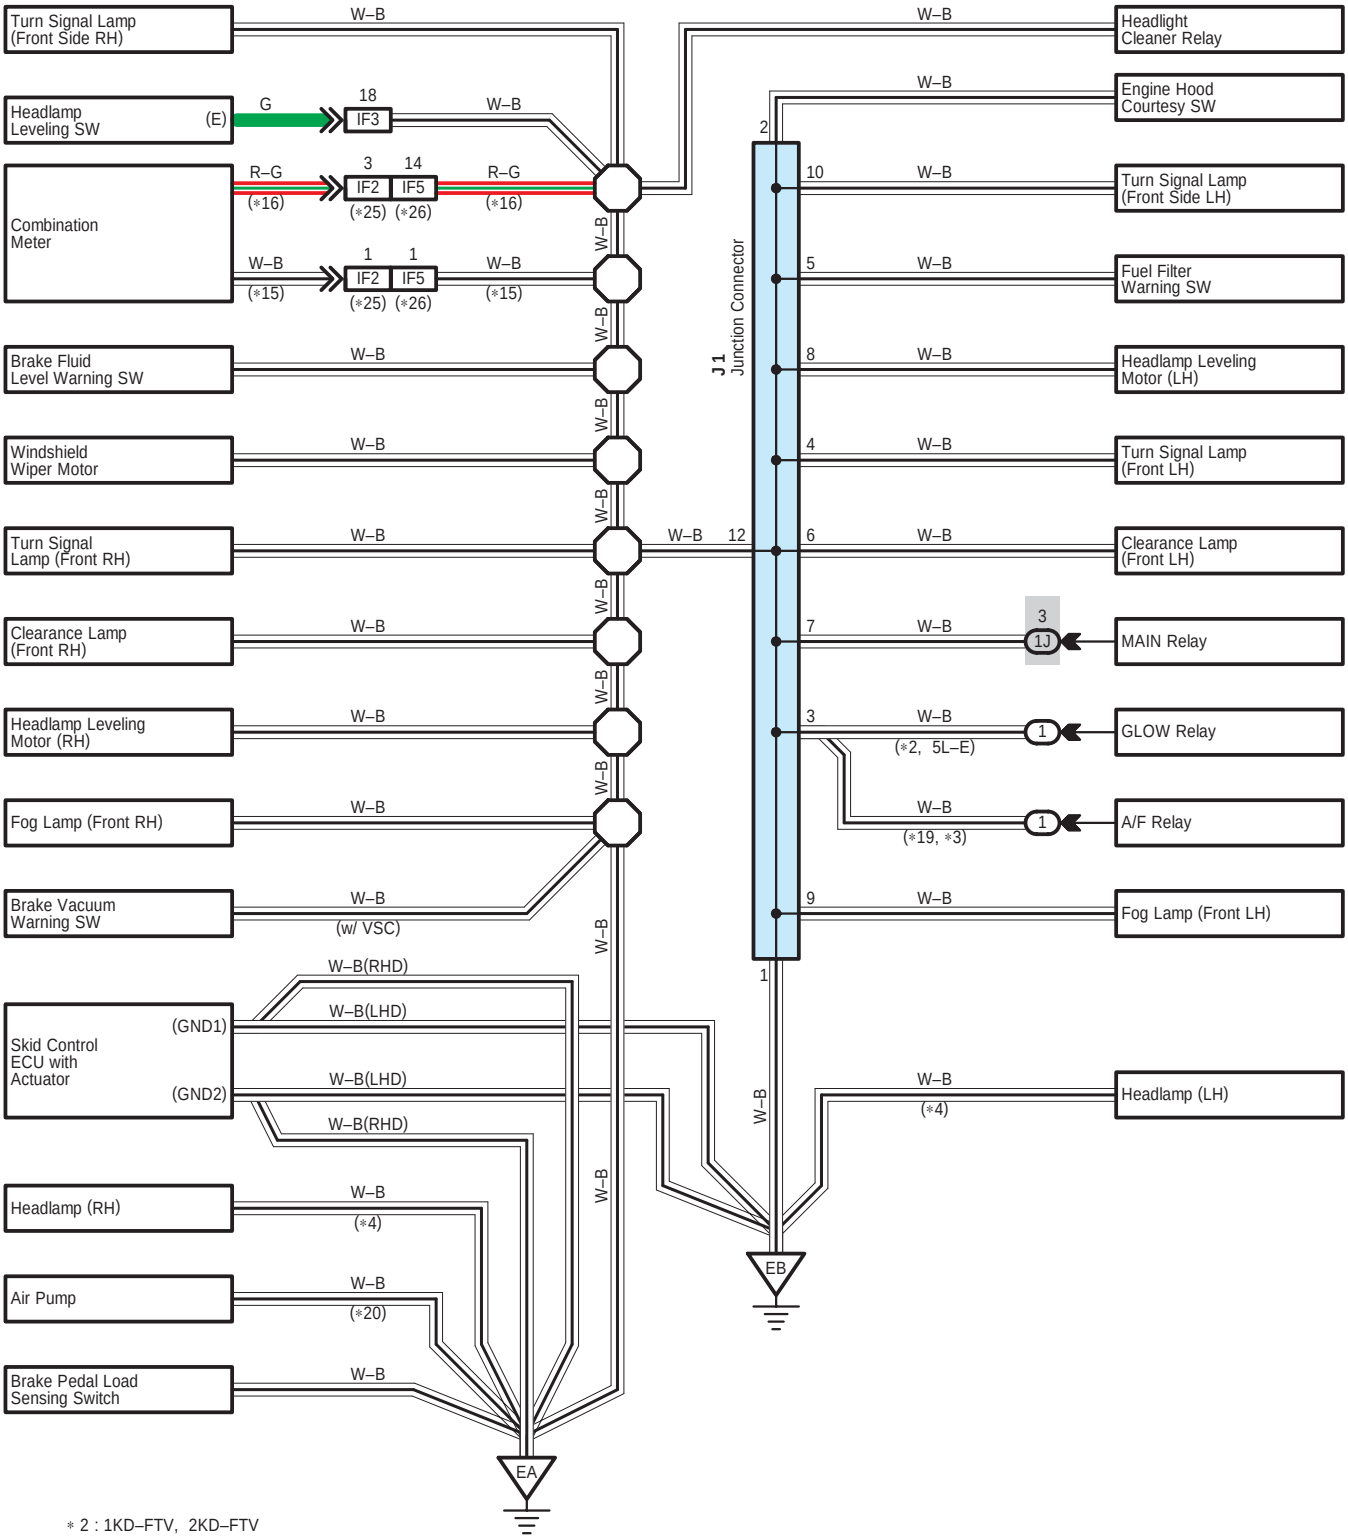


∗ 2 : 1KD–FTV, 2KD–FTV
∗ 3 : 1GR–FE
∗ 4 : w/ Daytime Running Light
∗15 : w/o SRS
∗16 : w/o ABS
∗19 : 2TR–FE Australia
∗20 : Australia
∗25 : Before Aug. 2008 Production
∗26 : From Aug. 2008 Production

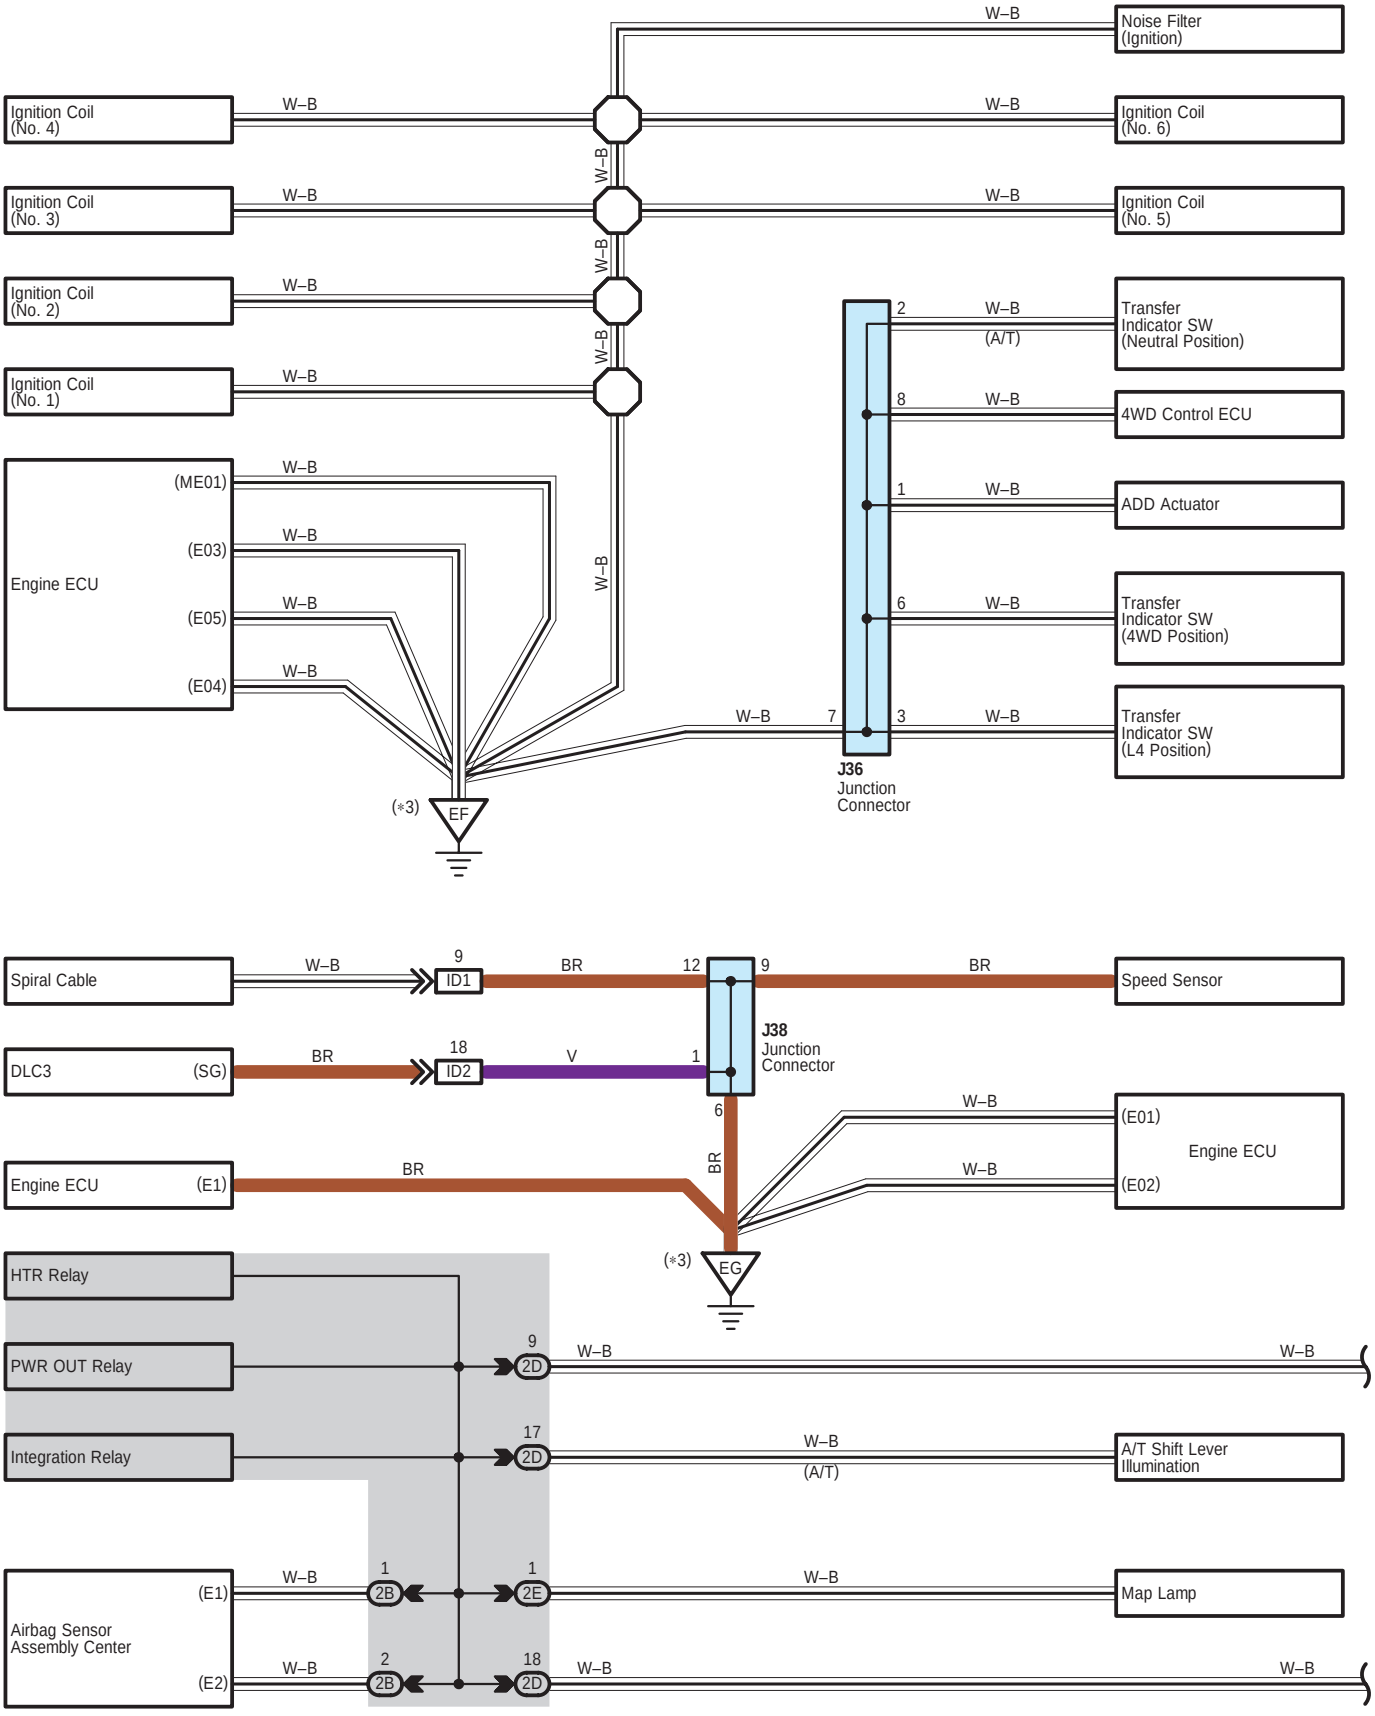

Noise Filter (Ignition)
Ignition Coil (No. 4)
Ignition Coil (No. 6)
Ignition Coil (No. 3)
Ignition Coil (No. 5)
Ignition Coil (No. 2)
Ignition Coil (No. 1)
Transfer Indicator SW (Neutral Position)
(A/T)
4WD Control ECU
ADD Actuator
Transfer Indicator SW (4WD Position)
Transfer Indicator SW (L4 Position)
Engine ECU
(ME01)
(E03)
(E05)
(E04)
J36 Junction Connector
(*3)
EF
W–B
Spiral Cable
DLC3
(SG)
ID1
ID2
BR
V
J38 Junction Connector
Speed Sensor
Engine ECU
(E1)
(E01)
(E02)
EG
HTR Relay
PWR OUT Relay
Integration Relay
A/T Shift Lever Illumination
Airbag Sensor Assembly Center
(E1)
(E2)
2B
2D
2E
Map Lamp

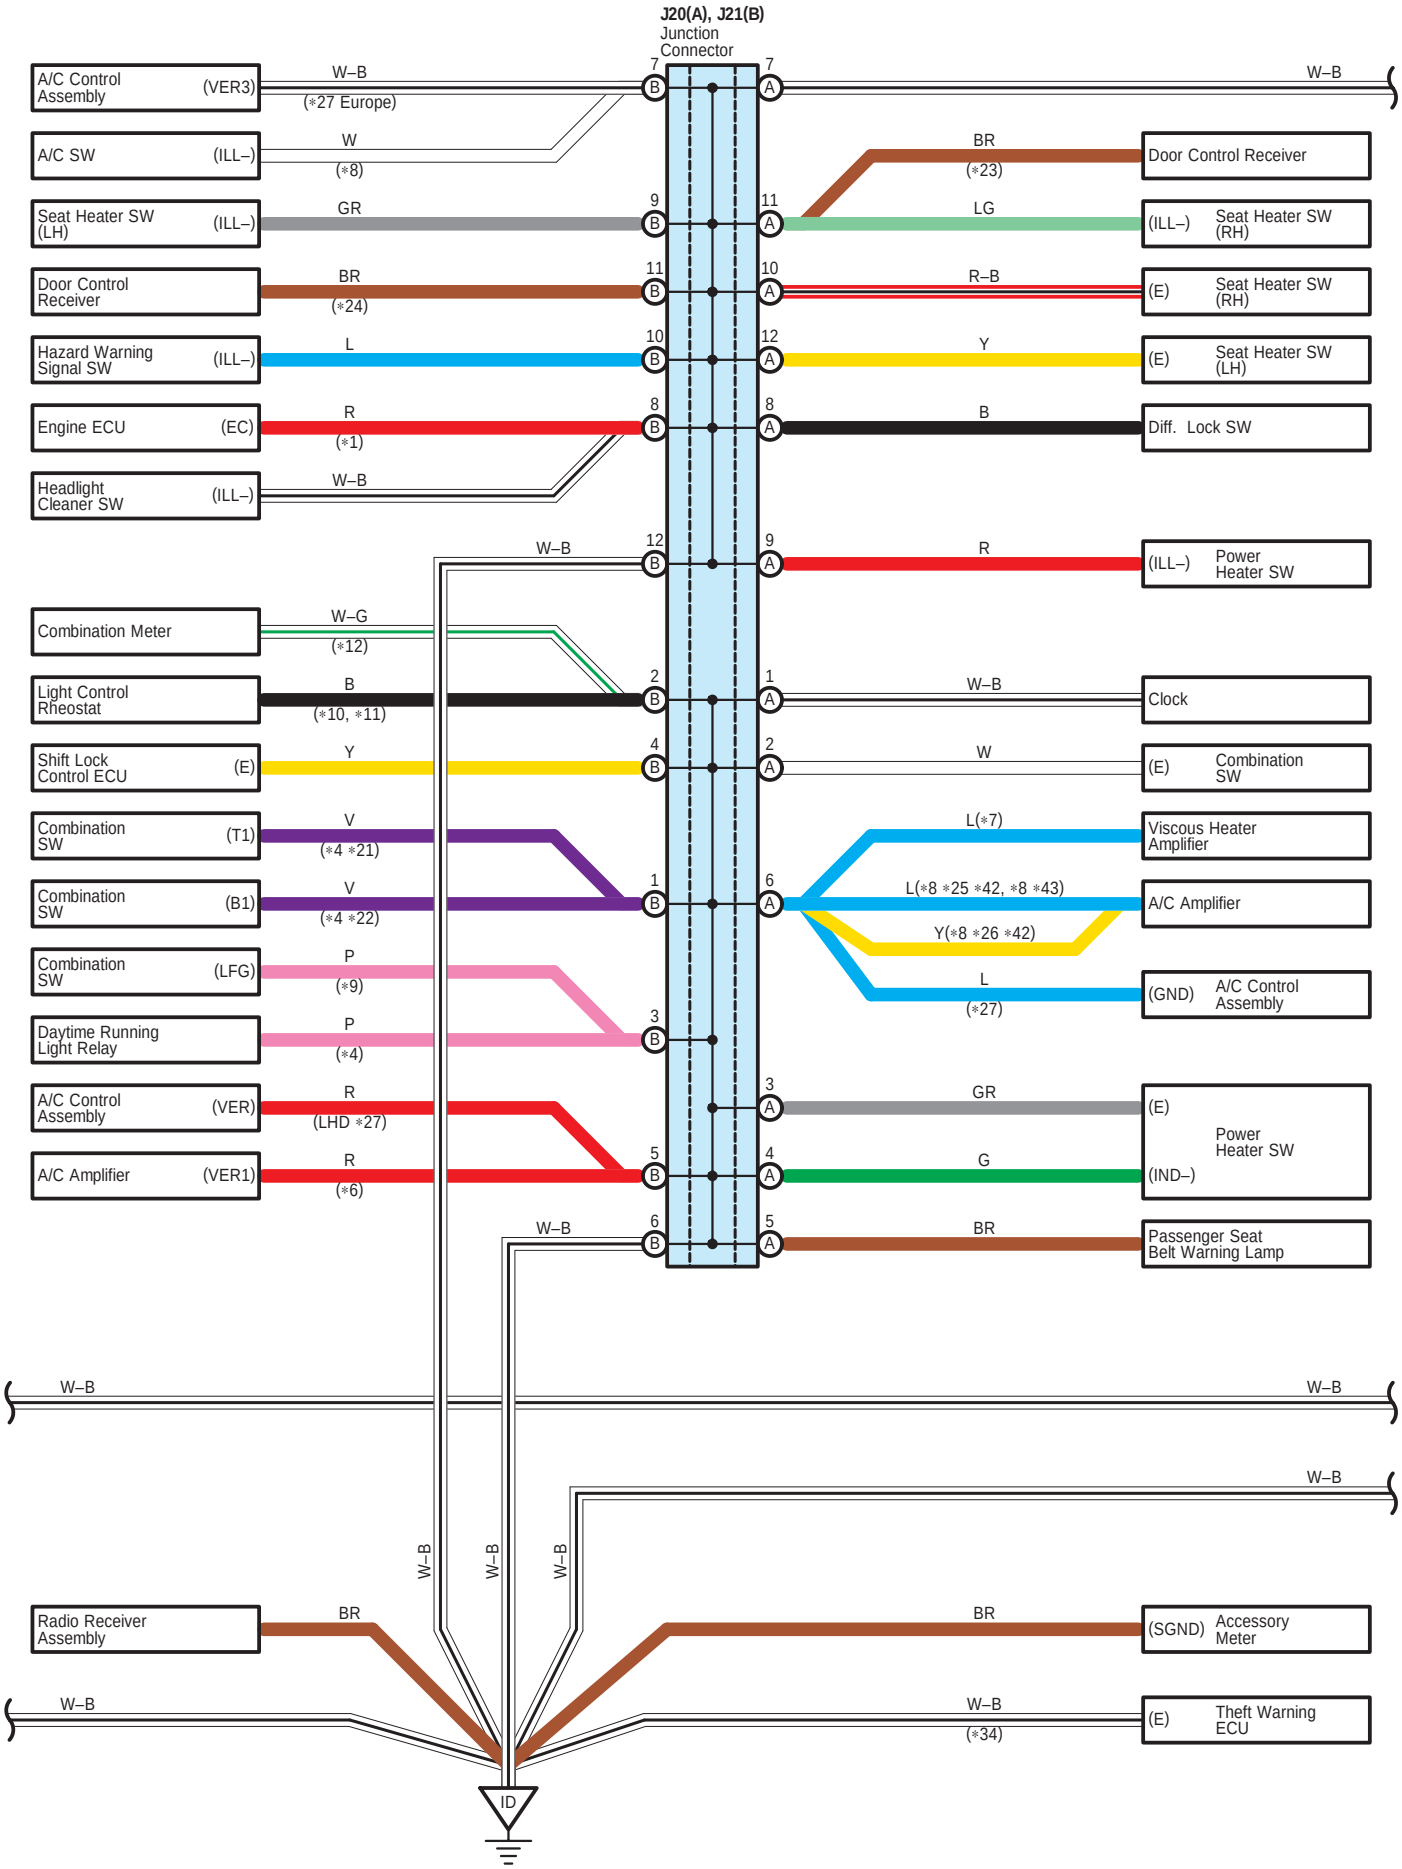
J20(A), J21(B)
Junction
Connector
A/C Control Assembly (VER3)
W–B
(∗27 Europe)
A/C SW (ILL–)
W
(∗8)
Seat Heater SW (LH) (ILL–)
GR
Door Control Receiver
BR
(∗24)
Hazard Warning Signal SW (ILL–)
L
Engine ECU (EC)
R
(∗1)
Headlight Cleaner SW (ILL–)
W–B
Combination Meter
W–G
(∗12)
Light Control Rheostat
B
(∗10, ∗11)
Shift Lock Control ECU (E)
Y
Combination SW (T1)
V
(∗4 ∗21)
Combination SW (B1)
V
(∗4 ∗22)
Combination SW (LFG)
P
(∗9)
Daytime Running Light Relay
P
(∗4)
A/C Control Assembly (VER)
R
(LHD ∗27)
A/C Amplifier (VER1)
R
(∗6)
W–B
W–B
Door Control Receiver
BR
(∗23)
(ILL–) Seat Heater SW (RH)
LG
(E) Seat Heater SW (RH)
R–B
(E) Seat Heater SW (LH)
Y
Diff. Lock SW
B
(ILL–) Power Heater SW
R
Clock
W–B
(E) Combination SW
W
Viscous Heater Amplifier
L(∗7)
A/C Amplifier
L(∗8 ∗25 ∗42, ∗8 ∗43)
Y(∗8 ∗26 ∗42)
(GND) A/C Control Assembly
L
(∗27)
(E) Power Heater SW (IND–)
GR
G
Passenger Seat Belt Warning Lamp
BR
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
Radio Receiver Assembly
BR
(SGND) Accessory Meter
BR
W–B
W–B
(∗34)
(E) Theft Warning ECU
ID

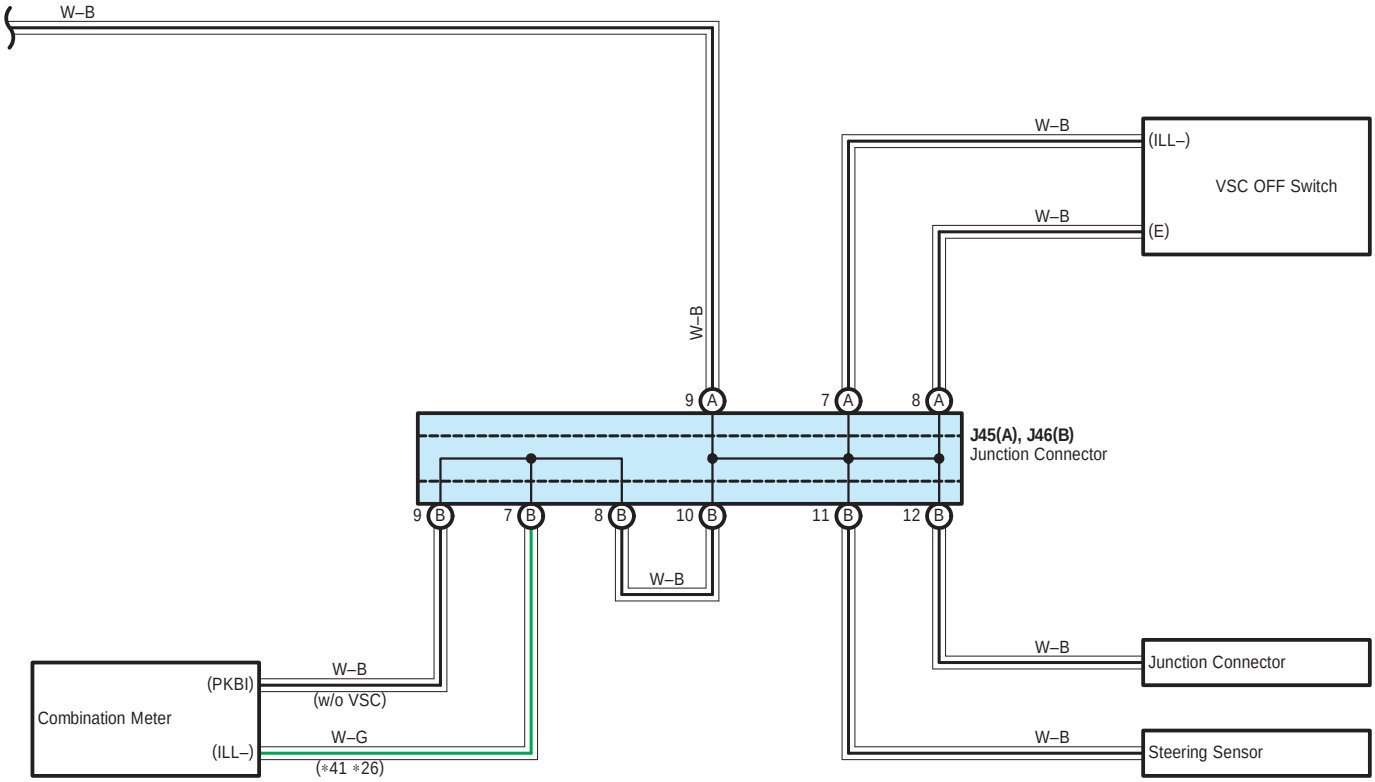


∗ 1 : 1TR–FE, 2TR–FE
∗ 4 : w/ Daytime Running Light
∗ 6 : Cold Area Spec. w/ Manual A/C
∗ 7 : Cold Area Spec. w/o Manual A/C
∗ 8 : w/ Manual A/C
∗ 9 : w/ Front Fog Light
∗10 : w/ Light Control Rheostat
∗11 : w/o Light Control Rheostat
w/ Short Connector (Light Control Rheostat)
∗12 : Except ∗10, ∗11
∗21 : From Aug. 2006 Production
∗22 : Before Aug. 2006 Production
∗23 : 2KD–FTV
∗24 : Except 2KD–FTV
∗25 : Before Aug. 2008 Production
∗26 : From Aug. 2008 Production
∗27 : w/ Automatic A/C
∗34 : South Africa
∗41 : w/o Daytime Running Light
∗42 : Australia w/ PTC Heater, Europe Except Cold Area Spec.
∗43 : Except ∗42

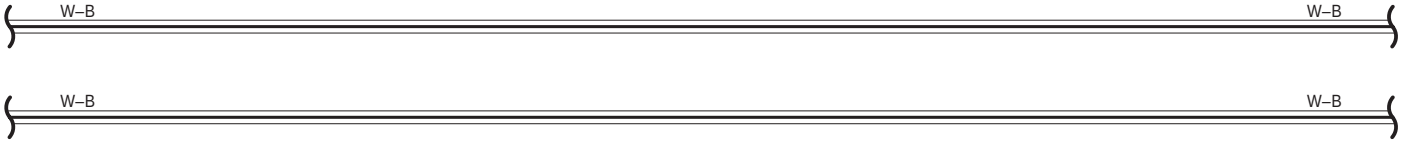


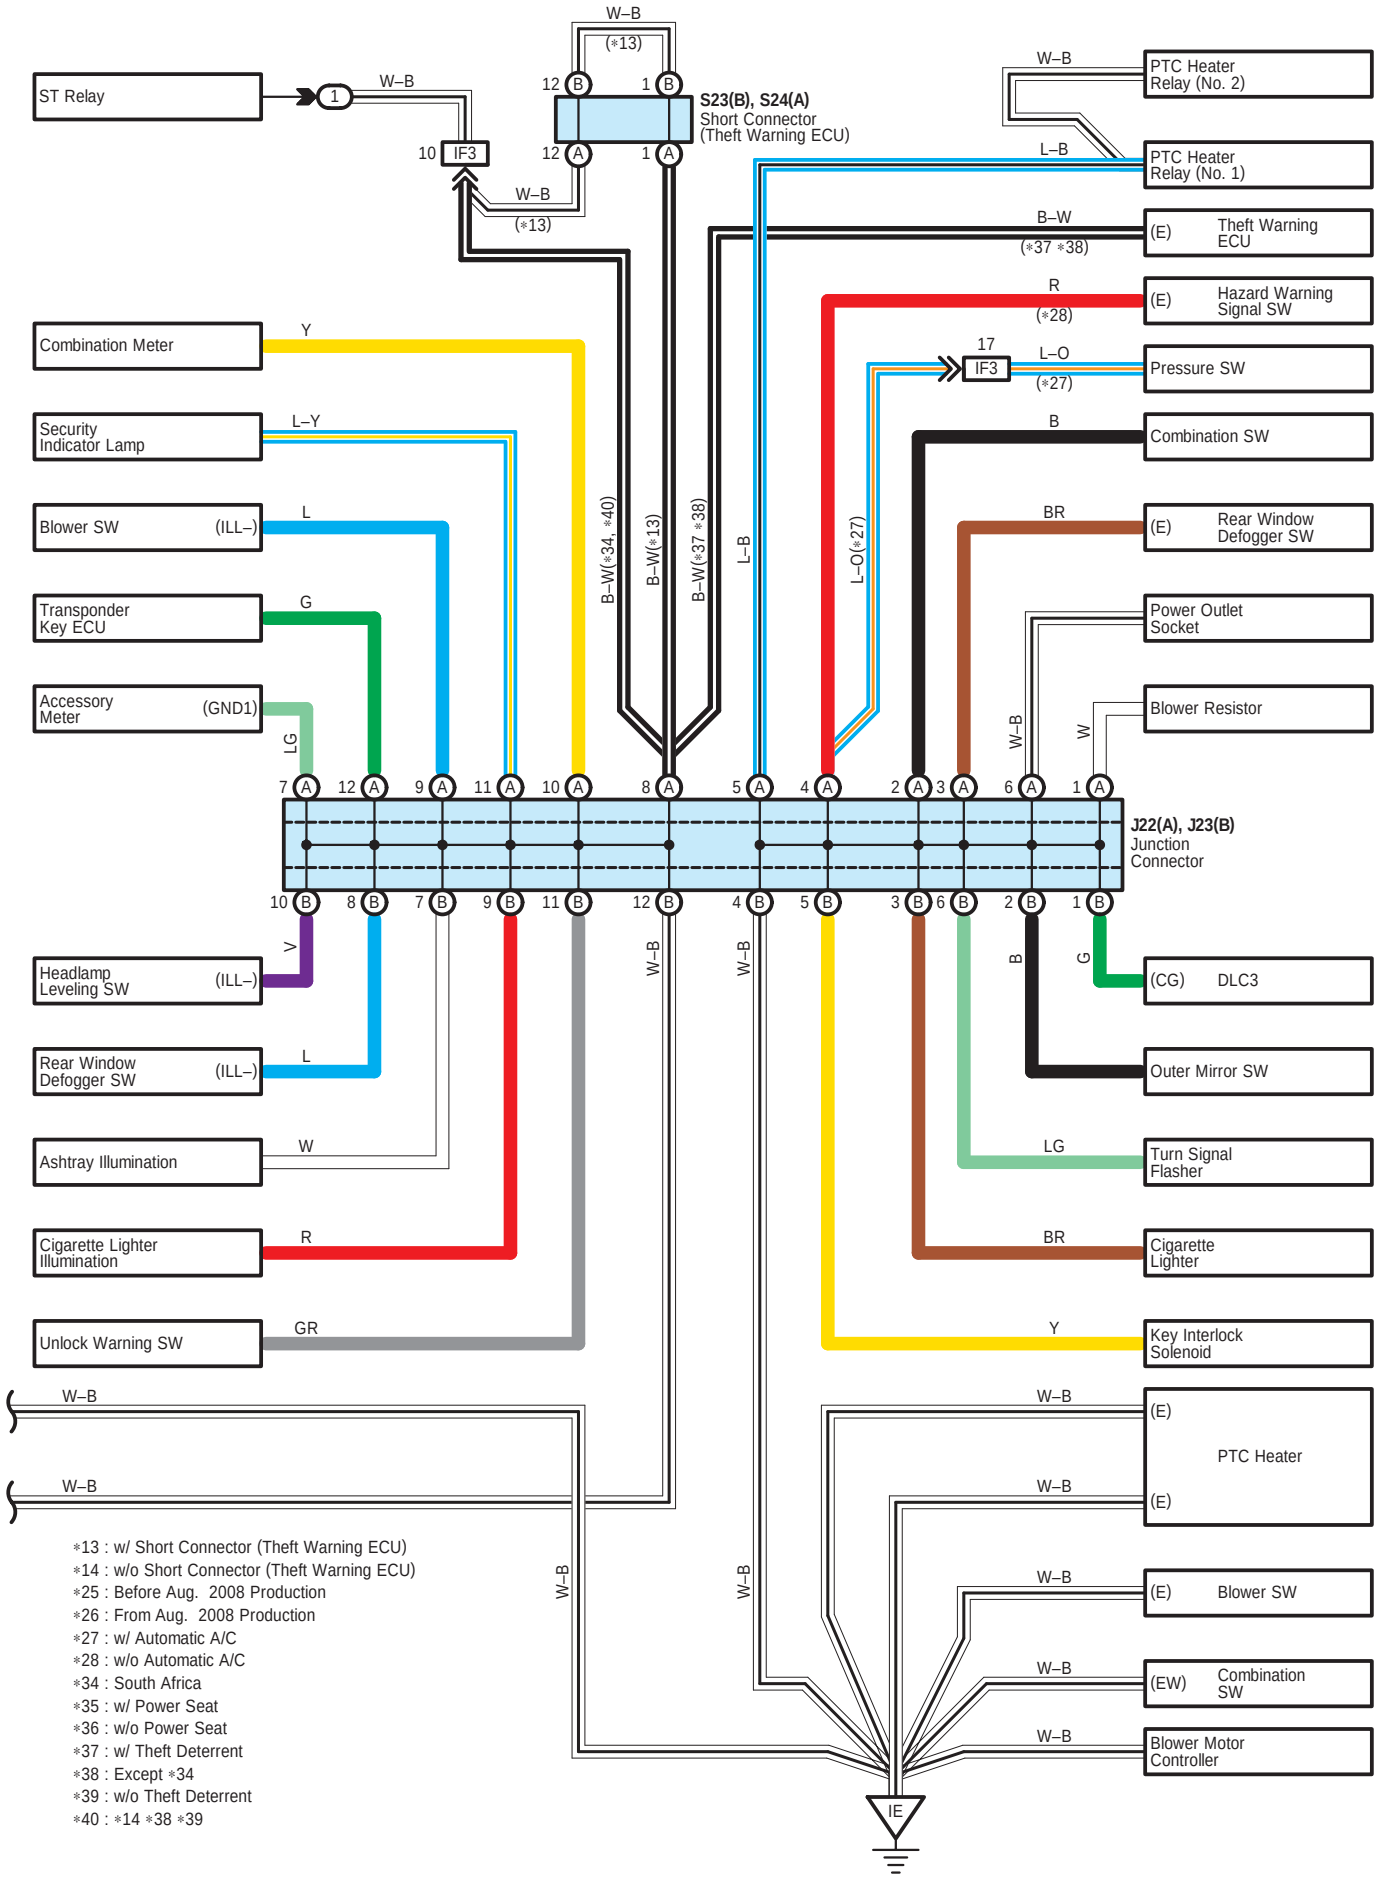


*13 : w/ Short Connector (Theft Warning ECU)
*14 : w/o Short Connector (Theft Warning ECU)
*25 : Before Aug. 2008 Production
*26 : From Aug. 2008 Production
*27 : w/ Automatic A/C
*28 : w/o Automatic A/C
*34 : South Africa
*35 : w/ Power Seat
*36 : w/o Power Seat
*37 : w/ Theft Deterrent
*38 : Except *34
*39 : w/o Theft Deterrent
*40 : *14 *38 *39

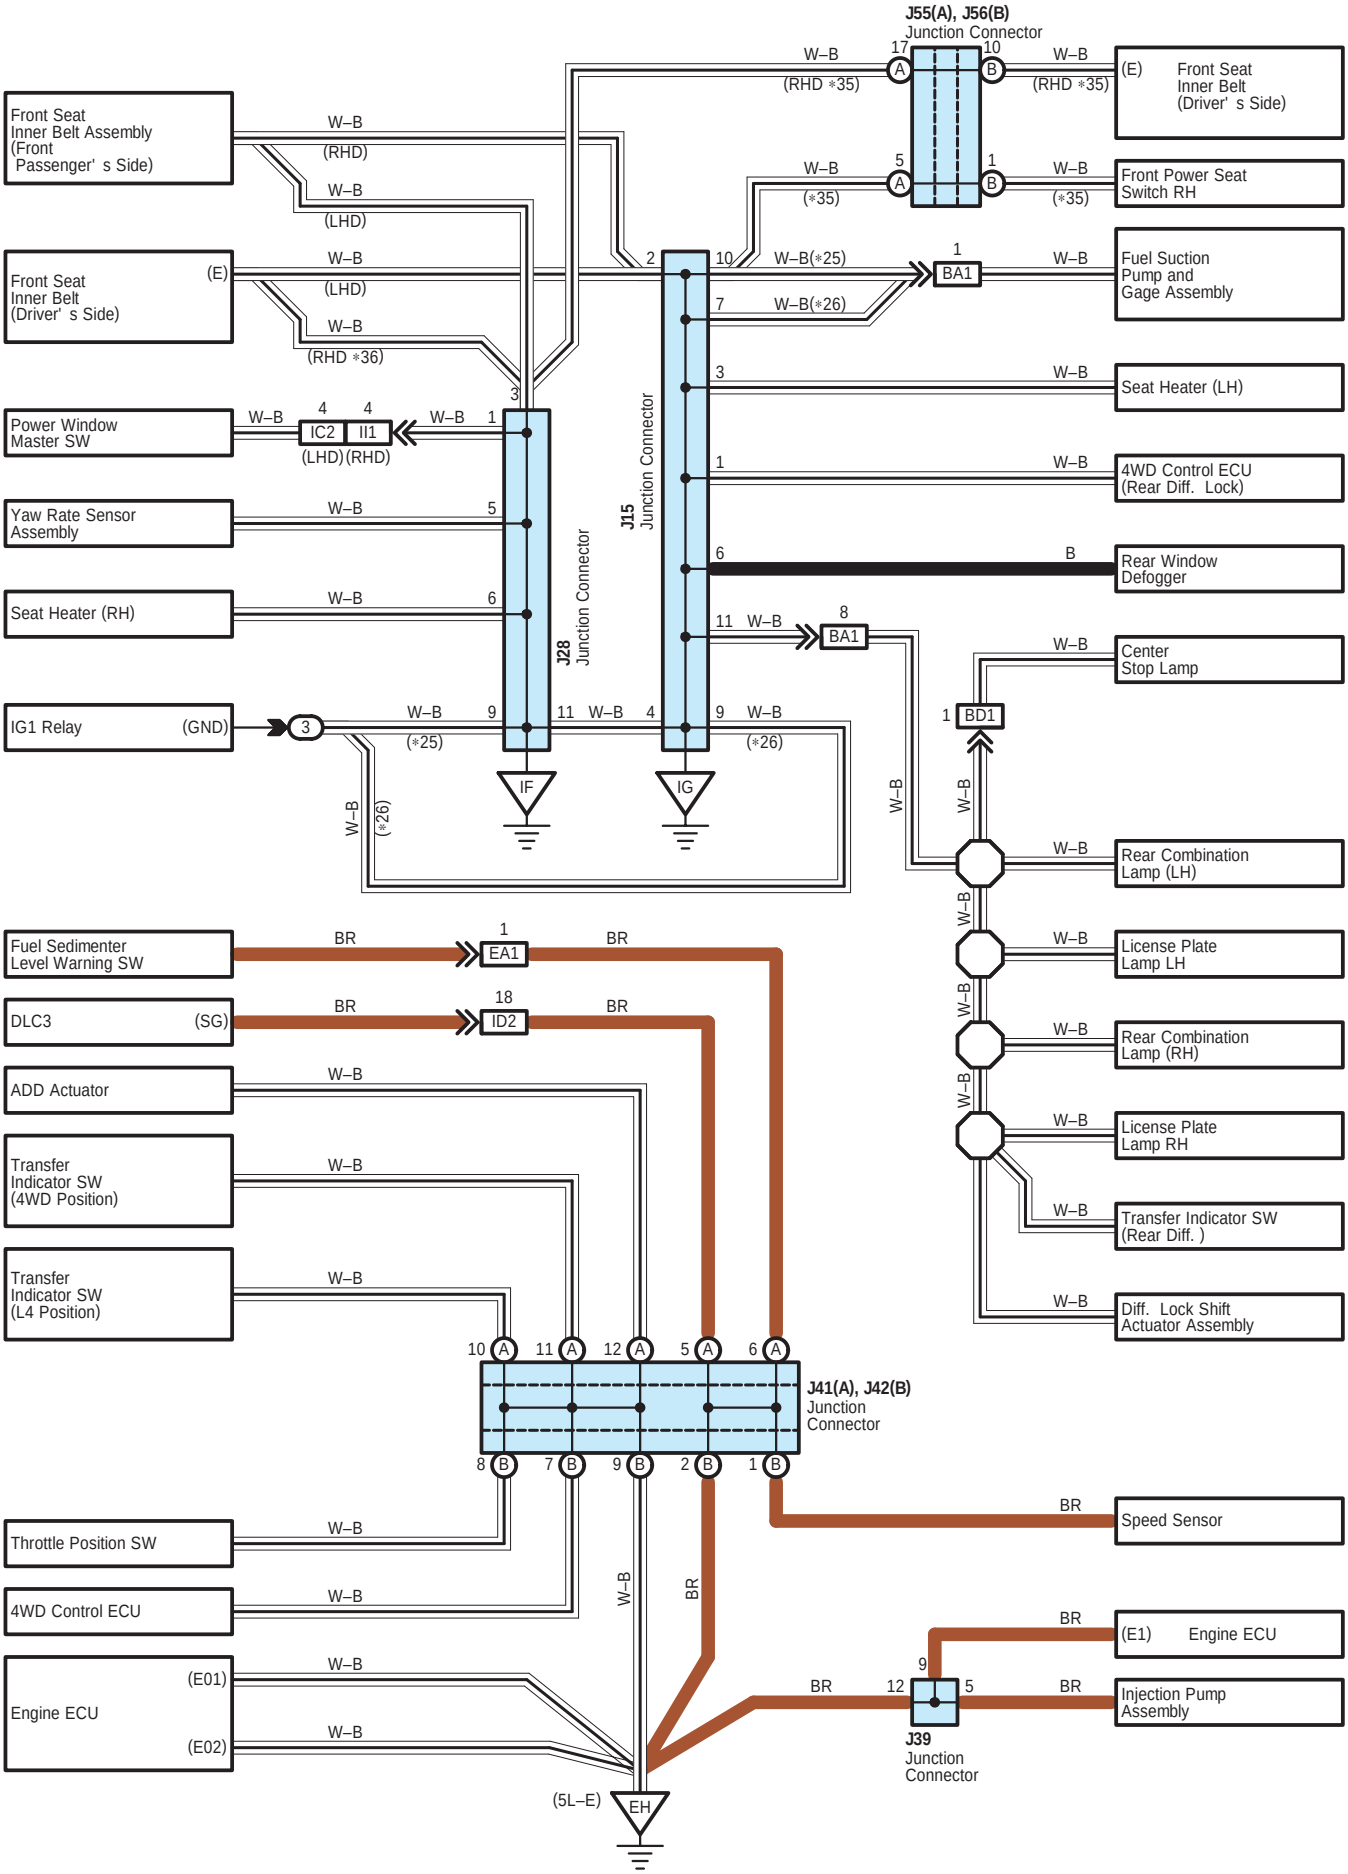
J55(A), J56(B)
Junction Connector
Front Seat Inner Belt Assembly (Front Passenger' s Side)
Front Seat Inner Belt (Driver' s Side)
(E)
Power Window Master SW
Yaw Rate Sensor Assembly
Seat Heater (RH)
IG1 Relay
(GND)
J28 Junction Connector
J15 Junction Connector
IC2
II1
(LHD)
(RHD)
IF
IG
(E) Front Seat Inner Belt (Driver' s Side)
Front Power Seat Switch RH
Fuel Suction Pump and Gage Assembly
Seat Heater (LH)
4WD Control ECU (Rear Diff. Lock)
Rear Window Defogger
Center Stop Lamp
BA1
BD1
Rear Combination Lamp (LH)
License Plate Lamp LH
Rear Combination Lamp (RH)
License Plate Lamp RH
Transfer Indicator SW (Rear Diff.)
Diff. Lock Shift Actuator Assembly
Fuel Sedimenter Level Warning SW
DLC3
(SG)
EA1
ID2
ADD Actuator
Transfer Indicator SW (4WD Position)
Transfer Indicator SW (L4 Position)
J41(A), J42(B)
Junction Connector
Throttle Position SW
4WD Control ECU
Engine ECU
(E01)
(E02)
Speed Sensor
(E1) Engine ECU
Injection Pump Assembly
J39
Junction Connector
(5L–E)
EH
W–B
BR


J 1
White




J 7
Blue

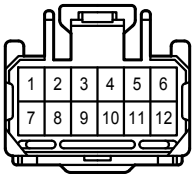


J 8
Blue

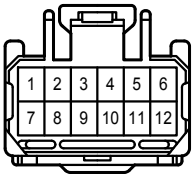


J 10
White

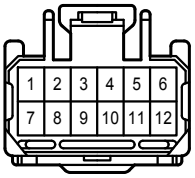


J 15
White

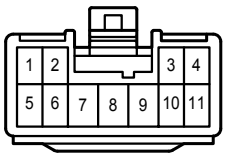


J 20
White

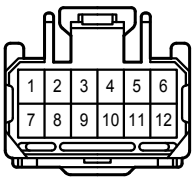


J 21
White

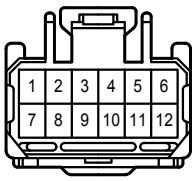


J 22
White

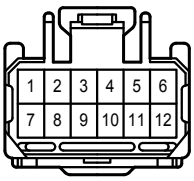


J 23
White

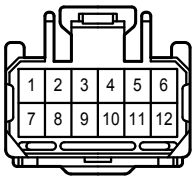


J 28
White

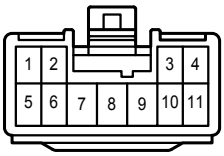


J 30
White

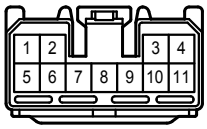


J 33
White

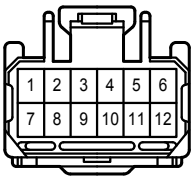


J 34
White

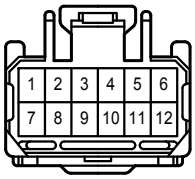


J 36
White




J 38
Blue




J 39
White




J 41
White

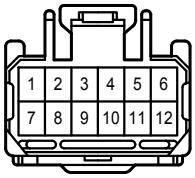


J 42
White

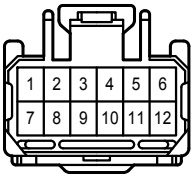


J 44
Black




J 45
White

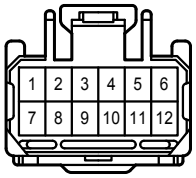


J 46
White

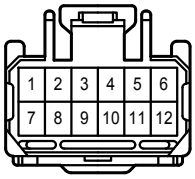


J 55
White

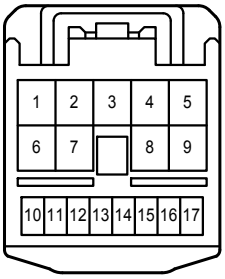


J 56
White

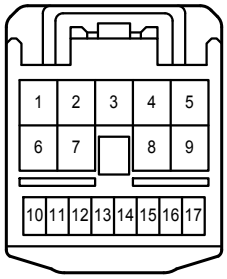


S 23
White

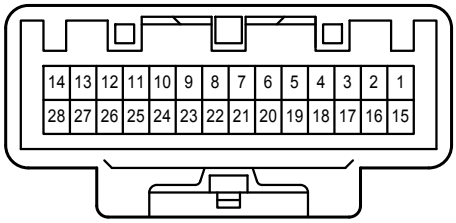


S 24
White

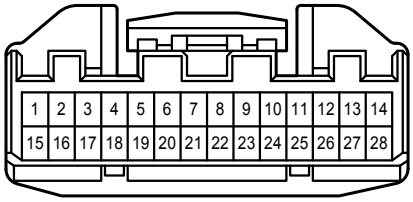


1J
White

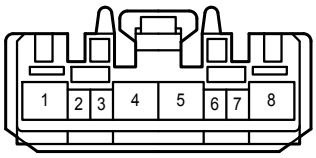


2B
Yellow

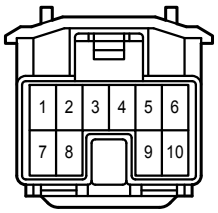


2D
White

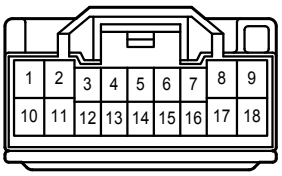


2E
White

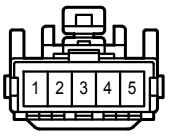


BA1
White

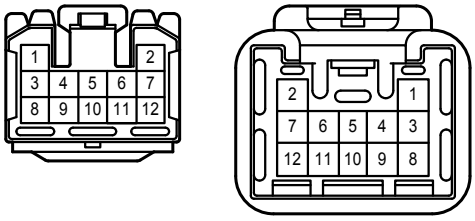


BD1
Black

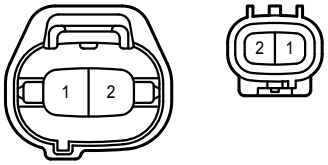


EA1
White

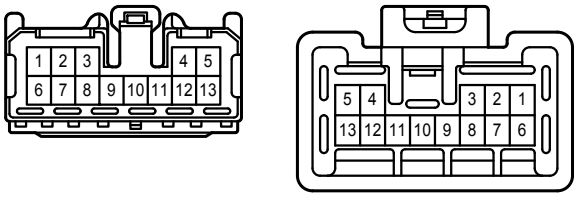


IC2
White

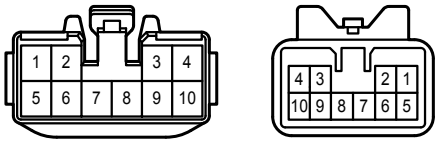


ID1
Gray

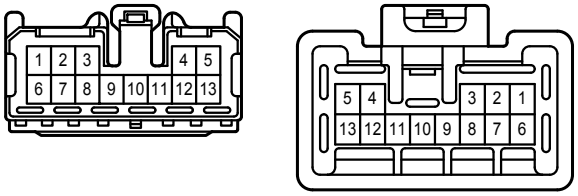

ID2
White

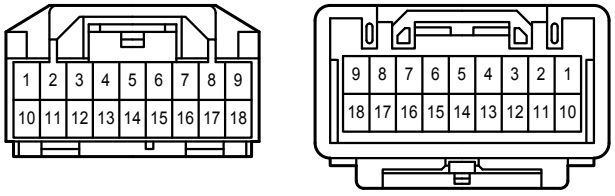

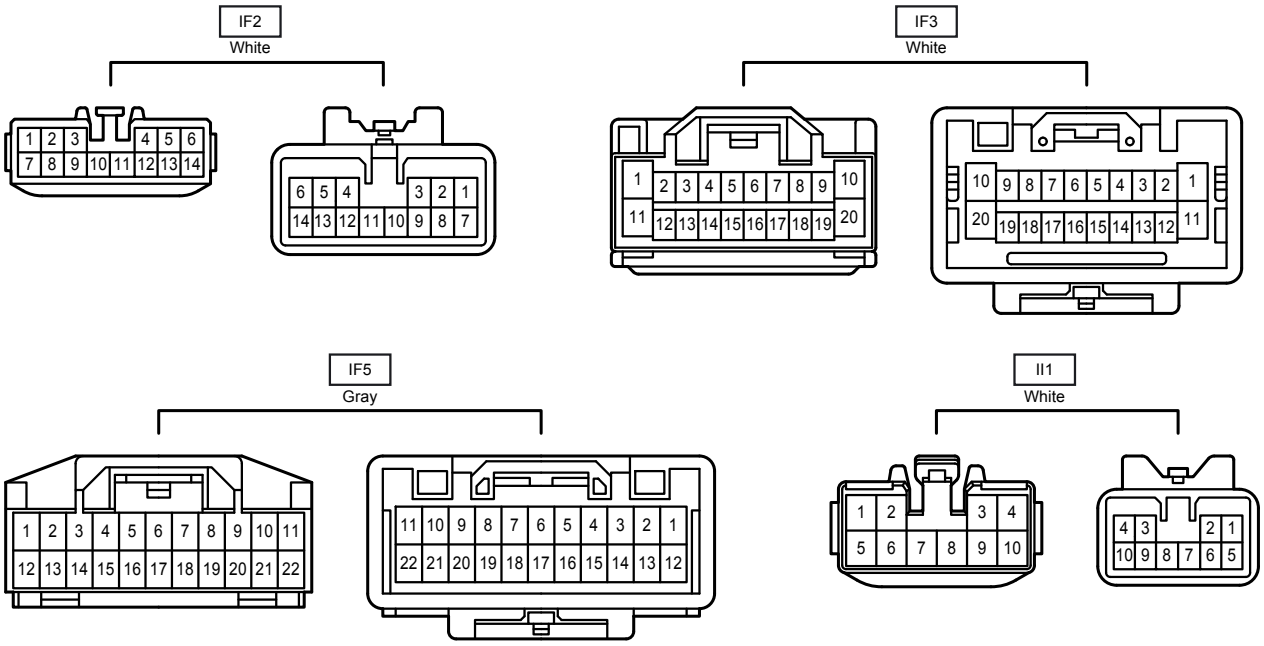
IF2
White
1 2 3 4 5 6
7 8 9 10 11 12 13 14
6 5 4 3 2 1
14 13 12 11 10 9 8 7
IF3
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20
10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11
IF5
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
II1
White
1 2 3 4
5 6 7 8 9 10
4 3 2 1
10 9 8 7 6 5