
## ■ MANUAL HEADLIGHT BEAM LEVEL CONTROL SYSTEM

- The new Hilux uses a manual headlight beam level control system.
- This system keeps the beam of the headlight adjusted to the appropriate level in accordance with the number (weight) of passengers and volume of luggage. The headlight beam level (5-step) can be adjusted by operating the headlight beam level control switch.

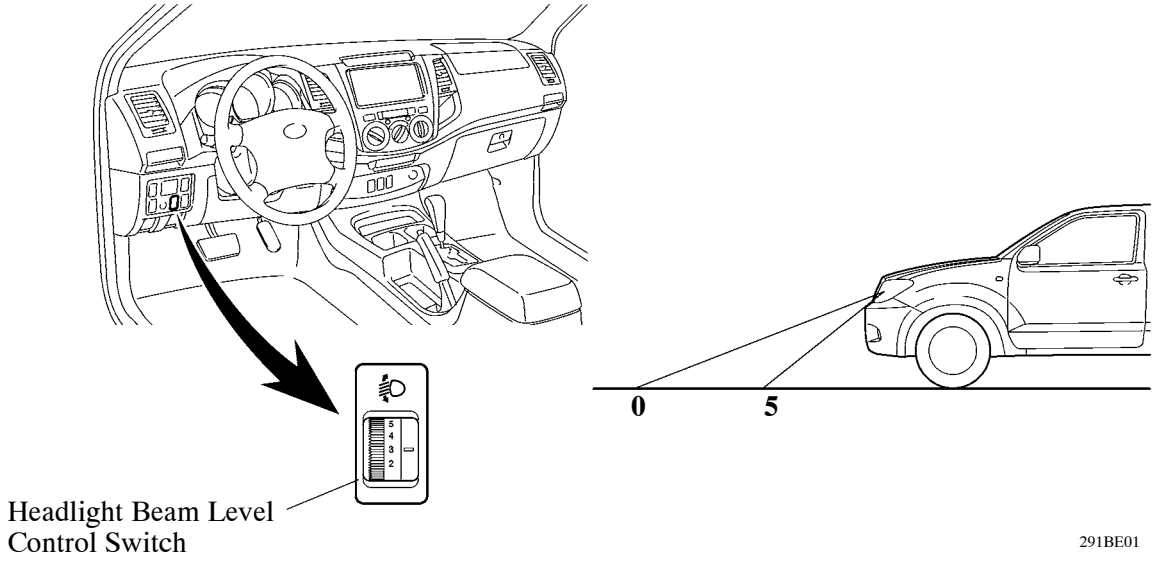


**LHD Model**

## ■ LIGHT REMINDER SYSTEM



- This system is used as standard equipment for the export package of backup models for general countries, deluxe grade of models for Philippines and South Africa, single cab models for Indonesia, and models except models for Vietnam and Pakistan.
- This system will sound the buzzer to warn the driver that the lights remain on if the driver's door is opened while the headlights or taillights are on and the ignition switch is turned from ON to ACC or off. The buzzer is located inside the combination meter.
- This system is controlled by the meter ECU.

**▶ System Diagram ◀**

