
■ILLUMINATED ENTRY SYSTEM


- The new Hilux uses an illuminated entry system.
- This system is controlled by the theft warning ECU on models with the theft deterrent system, and by the body ECU on models without the theft deterrent system. The differences in the control are shown in the table below:

Wireless Door Lock System	Theft Deterrent System	Outline
○	—	The body ECU controls the key illumination as follows: ● Illuminates when any door is opened. ● Turns off when the ignition switch is turned from off to ON. ● Turns off when all the doors are locked. ● Turns off 7.5 seconds after all doors are closed.
○	○	● The key illumination and interior lights are illuminated when any door is opened. ● The key illumination and interior lights are illuminated when the doors are unlocked using the transmitter. ● The illuminated key illumination and interior lights fade out (approx. 1 sec.) when the doors are locked using the transmitter. ● The illuminated key illumination and interior lights fade out when the ignition switch is turned to ON after all the doors are closed. ● The key illumination and interior lights are illuminated for approx. 30 sec. after all the doors are closed, and then fade out.
—	—	● The key illumination is illuminated when the driver's door is opened. ● The key illumination is turned off 5 seconds after the driver's door is closed.

▶ System Diagram ◀

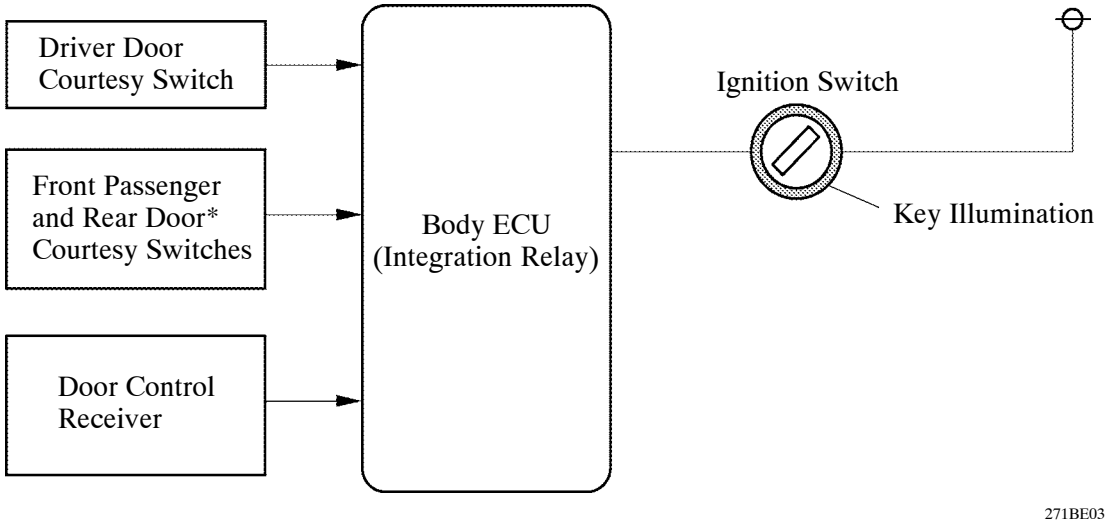


Models without Theft Deterrent System

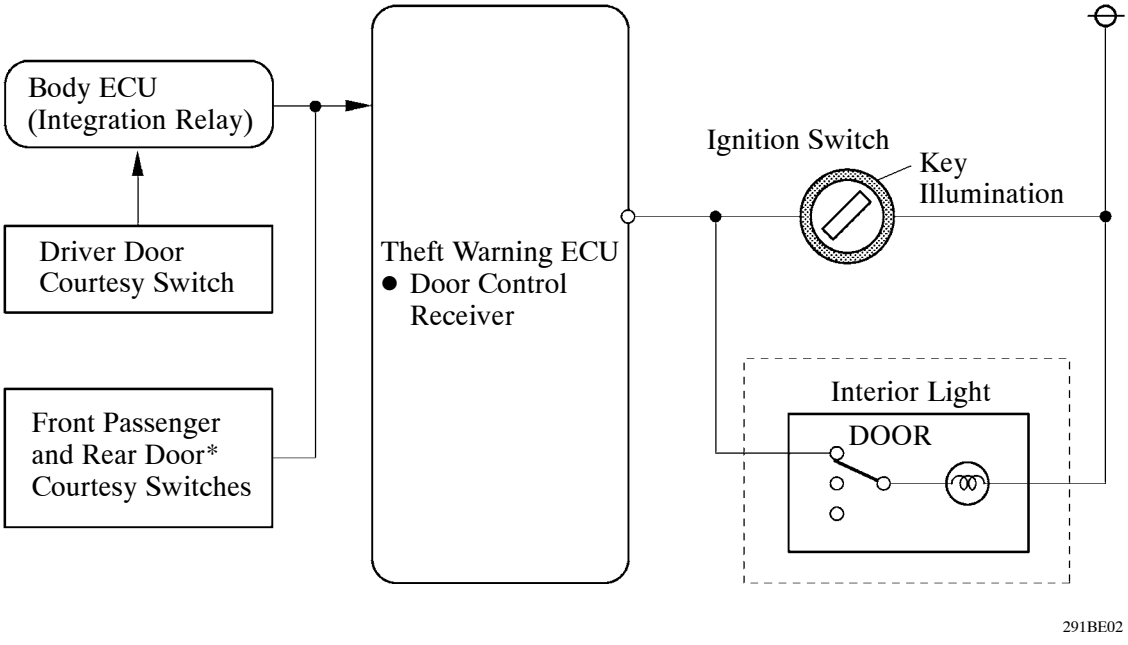

Models with Theft Deterrent System

*: Double cab models

Layout of Main Components

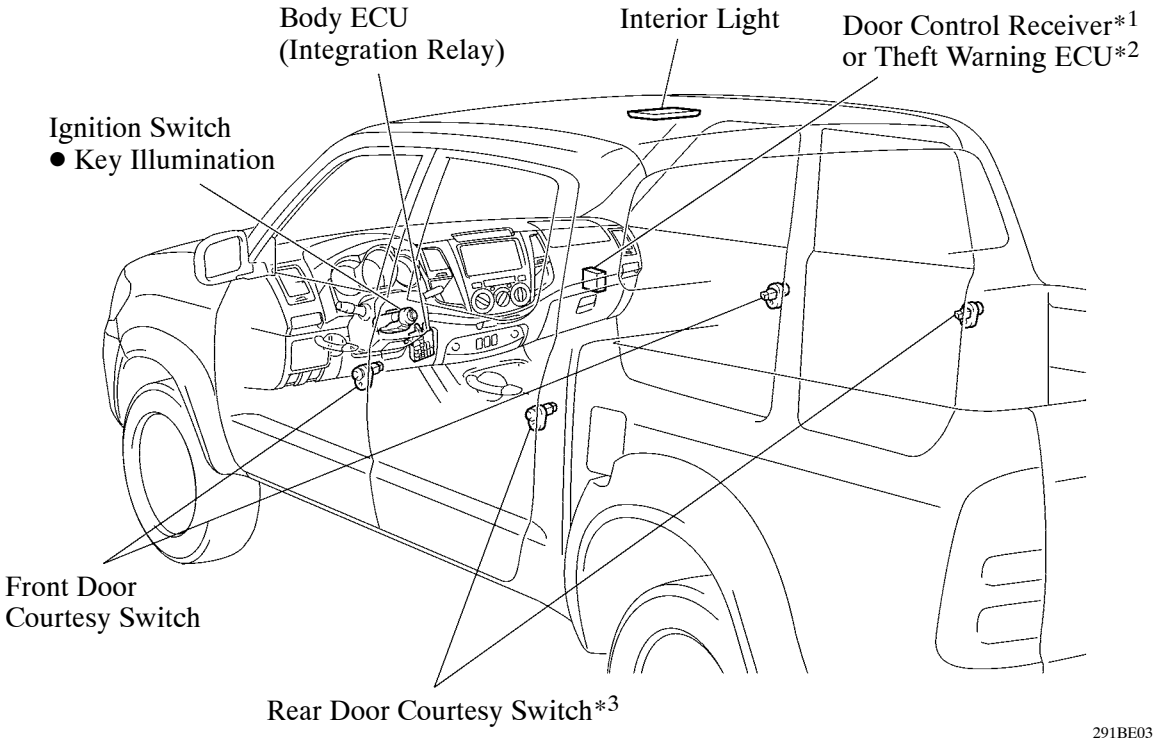

LHD Model

BE

*1: Models without theft deterrent system
*2: Models with theft deterrent system
*3: Double cab models