
■ MODE POSITION AND DAMPER OPERATION

▶ Models with Boost Vent or Manual Cooler ◀

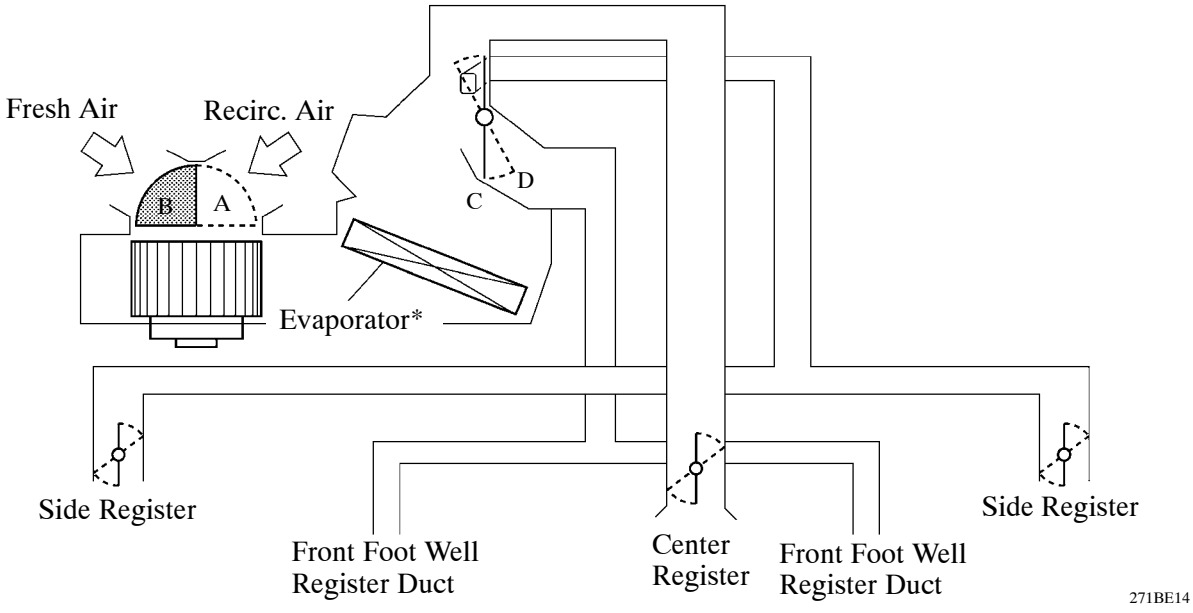


*: Models with manual cooler

▶ Function of Main Damper ◀

BE

Control Damper	Control Position	Damper Position	Operation
Air Inlet Control Damper	FRESH	A	Brings in fresh air.
	RECIRC	B	Recirculates internal air.
Mode Control Damper	BI-LEVEL 187BE25	C	Air blows out of the center registers and side register.
	FACE 187BE24	D	Air blows out of the center registers, side registers, and foot well register ducts.

▶ Models with Air Conditioning or Heater ◀

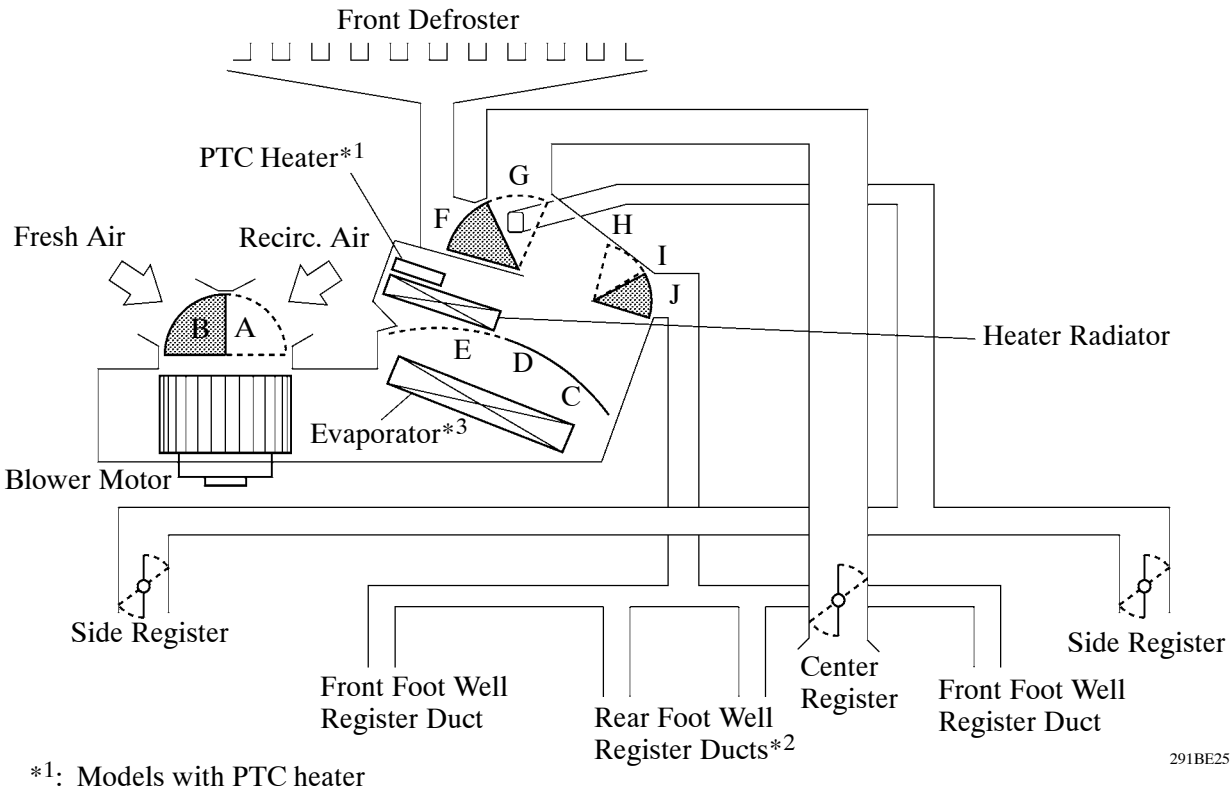


*1: Models with PTC heater
*2: Models for Europe
*3: Models with air conditioning

▶ Function of Main Damper ◀

Control Damper	Control Position	Damper Position	Operation
Air Inlet Control Damper	FRESH	A	Brings in fresh air.
	RECIRC	B	Recirculates internal air.
Air Mix Control Damper	MAX COLD – MAX HOT	C – D – E	Varies the mixture ratio of the cool air and the warm air in order to regulate the temperature continuously from HOT to COLD.
Mode Control Damper	 FACE 187BE24	F, J	Air blows out of the center registers and side register.
	 BI-LEVEL 187BE25	F, H	Air blows out of the center registers, side registers, and foot well register ducts.
	 FOOT 187BE26	G, H	Air blows out of the foot well register ducts and side register. In addition, air blows out slightly from the front defroster.
	 FOOT/DEF 187BE27	G, I	Defrosts the windshield through the front defroster and side register, while air is also blown out from the foot well register ducts.
	 DEF 187BE28	G, J	Defrosts the windshield through the front defroster and side register.

▶ Models for Europe with Automatic Air Conditioning ◀

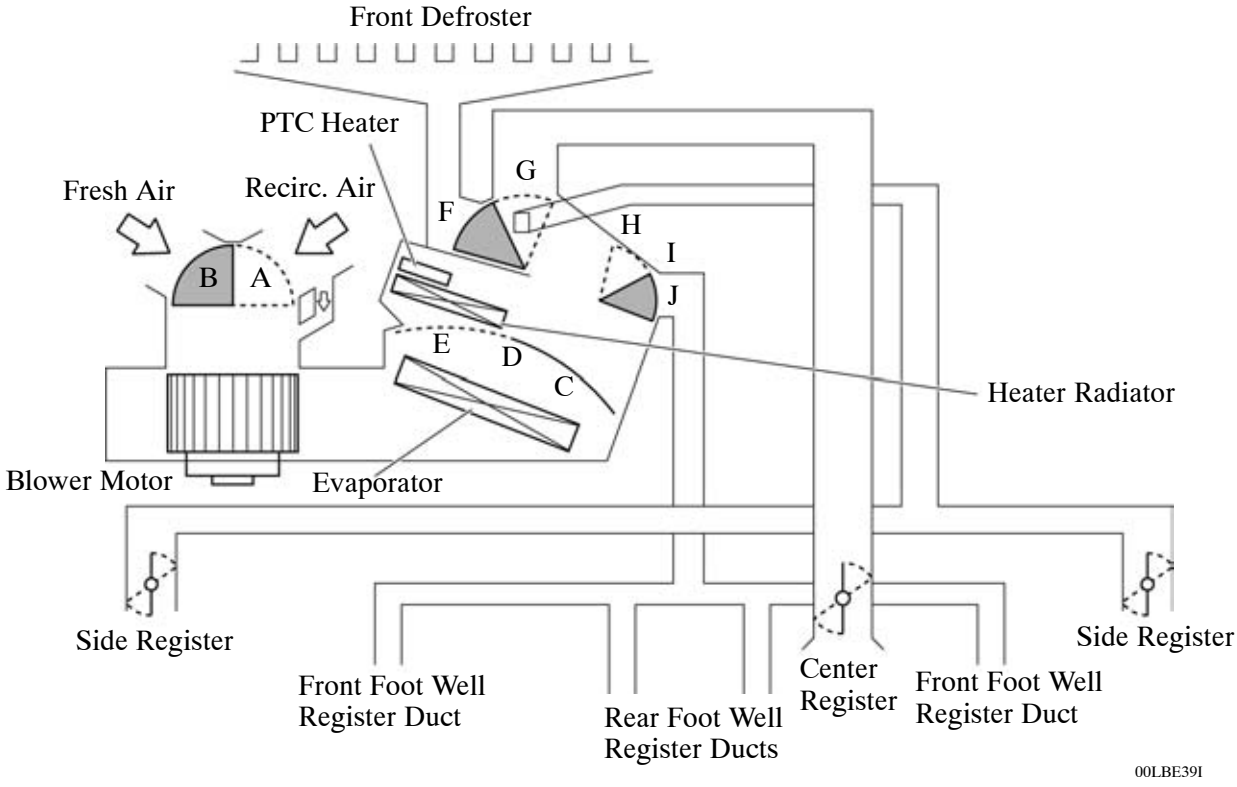

▶ Function of Main Damper ◀

Control Damper	Control Position	Damper Position	Operation
Air Inlet Control Damper	FRESH	A	Brings in fresh air.
	RECIRC	B	Recirculates internal air.
Air Mix Control Damper	MAX COLD – MAX HOT	C – D – E	Varies the mixture ratio of the cool air and the warm air in order to regulate the temperature continuously from HOT to COLD.
Mode Control Damper	 FACE 187BE24	F, J	Air blows out of the center registers and side register.
	 BI-LEVEL 187BE25	F, H	Air blows out of the center registers, side registers, and foot well register ducts.
	 FOOT 187BE26	G, H	Air blows out of the foot well register ducts and side register. In addition, air blows out slightly from the front defroster.
	 FOOT/DEF 187BE27	G, I	Defrosts the windshield through the front defroster and side register, while air is also blown out from the foot well register ducts.
	 DEF 187BE28	G, J	Defrosts the windshield through the front defroster and side register.

BE