



■FUNCTION OF MAIN COMPONENTS

1. Display Portion

The multi-information display has the following functions:


Item		Display Content	Outline
Clock		 271BE29	Constantly displays the clock. (Multi-information display off mode)
Multi-information	Ambient Temp.	 271BE30	Displays the ambient temperature in accordance with the ambient temperature sensor signal.
	Average Fuel Consumption	 271BE31  271BE32	● Displays a value, calculated by the meter ECU, which is based on the driven distance and the fuel consumption volume (fuel injection signal from No. 1 injector*1 or fuel injection volume signal*2 from the ECM). ● The display updates every 10 seconds. ● The display unit can be changed between L/100 km or km/l through the operation of the switch (the default is km/l).
	Instant Fuel Consumption	 271BE33 271BE34	● Displays a value, calculated by the meter ECU, which is based on the driven distance and the fuel consumption volume (fuel injection signal from No. 1 injector*1 or fuel injection volume signal*2 from the ECM), provided that the ignition switch is turned to ON. ● The display updates every 2 seconds. ● The display unit can be changed between L/100 km or km/l through the operation of the switch (the default is km/l).
	Average Vehicle Speed	 271BE35	● Displays a value, calculated by the meter ECU, which is based on the elapsed time and driven distance after the ignition switch has been turned to ON or the RESET switch has been pressed for 0.8 seconds or longer. ● The display updates every 10 seconds.
	Elapsed Time	 271BE36	Displays the length of time that has elapsed from the time the ignition switch has been turned to ON after the battery terminals have been connected, or the RESET switch has been pressed for a long time (0.8 seconds or longer).
	Drivable Distance	271BE37	● Displays a value, calculated by the meter ECU, which is based on the fuel consumption data that the meter ECU continuously monitors and stores in its memory and the residual fuel volume data, provided that the ignition switch is turned to ON. ● The display updates every 1 km.
	Compass	 271BE38	Uses an earth magnetism sensor to detect the azimuth of the vehicle's current direction of travel and displays it in a meter that contains 8 azimuth angles. In addition, this meter has a function to correct the azimuth errors caused by the magnetism of the vehicle.

*1: Models with 1GR-FE engine
*2: Models with 1KD-FTV engine

BE

2. Switch

The user can switch the modes and make adjustments by operating the INFO. and RESET switches on the multi-information display.

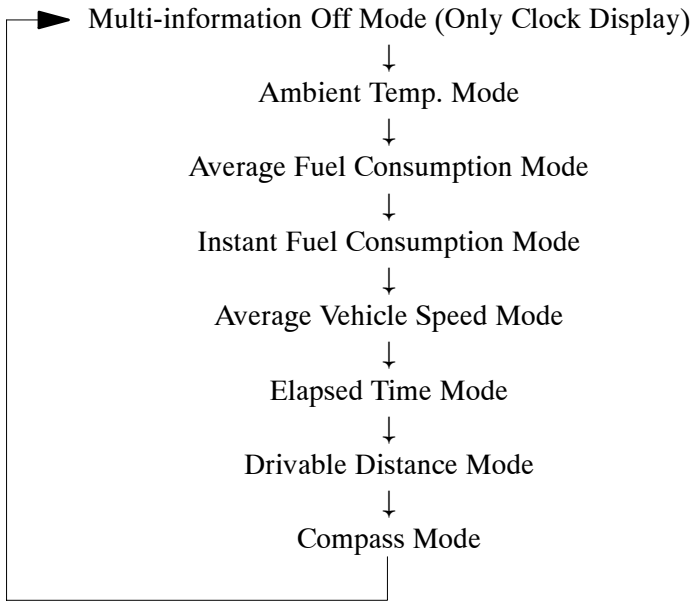Switch	Function
INFO. Switch	● Pressing this switch changes the contents of the multi-information display in the following sequence:  ● In the average fuel consumption mode or instant fuel consumption mode, pressing this switch for 2.3 seconds or more causes the display unit to flash, enabling the unit to be changed. ● In the compass mode, pressing this switch for 2.3 seconds or more causes the multi-information display to transfer to the compass correction mode.
RESET Switch	● In the average fuel consumption mode, average vehicle speed mode, or elapsed time mode, pressing this switch for 0.8 seconds or more resets the display contents of the respective mode. ● When the unit is flashing as a result of operating the INFO. switch in the average fuel consumption mode or the instant fuel consumption mode, pressing this switch causes the display unit to change. ● In the compass correction mode, pressing this switch causes the azimuth display portion to flash and transfer to the turning correction mode. Within 2 minutes following the transfer to this mode, the vehicle must be turned (360° minimum) to automatically complete the azimuth correction.