DOOR LOCK CONTROL SYSTEM


■ DESCRIPTION

- The new Hilux uses a door lock control system.
- This system has the following functions:

Function	Outline
Key-linked Lock and Unlock	This function, which is linked with the driver's door key cylinder, locks or unlocks all the doors when a lock or unlock operation is effected.
Manual Lock and Unlock	This function locks or unlocks all the doors in accordance with driver operation of the door lock control switch.
Speed-sensitive Automatic Door Lock*1	● All the doors are locked when all the doors are closed and the vehicle reaches a speed of 25 km/h (15.5 mph) for the first time. This function is controlled by the theft warning ECU. ● This function can be disabled together with the ignition switch-linked automatic door unlock function, according to user preference. For details, refer to the Hilux Repair Manual.
Ignition Switch-linked Automatic Door Unlock*1	● After all the doors are locked through the operation of the speed-sensitive automatic door lock function, turning the ignition switch OFF automatically unlocks all the doors. ● This function can be disabled together with the speed-sensitive automatic door lock function according to user preference. For details, refer to the Hilux Repair Manual.
Door Lock with Transmitter*2 (see page BE-58)	Pressing the lock button of the transmitter locks all the doors.
Door Unlock with Transmitter*2 (see page BE-58)	Pressing the unlock button of the transmitter unlocks all the doors.


*1: Models with theft deterrent system
*2: Models with wireless door lock remote control system

▶ System Diagram ◀

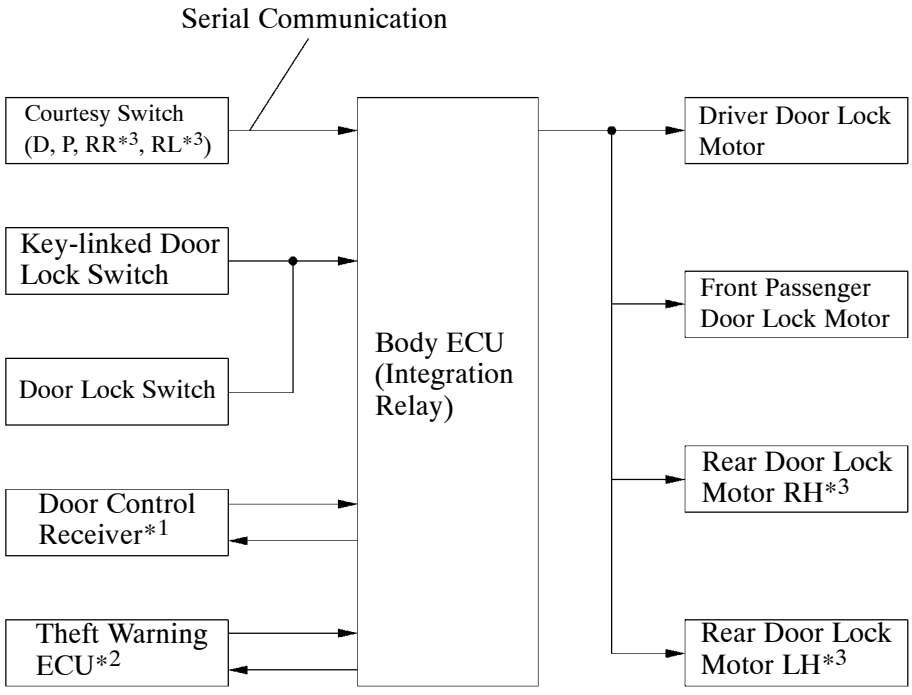

00LBE20Y

■ LAYOUT OF MAIN COMPONENTS

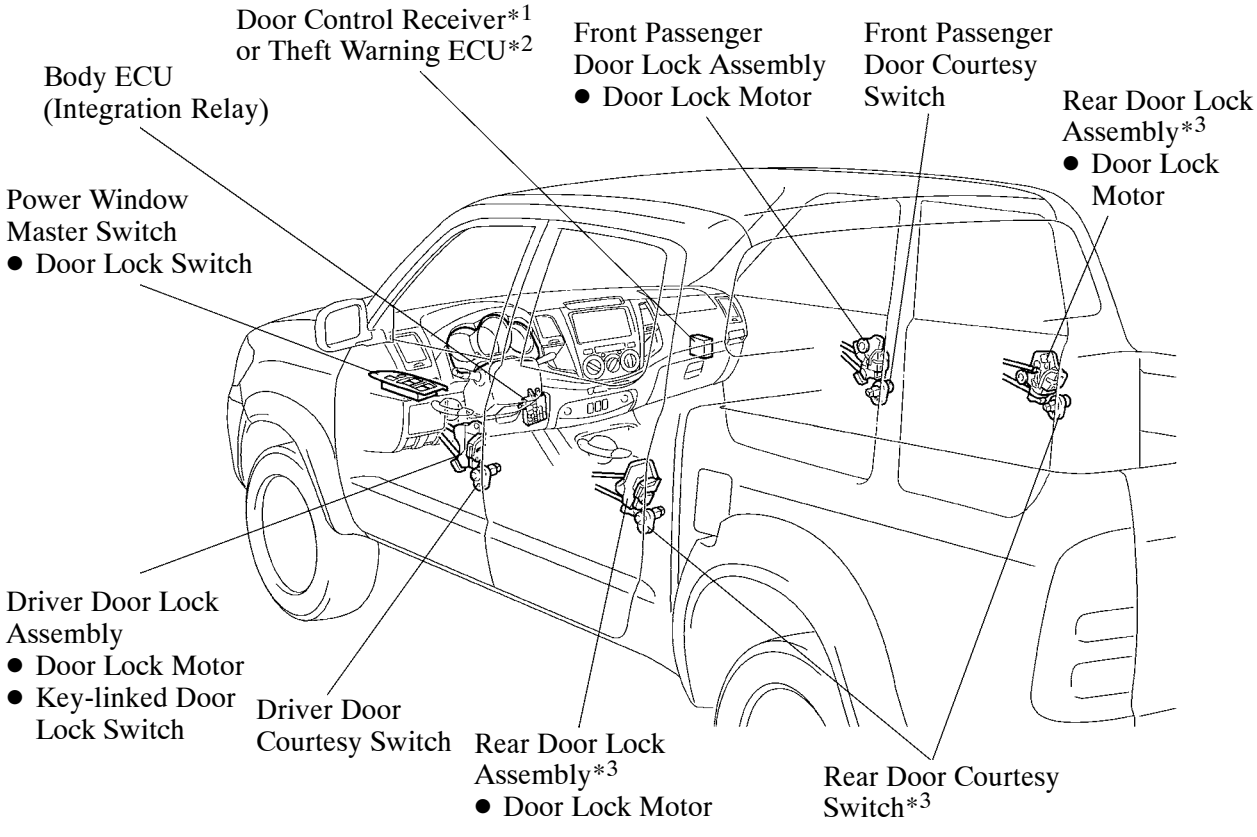

00LBE14Y

Double Cab LHD Model

*1: Models without theft deterrent system (with wireless door lock control system)
*2: Models with theft deterrent system
*3: Double cab models

BE