

SRS AIRBAG SYSTEM

■ DESCRIPTION

- The new Hilux uses a SRS (Supplemental Restraint System) airbag system.
- The SRS airbags help reduce the shocks to the heads and chests of the driver and front passenger in the event of severe frontal impact collision as supplements to the seat belts.
- On the models with the gasoline engine, the airbag sensor assembly includes a fuel cut control that stops the fuel pump when an airbag is deployed.
- The SRS side and curtain shield airbags are used to help reduce the shocks to the heads and chests of the driver, front passenger, and outer rear passengers in the event of a side collision.
- As a countermeasure against an interruption in the power supply in the event of a collision involving the vehicle, a backup power supply which consists of a power supply capacitor and a voltage boost circuit (DC-DC Converter) is provided in the airbag sensor assembly.

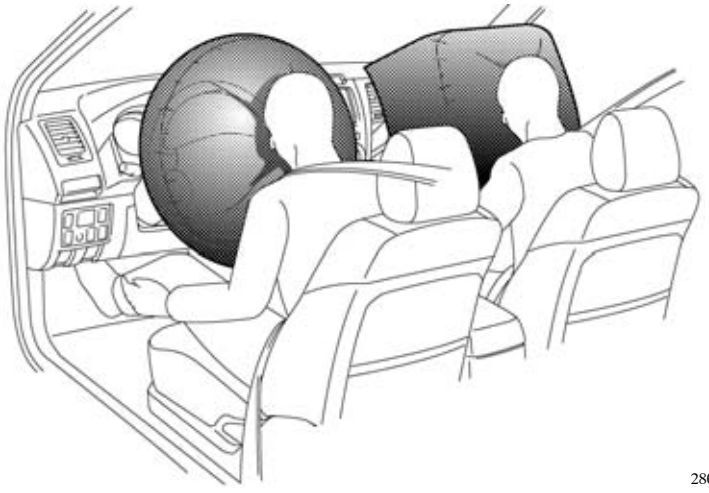


280BE40

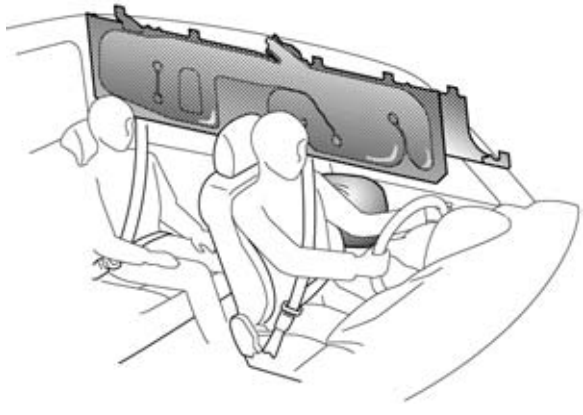

00LBE18Y

LHD Model

▶ Wiring Diagram ◀

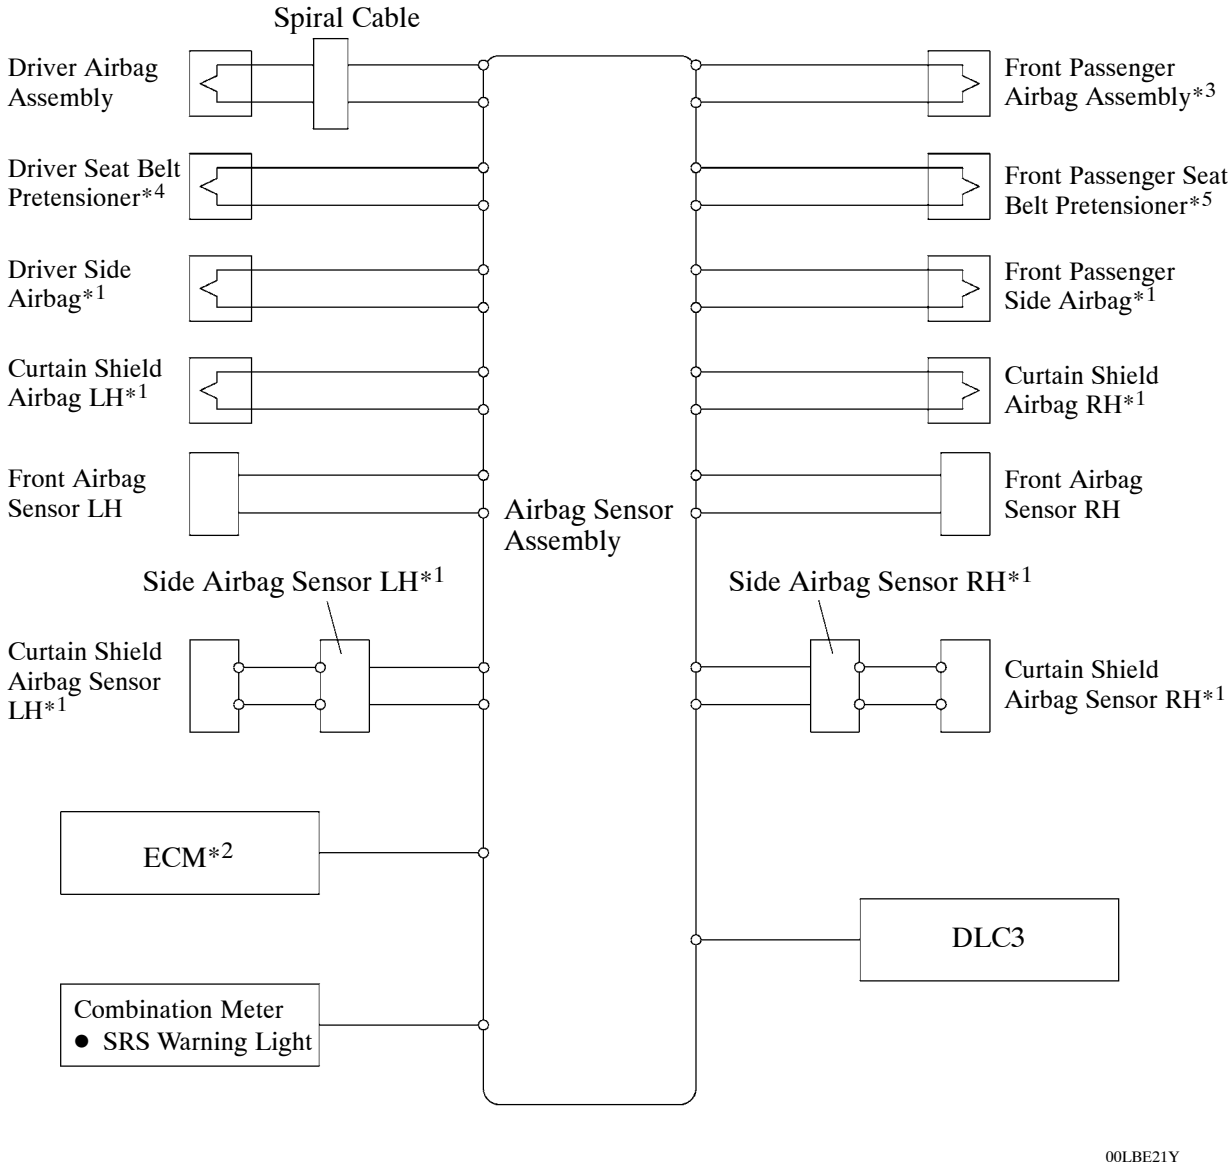

*1: Double cab models with driver, front passenger, side and curtain shield airbags
*2: Except models with diesel engine
*3: Models with front passenger airbag
*4: Models with driver seat belt pretensioner
*5: Models with driver and passenger seat belt pretensioners