
■AIRBAG FOR FRONTAL COLLISION

1. General

There are 2 airbags for frontal collisions: driver and front passenger. These airbags deploy simultaneously.

▶ System Operation ◀

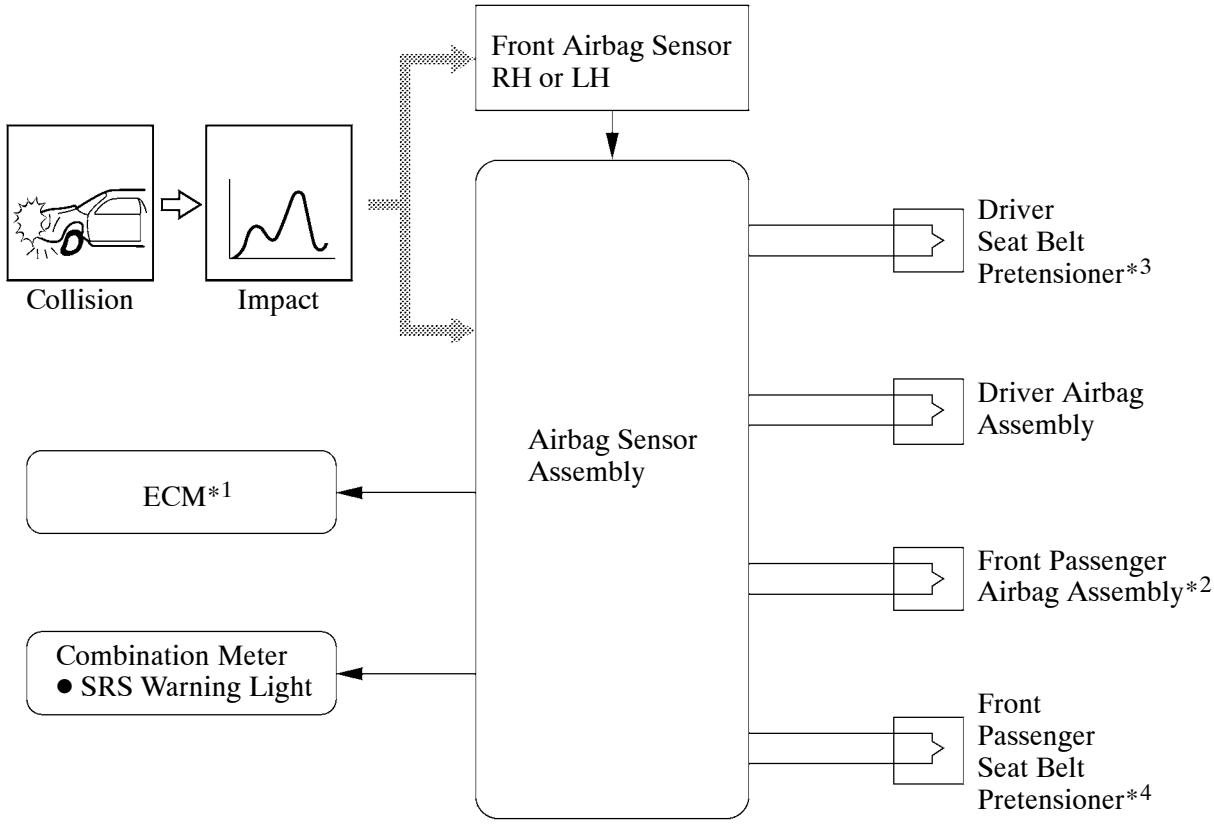

00LBE22Y

*1: Except models with diesel engine
*2: Models with front passenger airbag
*3: Models with driver seat belt pretensioner
*4: Models with driver and front passenger seat belt pretensioners

2. Front Airbag Sensor

The front airbag sensor uses an electrical type deceleration sensor. Based on the deceleration of the vehicle during a front collision, a distortion is created in the sensor and converted into an electrical signal. Accordingly, the extent of the initial collision can be detected in detail.