
SEAT HEATER

■ DESCRIPTION

- The seat heaters for the driver and front passenger seats are available as optional equipment on the LHD models for Europe.
- The seat heater switch is located in the center console.
- Whether the seat heater is on or off can be determined by the illumination of the indicator light of the seat heater switch.

▶ System Diagram ◀

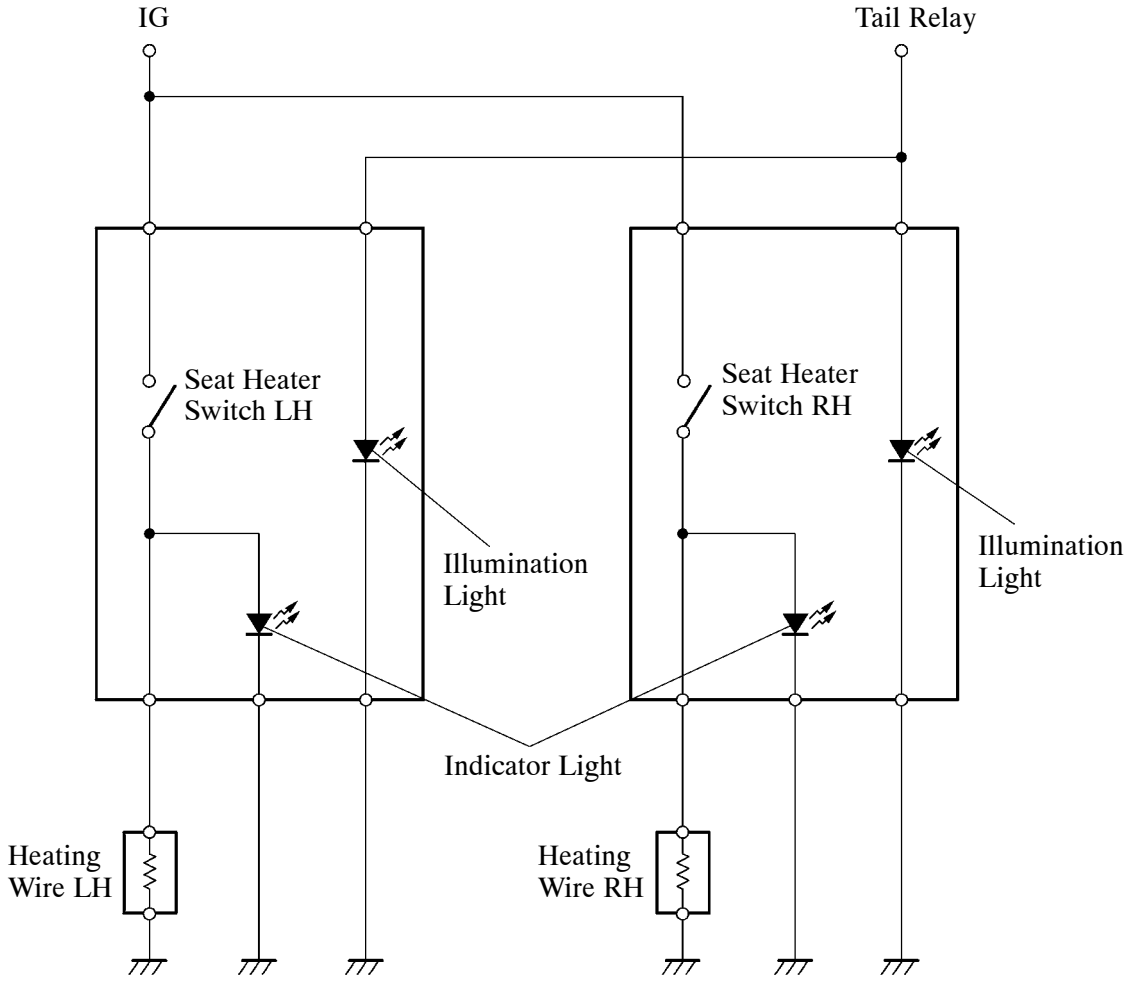

00LBE28Y