ENHANCEMENT OF PRODUCT APPEAL

■ SEAT BELT

1. General

Seat belts are provided with the function listed below:

▶ Thailand ◀

Body Type	Seat		Seat Belt Type	Remarks
Single	Driver Seat		3-point ELR*1	—
	Passenger Seat	Outer	3-point ELR*1	—
		Center	2-point NR*2, —*3	—
Extra	Driver & Front Passenger Seat		3-point ELR*1 × 2	—
	Rear Seat		—	Seat Belt Anchor Only
Smart	Driver & Passenger Seat		3-point ELR*1 × 2	—
Double	Driver & Front Passenger Seat		3-point ELR*1 × 2	—
	Rear Seat	Outer	3-point ELR*1 × 2	—
		Center	2-point NR*2	—

*1: Emergency Locking Retractor
*2: No Retractor
*3: Models with separate type front seat

▶ Australia ◀

Body Type	Seat		Seat Belt Type	Remarks
Single	Driver Seat		3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter
	Passenger Seat	Outer	3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter
		Center	2-point NR*2, —*3	—
Extra	Driver & Front Passenger Seat		3-point ELR*1 × 2	Electrical Sensing Type Pretensioner & Force Limiter
	Rear Seat		3-point ELR*1 × 2	—
Double	Driver Seat		3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter
	Front Passenger Seat	Outer	3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter
		Center	2-point NR*2, —*3	—
	Rear Seat	Outer	3-point ELR*1 × 2	—
		Center	2-point NR*2	—

*1: Emergency Locking Retractor
*2: No Retractor
*3: Models with separate type front seat

▶ G.C.C. Countries ◀

Body Type	Seat		Seat Belt Type	Remarks
Single	Driver Seat		3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*4
	Passenger Seat	Outer	3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*4
		Center	2-point NR*2, —*3	—
Double	Driver Seat		3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*4
	Front Passenger Seat	Outer	3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*4
		Center	2-point NR*2, —*3	—
	Rear Seat	Outer	3-point ELR*1 × 2	—
		Center	2-point NR*2	—

*1: Emergency Locking Retractor
*2: No Retractor
*3: Models with separate type front seat
*4: Models with SRS airbag system

▶ Philippines ◀

Body Type	Seat		Seat Belt Type	Remarks
Double	Driver & Front Passenger Seat		3-point ELR*1 × 2	—
	Rear Seat	Outer	3-point ELR*1 × 2	—
		Center	2-point NR*2	—

*1: Emergency Locking Retractor
*2: No Retractor

▶ South Africa ◀

Body Type	Seat		Seat Belt Type	Remarks
Single	Driver Seat		3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*4
	Passenger Seat	Outer	3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*4
		Center	2-point NR*2, —*3	—
Double	Driver Seat		3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*4
	Front Passenger Seat	Outer	3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*4
		Center	2-point NR*2, —*3	—
	Rear Seat	Outer	3-point ELR*1 × 2	—
		Center	2-point NR*2	—

*1: Emergency Locking Retractor
*2: No Retractor
*3: Models with separate type front seat
*4: Models with SRS airbag system

▶ Europe ◀

Body Type	Seat		Seat Belt Type	Remarks
Single	Driver Seat		3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*3, 4
	Passenger Seat		3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*4
Extra	Driver Seat		3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*3, 4
	Passenger Seat		3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*4
	Rear Seat		3-point ELR*1 × 2, —*5	—
Double	Driver Seat		3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*3, 4
	Front Passenger Seat	Outer	3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*4
	Rear Seat	Outer	3-point ELR*1 × 2	—
		Center	2-point NR*2	—

*1: Emergency Locking Retractor
*2: No Retractor
*3: Models with driver SRS airbag system
*4: Models with driver and front passenger SRS airbag system
*5: Models without rear seat

▶ General Countries ◀

Body Type	Seat		Seat Belt Type	Remarks
Single	Driver Seat		3-point ELR*1	—
	Passenger Seat	Outer	3-point ELR*1	—
		Center	2-point NR*2, —*3	—
Extra	Driver & Front Passenger Seat		3-point ELR*1 × 2	—
	Rear Seat		3-point ELR*1 × 2	—
Double	Driver Seat		3-point ELR*1	—
	Front Passenger Seat	Outer	3-point ELR*1	—
		Center	2-point NR*2, —*3	—
	Rear Seat	Outer	3-point ELR*1 × 2	—
		Center	2-point NR*2	—

*1: Emergency Locking Retractor
*2: No Retractor
*3: Models with separate type front seat

▶ Central and South America ◀

Body Type	Seat		Seat Belt Type	Remarks
Single	Driver Seat		3-point ELR*1	—
	Passenger Seat	Outer	3-point ELR*1	—
		Center	2-point NR*2, —*3	—
Double	Driver & Front Passenger Seat		3-point ELR*1 × 2	—
	Rear Seat	Outer	3-point ELR*1 × 2	—
		Center	2-point NR*2	—

*1: Emergency Locking Retractor
*2: No Retractor
*3: Models with separate type front seat

▶ Malaysia, ANCOM ◀

Body Type	Seat		Seat Belt Type	Remarks
Single	Driver Seat		3-point ELR*1	—
	Passenger Seat	Outer	3-point ELR*1	—
		Center	2-point NR*2	—
Double	Driver & Front Passenger Seat		3-point ELR*1	—
	Rear Seat	Outer	3-point ELR*1 × 2	—
		Center	2-point NR*2	—

*1: Emergency Locking Retractor
*2: No Retractor


▶ Indonesia ◀

Body Type	Seat	Seat Belt Type	Remarks
Single	Driver & Passenger Seat	3-point ELR*1 × 2	—

*1: Emergency Locking Retractor

2. Pretensioner and Force Limiter

In accordance with the ignition signal from the airbag sensor assembly, the seat belt pretensioner activates simultaneously with the deployment of SRS airbag for the driver and front passenger.
In the beginning of the collision if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.

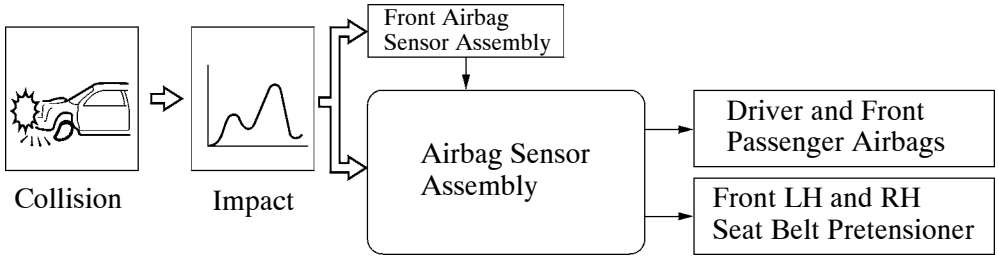

255BO24